


## ANNEX II. JUMPERS AND SWITCHES

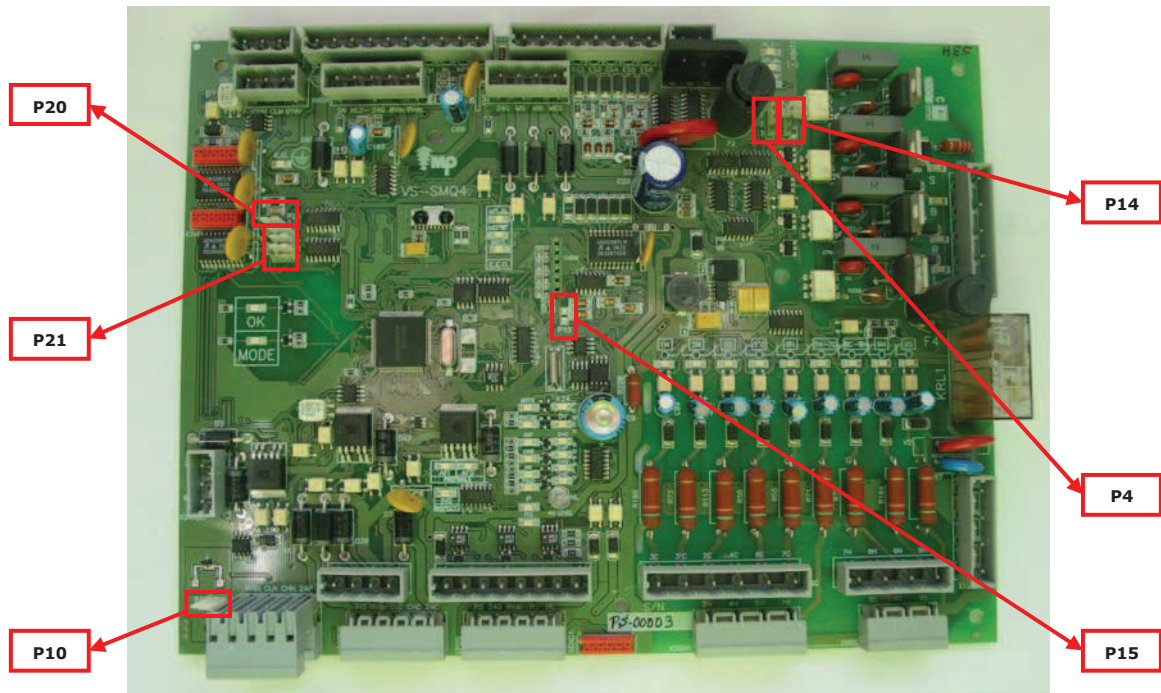

### MACHINES ROOM

Functions of different jumpers are following:

P4 : Speed Fast/Slow Locking:

- No Connection -> Slow not Enable
- 1-2 -> Fast/Slow not Locking
- 2-3 -> Slow Locked with Fast

P14 : Inspection Range Limitation

- No Connection -> On inspection with Outer Signal
- 2-3 -> On inspection with High Levels

P15 : Inspection Speed Control

- No Connection -> By defect
- 1-2 -> On Inspection Fast Speed Allowed

P10 : MacBus Terminal Resistance

- No Connection -> No Terminal Resistance. 2 Verticals Option.
- 1-2 -> Terminal Resistance. 1 Vertical Option.


P21 : Output Control Reset 3VFMAC-DSP

- No Connection -> Not enable Variator Reset Signal.
- 1-2 -> Outer Signal / XMLE8 Connector ( Xpos)
- 2-3 -> Microprocessor Control

P20 : Control 2 Speed Bench

- No Connection -> Not Enable 2 Speed Bench
- A -> Switch with level 538 Signal
- B -> Switch controlled by Microprocessor
- C -> Switch Level Signal

### OLEO BOARD

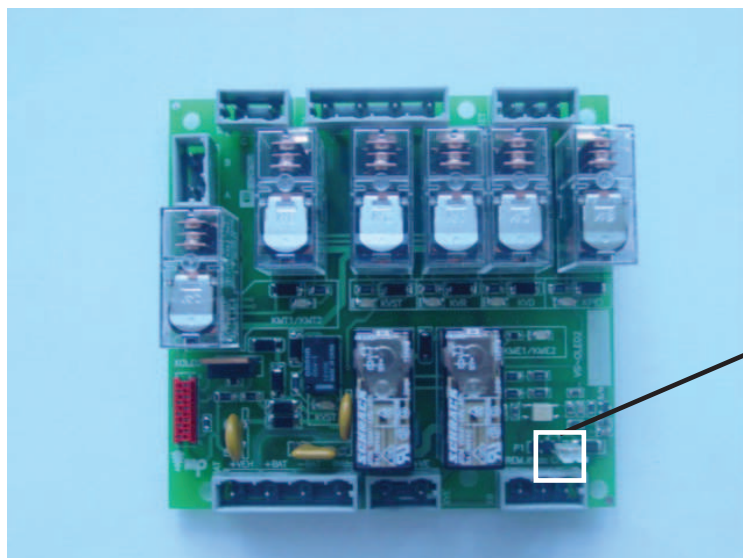


JUMPERS

This jumpers indicate lift stop level when emergency automatic manoeuvre is:

- 1-2 \_\_\_ Immediately lower level
- 2-3 \_\_\_ Level indicate by emergency

### OPERATOR BOARD

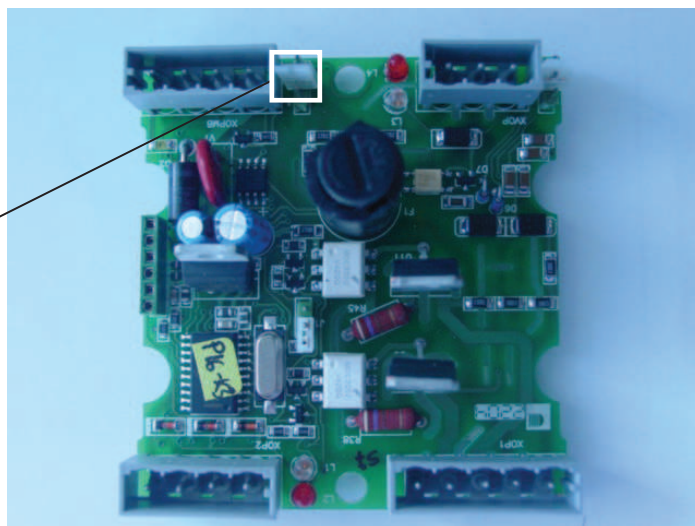


JUMPERS

This jumpers allow to select operator number, according to the next logic:


- Nothing \_\_\_ operator 1
- 1-2 \_\_\_ operator 2
- 2-3 \_\_\_ operator 3

**MASTER**

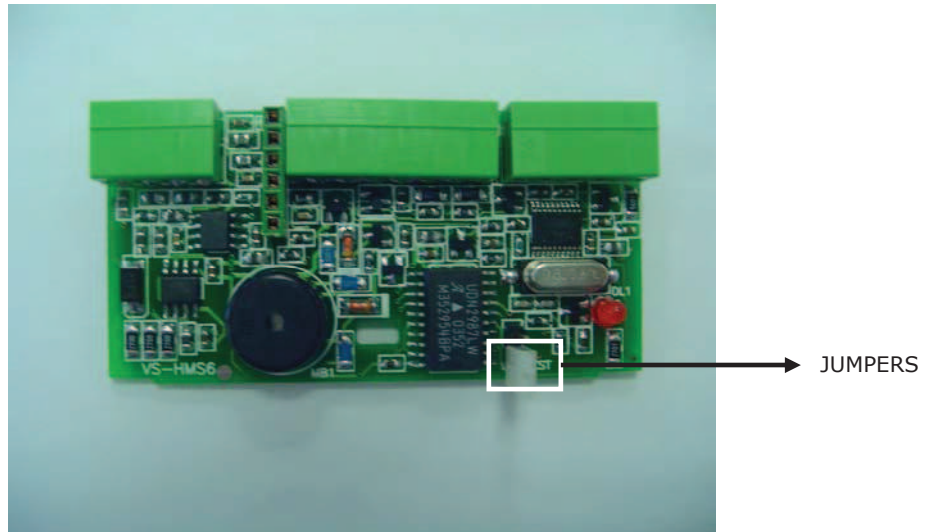

P5: Configured Function. See point 5.5.3.3. from via series manual.  
On normal mode, it is necessary to take both jumpers off, that is, put them only over one pin.


**CAR/FLOOR/LINTEL DISPLAY**

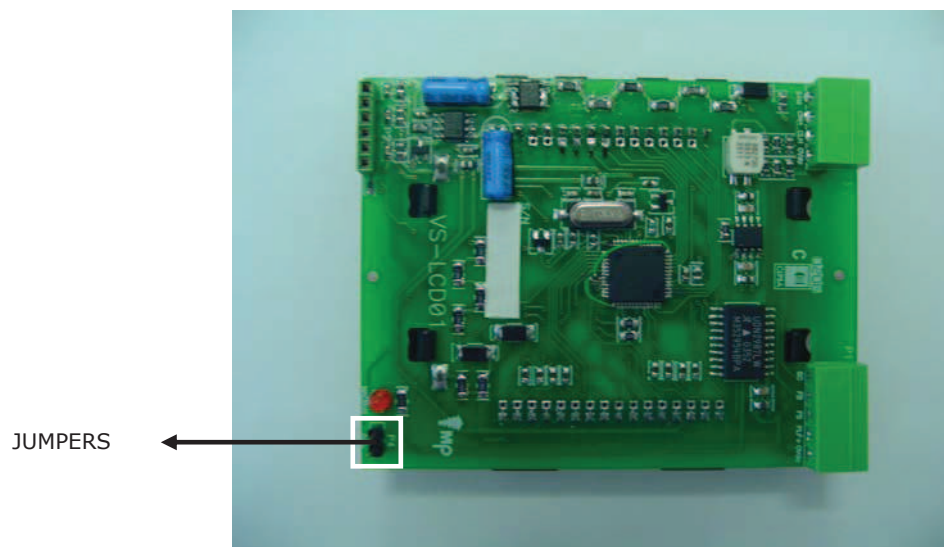

This jumpers group show which lift is associated, according to the next logic:

Nothing\_\_lift 1  
1-2\_\_\_\_lift 2

### EXTENDED MASTER

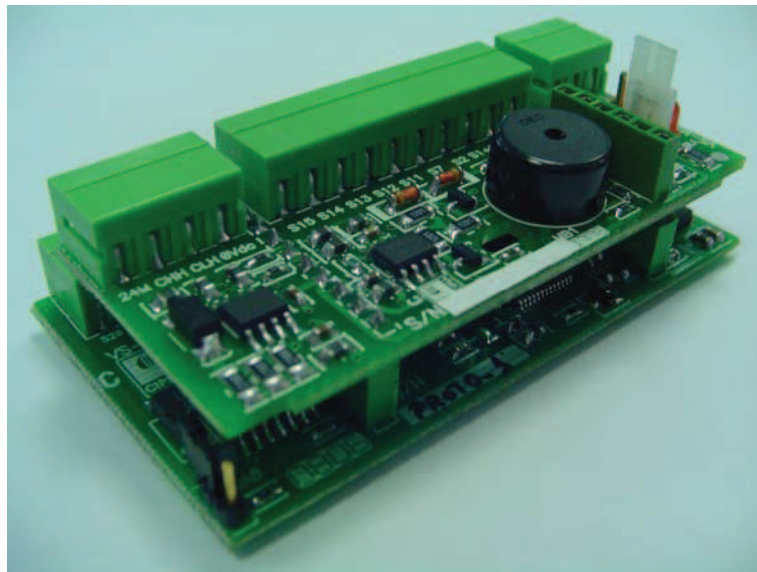

Jumper CAB on: Select "car mode"


Jumper CAB off: Select "shaft mode"

Jumper TEST

P5: Configured Function. See point 5.5.3.3. from via series manual.

On normal mode, it is necessary to take both jumpers off, that is, put them only over one pin.

### PHONES CONNECTIONS BOARD

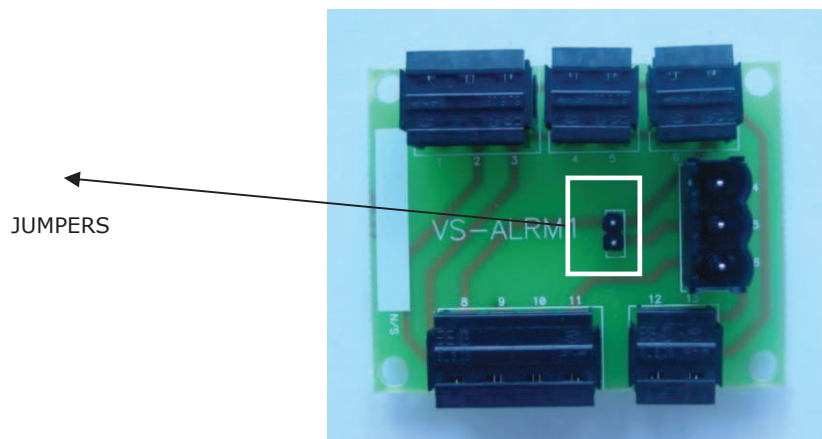

This jumper allow to activate or deactivate alarms leaked:

- With jumper: Activate alarm leaked
- Without jumper: Deactivate alarm leaked