

# OpenBlocks IoT Family Data Handling Guide



**Ver. 3.3.0**

**Plat'Home Co., Ltd.**

## ■ About trademarks

- Company and product names mentioned in this Data Handling Guide may be trademarks or registered trademarks of their respective companies.
- Product names and other proper nouns in this Data Handling Guide are trademarks or registered trademarks of their respective companies.

## ■ Before using this product

- No reproduction of this material is allowed without written permission of Plat'Home Co., Ltd.
- Content and information contained within this material may be changed or updated without prior notice.
- We consistently aim to keep the content in this material as precise as possible. However, should any errors in descriptions, etc. be noticed, please contact Plat'Home Co., Ltd. The latest version of this material can be downloaded from our website.  
While using this product, please be aware that it is not designed or assumed for use in fields where there is a risk to life.
- Regardless of the aforementioned, in no event will Plat'Home be liable for any special, incidental, indirect or consequential damage arising out of use of this product, including but not limited to damage to profits or loss.

## Table of contents

Chapter 1 General .....	6
Chapter 2 IoT data control functions .....	7
2-1. Basic setup of service functions .....	8
2-2. Installing IoT data control packages .....	8
2-3. Application setup for IoT data control .....	9
<b>PD Handler HVSMC</b> : Application to acquire data based on the specification of ECHONET Lite and AIF from the high voltage smart electric power meter (B route). This application is domestic use in Japan only .....	11
2-4. Send/receive setup (PD Repeater) .....	13
2-4-1. Tx/Rx settings .....	13
2-4-2. Settings for individual Tx/Rx destinations .....	15
2-4-2-1. Local(lo) .....	15
2-4-2-2. PD Exchange(pd_ex) .....	16
2-4-2-3. MS Azure IoT Hub(iothub) .....	17
2-4-2-4. MS Azure IoT Hub[Websocket] (iothub_ws) .....	20
2-4-2-5. AWS IoT Core(awsiot) .....	22
2-4-2-6. AWS IoT Core[Websocket](awsiot_ws) .....	24
2-4-2-7. Google IoT Core(iotcore) .....	26
2-4-2-8. Watson IoT for Gateway(w4g) .....	28
2-4-2-9. MS Azure Event hubs(eventhub) .....	30
2-4-2-10. Amazon Kinesis(kinesis) .....	31
2-4-2-11. Watson IoT for Device(w4d) .....	32
2-4-2-12. Toami for DOCOMO(t4d) .....	34
2-4-2-13. KDDI IoT Cloud Standard(kddi_std) .....	38
2-4-2-14. Web server of Plat'Home's original specifications .....	39
2-4-2-15. WEB server(web) .....	40
2-4-2-16. MQTT server(mqtt) .....	43
2-4-2-17. TCP(ltcp) .....	46
2-4-2-18. Domain socket(lsocket) .....	47
2-4-3. Beacon data transmission settings .....	48
2-4-4. Setting for BLE device .....	52
2-4-5. Setting for EnOcean device (For domestic use in Japan only) .....	54
2-4-6. Setting for Wi-SUN B Route device(For domestic use in Japan only) .....	56
2-4-7. Setting for Modbus client device .....	58
2-4-8. Setting for Modbus server device .....	65

2-4-9. Setting for High Voltage Smart Meter (B-route). (For domestic use in Japan only)	69
2-4-10. Setting for User defined device	75
2-5. Downstream control	77
2-5-1. Overview of downstream control	77
2-5-2. Downstream messages of PD Repeater	78
2-5-3. Downstream control of Modbus client/server	81
2-5-3-1. Modbus client	83
2-5-3-2. Modbus server	86
2-5-4. PD Agent	89
2-5-4.1. Registration of user-defined device and setup of sender and destination	89
2-5-4-1. PD Agent setup	90
2-5-4-2. PD Agent setup and control messages	92
2-5-4-3. Succession to environmental variables	94
2-5-4-4. Response messages	95
2-5-5. Message syntax depending on device control method	96
2-5-5. Azure IoT Hub Message syntax	96
2-5-5-2. AWS IoT Message syntax	97
2-6. Log of IoT data control tool	98
2-7. Confirm sensor data	99
Chapter 3 Customization	100
3-1 Independently developed data collection application	100
3-1-1 Registration of user-defined device and set up of sender and destination	100
3-1-2 Writing data to PD Repeater	101
3-2. Independently developed downstream control application	103
3-2-1. Registration of user-defined device and setup of sender and destination	103
3-2-2. Writing data from PD Repeater	103
3-3 Start/stop control of independently developed applications	104
3-3-1. Registration of applications	104
3-3-2. Designating script to be used by the application	104
3-3-3. deb package	105
3-4. Realizing complex configurations	106
3-4-1. PD Broker	110
3-5. Lua expansion	112
3-5-1. BLE Lua	112
3-5-2. EnOcean Lua	113

Chapter 4 Supplementary information .....	114
4-1. Amount of transmitted data and line speed.....	114
4-2. Write data format to PD Repeater .....	114
4-3. Data write size to PD Repeater .....	115
4-4. Buffer size of PD Repeater.....	115
4-5. Resending at the time of PD Repeater error.....	115
4-6. About the configuration file of an independently developed application .....	115
4-7. Method to send data from PD Repeater to Node-RED.....	116
4-8. Beacon added as a BLE device .....	116
4-9. Data transmission to web server .....	117
4-10. Handler config user settings.....	117
4-11. Web server of Plat'Home's original specifications (PD Web).....	117
4-11-1. Overview of PD Web .....	117
4-11-2. HTTP header of PD Web.....	119
4-11-3. Token of PD Web.....	120
4-11.4. Installation example of web server (PHP script).....	121
4-12. Data transmission to IoT Hub/IoT Edge .....	125
4-13. Relation of devices and applications in PD Exchange.....	127
4-14. About the connection protocol of each cloud .....	128


# Chapter 1 General

This Guide describes the data handling functions used by the OpenBlocks IoT Family. For setup, a client device (PC, smartphone, tablet PC, etc.) that can use a web browser is required. For the web user interface (hereinafter referred to as "WEB UI"), refer to the OpenBlocks IoT Family WEB UI Set-up Guide.


## Chapter 2 IoT data control functions

The IoT data control function of the OpenBlocks IoT Family supports a collection function that acquires data from BLE or UART and other sensor devices, in addition to PLC equipment supporting Modbus, and sends information to clouds, etc. and a downstream control function to receive messages from clouds, etc., while controlling PLC equipment supporting Modbus, etc. Refer to our website for all supported sensor devices, etc.

The collection function collects data from devices and sends information to cloud destinations, etc. As data is stored in the OpenBlocks IoT Family as a temporary buffer, data can be safely sent due to the fact that even if a network problem occurs, resending is possible.

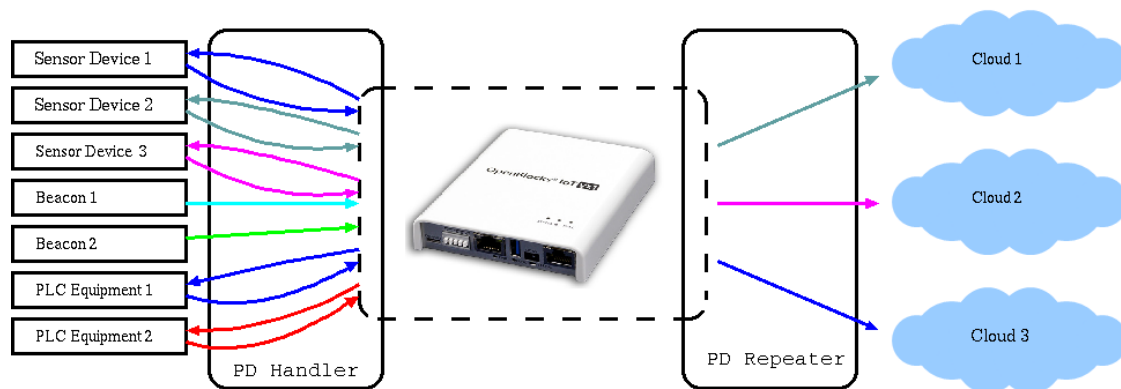

The downstream control function receives control messages from clouds and can control PLC supporting Modbus, etc.

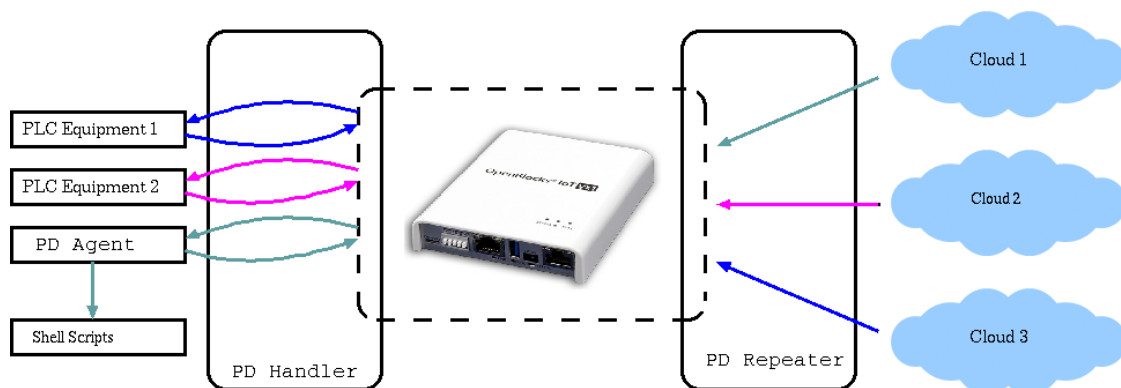

To use the IoT data control function, it is necessary to perform the basic setup for service functions and also install the IoT data control package.

## 2-1. Basic setup of service functions

To use the IoT data control function, it is necessary to choose the **[Service]-[Basic]** tab in WEB UI and carry out control of BT interface and registration of various devices.


For basic setup of the service function, refer to Chapter 5 of the OpenBlocks IoT Family WEB UI Set-up Guide.

## 2-2. Installing IoT data control packages

To use the IoT data control function, it is necessary to choose the **[Maintenance]-[Enhancements]** tab and install the IoT data control package.

\*IoT data control can work in conjunction with Node-RED. To use this control in conjunction with Node-RED, install Node-RED, too.

\*IoT data control can also send data to Azure IoT Edge. To send data to Azure IoT Edge in the same OpenBlocks, install Azure IoT Edge, too.

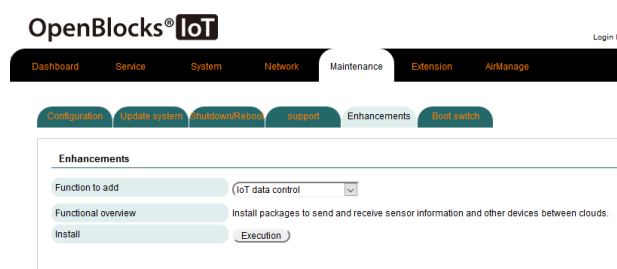


Choose the “IoT data control” in pull-down menu of the **[Maintenance]-[Enhancements]** tab and click the “Execution” button. If the IoT data control package has already been installed, the “IoT data control” will be not displayed on pull-down menu.



## 2-3. Application setup for IoT data control

If the IoT data control package has been installed, the link to the **IoT data** will be displayed when choosing the **[Service]-[Basic]** tab.

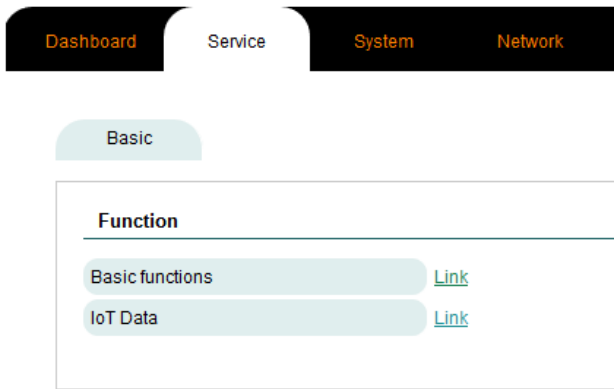

Choose the **[Service]** tab and then click on the link to the **IoT Data**. The root tab will switch to a combination of the **[Dashboard]**, **[Basic]**, **[IoT Data]**.

\*Links shown in the **[Service]-[Basic]** tab of will differ, depending on packages installed by the **[Maintenance]-[Enhancements]** tab.

Choose the **[IoT Data]-[App Setting]** tab to show the App settings screen. Control the startup of applications to use as well as setting up the config setting mode.

\*Example of screen when "Display the default application start-up control setting" check box is checked

Screen shot on the left shows the default state of the **[IoT Data]- [App settings]** tab.

When the "Display the default application start-up control setting" check box is checked, the Default Application Start-up control setup menu will be displayed. To enable startup control of individual applications, it is necessary to set default settings to "Enable".

When the "Display the config" check box is checked, the Configuration Settings menu will be displayed to switch between using the configuration set up by this WEB UI or that defined by the user.

The "Bulk Enable" and "Bulk Disable" buttons will set all settings to "Enable" or "Disable".

**PD Repeater** : Application to send/receive data or control messages to/from cloud.

**PD Agent** : Application that receives control message from cloud via the PD Repeater and executes a preset shell script or execution object.

**PD Broker** : Application that distributes data or control messages to multiple applications.

**PD Handler BLE** : Application that receives data from BT device sensors or beacons. In the Use Target pull-down menu, it is possible to choose a C-language or a Java script version. The former offers a higher performance but it only supports beacon and connection-less BLE sensors.

**PD Handler UART** : Application that receives data from URAT connection devices. The Use Target pull-down menu supports the EnOcean.

**PD Handler MODBUS Client** : Application

Dashboard Basic IoT Data

App settings IoT/Rt settings Log PD Broker PD Agent PD Exchange BLE Lua End

Application Start-up control ☐ Display the default application start-up control settings menu ☒ Display the configuration settings menu

Bulk Enable Bulk Disable

PD Repeater ☐ Enable ☒ Disable

PD Agent ☐ Enable ☒ Disable

PD Broker ☐ Enable ☒ Disable

PD Handler BLE ☐ Enable ☒ Disable

Use target pd-handler-ble-c

PD Handler UART ☐ Enable ☒ Disable

Use target EnOcean

PD Handler MODBUS Client ☐ Enable ☒ Disable

PD Handler MODBUS Server ☐ Enable ☒ Disable

PD Handler HVSMC ☐ Enable ☒ Disable

Application automatic restart setting

Application automatic restart setting ☐ Enable ☒ Disable

Configuration Settings

PD Repeater ☒ The system configuration ☐ User-defined configuration

PD Agent ☒ The system configuration ☐ User-defined configuration

PD Broker ☒ The system configuration ☐ User-defined configuration

PD Handler BLE ☒ The system configuration ☐ User-defined configuration

PD Handler UART ☒ The system configuration ☐ User-defined configuration

PD Handler MODBUS Client ☒ The system configuration ☐ User-defined configuration

PD Handler MODBUS Server ☒ The system configuration ☐ User-defined configuration

PD Handler HVSMC ☒ The system configuration ☐ User-defined configuration

Operation

Save

\*Example of screen when **Display the config** check box is checked

that reads/writes the register of PLC equipment using the MODBUS protocol.

**PD Handler MODBUS Server** : Application that receives connections from PLC equipment using the MODBUS protocol.

**PD Handler HVSMC** : Application to acquire data based on the specification of ECHONET Lite and AIF from the high voltage smart electric power meter (B route). This application is domestic use in Japan only.

**Application automatic restart setting** is a function to automatically restart applications periodically.

It is used when the amount of memory used gradually increases with applications etc developed independently by users.

Application automatic restart setting

Application automatic restart setting

☒ Enable ☐ Disable

Restart trigger

Every day ▼

Restart execution time

00 ▼ : 00 ▼

\*Restert trigger to Every day.

Application automatic restart setting

Application automatic restart setting

☒ Enable ☐ Disable

Restart trigger

Specify day of the week ▼

Specify day of the week

☐ Sun. ☐ Mon. ☐ Tue. ☐ Wed.  
☐ Thu. ☐ Fri. ☐ Sat.

Restart execution time

00 ▼ : 00 ▼

\*Restert trigger to Specify day of week.

Application automatic restart setting

Application automatic restart setting

☒ Enable ☐ Disable

Restart trigger

Designation of the Date ▼

Designate date

☐ 1st ☐ 2nd ☐ 3rd ☐ 4th ☐ 5th ☐ 6th ☐ 7th ☐ 8th ☐ 9th ☐ 10th  
☐ 11th ☐ 12th ☐ 13th ☐ 14th ☐ 15th ☐ 16th ☐ 17th ☐ 18th ☐ 19th ☐ 20th  
☐ 21st ☐ 22nd ☐ 23rd ☐ 24th ☐ 25th ☐ 26th ☐ 27th ☐ 28th ☐ 29th ☐ 30th  
☐ 31st

Restart execution time

00 ▼ : 00 ▼

\*Restert trigger to Designation of the date.

**Application automatic restart setting**

**Application automatic restart setting** : To use this function, choose "Enable." If not, choose "Disable."

**Restart trigger** : Select either **Every day**, **Specify day of the week** or **Designation of the date**.

**Specify day of the week** : Specify the date of the week on which application restart is executed.

Multiple days can be specified.

**Designate date** : Specify the date on which application restart is executed.

Multiple days can be specified.

**Restart exection time** : Specify the time to restart application.

## 2-4. Send/receive setup (PD Repeater)

Use the **[IoT Data]-[Tx/Rx setting]** tab to set up data destination or control message sender.

Settings for transmission/reception include those independent from individual devices set use the **[IoT Data]-[Tx/Rx setting]** tab and those for individual devices set by the menu for their settings.

### 2-4-1. Tx/Rx settings

Use the **[IoT Data]-[Tx/Rx setting]** tab to select transmission (Tx)/reception (Rx) destinations and make settings independent of individual devices. Apart from local one (Io), it is possible to choose up to four Tx/Rx destinations.

Tx/Rx setting	
Local(Io)	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
PD Exchange(pd_ex)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
MS Azure IoT Hub(iothub)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
IoT Hub[WebSocket](iothub_ws)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
AWS IoT(awsiot)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
AWS IoT[WebSocket](awsiot_ws)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Google IoT Core(iotcore)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Watson IoT for Gateway(w4g)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
MS Azure Event hubs(eventhub)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Amazon Kinesis(kinesis)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Watson IoT for Device(w4d)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Toami for DOCOMO(t4d)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
KDDI IoT cloud Standard(kddi_std)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
PD Web(pd_web)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
WEB server(web)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
MQTT server(mqtt)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
TCP socket(ltcp)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
UNIX domain socket(lsocket)	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

**Local(Io)** : Outputs the JSON table of BLE device and temperature/humidity graph to **[IoT Data]-[Data Display]** tab.

**PD Exchange(pd\_ex)** : Selects PD Exchange as Tx/Rx destinations.

**MS Azure IoT Hub(iothub)** : Selects Microsoft Azure IoT Hub as Tx/Rx destinations. For transmission to Azure IoT Edge, choose this item.

**MS Azure IoT Hub[WebSocket](iothub\_ws)** : Selects Microsoft Azure IoT Hub with MQTT over Websocket as Tx/Rx destinations.

**AWS IoT(awsiot)** : Selects Amazon AWS IoT as Tx/Rx destinations.

**AWS IoT[WebSocket](awsiot\_ws)** : Selects Amazon AWS IoT with MQTT over Websocket as Tx/Rx destinations.

**Google IoT Core(iotcore)** : Selects Google IoT Core as Tx/Rx

**Watson IoT for Gateway(w4g)** : Selects IBM Watson IoT for Gateway as Tx/Rx destinations.

**MS Azure Event hubs(eventhub)** : Selects Microsoft Azure Event hubs as Tx destination.

**Amazon Kinesis(kinesis)** : Selects Amazon Kinesis as Tx destination.

**Watson IoT for Device(w4d)** : Selects IBM Watson IoT for Device as Tx/Rx destinations..

**Toami for DOCOMO(t4d)** : Selects NTT docomo Toami for DOCOMO as Tx destination.

**KDDI IoT cloud Standard(kddi\_std)** : Selects KDDI IoT Cloud Standard as Tx destination.

**PD Web(pd\_web)** : Selects web server of Plat'Home's original specifications as Tx/Rx destinations.

**WEB server(web)** : Selects general-purpose web server as TX destination.

**MQTT server (mqtt)** : Selects general-purpose MQTT server as Tx/Rx destinations.

**TCP(tcp)**: Selects general-purpose TCP server as Tx/Rx destinations.

**UNIX domain socket(socket)** : Selects UNIX domain socket as Tx destination. This option will only be displayed when Node-RED package has been installed.

 
## 2-4-2. Settings for individual Tx/Rx destinations

This Chapter describes settings, using the **Tx/Rx setting** menu in the **[IoT Data]-[Tx/Rx setting]** tab and an individual device settings menu for each Tx/Rx destination.

### 2-4-2-1. Local(lo)

Outputs a JSON table and temperature/humidity graph of BLE device to the **[IoT Data]-[Data Display]** tab. This option (lo) only applies to a BLE device.


#### ■ Settings at Tx/Rx tab menu



Can only choose "Enable" or "Disable."

**Device bulk configuration** : To enable/disable all TX destination settings where TX destination is set to "Enable" in the BLE device information transmission settings.

#### ■ Settings at BLE device settings menu

 

This option enables a check/uncheck of individual check boxes only.

## 2-4-2-2. PD Exchange(pd\_ex)

### ■ Settings at the Tx/Rx setting menu

PD Exchange(pd\_ex) ☒ Enable ☐ Disable

Interval[sec]

Retention time[sec]

Sub-process restart interval[sec]

Destination URL

Polling Interval[sec]

Secret key

Device ID prefix

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Destination URL:** Sets URL of PD Exchange to be connected.

**Polling Interval[sec]:** Sets interval to read control messages from PD Exchange.

**Secret key:** Sets secret key of PD Exchange account.

**Device ID prefix:** Sets device ID prefix for PD Exchange account.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to "Enable" in individual device setup menu.

### ■ Settings for individual device setting menu

Tx/Rx setting

☐ lo ☒ pd\_ex ☐ iohub ☐ awsiot ☐ iotcore  
☐ w4g ☐ eventhub ☐ kinesis ☐ w4d ☐ nf\_dvhub  
☐ t4d ☐ kddi\_std ☐ pd\_web ☐ web ☐ mqtt  
☐ ltcp ☐ lsocket

Device ID suffix(pd\_ex)

**Device ID suffix(pd\_ex) :** Sets device ID suffix for PD Exchange.



## 2-4-2-3. MS Azure IoT Hub(iothub)

For Azure IoT Edge, please read this section.

### ■ Settings at the **Tx/Rx setting** menu

MS Azure IoT Hub(iothub) ☒ Enable ☐ Disable

Interval[sec]

Retention time[sec]

Sub-process restart interval[sec]

Domain name

IoT Hub name

QoS

Receiving QoS

X.509 root certificate

Communication with the IoT Edge

GW host

Advanced Setting ☒ Show details

Keep Alive Interval[sec]

Clean session

Retain function

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Domain name:** Sets domain name of IoT Hub to be connected.

**IoT Hub name:** Sets name of IoT Hub to be connected.

**QoS:** Sets QoS of the MQTT protocol for data transmission to IoT Hub.

**Receiving QoS:** Sets QoS of the MQTT protocol for control message reception from IoT Hub.

**X.509 root certificate:** Sets path name of root certificate file when X.509 certification is used.

**Communication with IoT Edge:** Selects use or non-use of IoT Edge.

**GW host:** Sets gateway host name of IoT Edge (only when IoT Edge is used).

To send data to IoT Edge running on a different host, specify an IP address or FQDN.

**Advanced setting:** Sets values of the MQTT protocol in detail.

**Keep Alive Interval[sec]:** Sets keep alive interval of MQTT protocol.

**Clean session:** Selects if using the clean session of the MQTT protocol.

**Retain function:** Selects if the retention function of the MQTT protocol is used or not.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to "Enable" in individual device setup menu.

**Insertion / end of topic:** Select whether to insert "/" at the end of MQTT topic when sending data to IoT Edge. (There is no effect when communicating with IoT Hub)

\* As of 2018/09/14, if "/" is added at the end of the topic, data transmission to IoT Hub via IoT Edge fails. Therefore, do not insert it at the end of the topic "/".

## ■ Settings for individual device setting menu

**Device ID(iotHub):** Sets device ID for IoT Hub.

**Module ID(iotHub):** Sets module ID when IoT Edge is used.

**Transparent(iotHub):** Whether IoT Edge operates in transparent mode or not.

**Device key(iotHub):** Sets device key for IoT Hub.

**X.509 Authentication to use(iotHub):** Choose "Enable" to use X.509 authentication.

**Certificate(iotHub):** Sets path name for the certificate file for X.509 authentication.

**Private key(iotHub):** Sets path name for the private key for X.509 authentication.

\* The gateway host name (GW host) and module ID when using IoT Edge use the value of

the IoT Edge environment variable displayed in the **Edge Env.** menu of the **[Service]-[Azure IoT Edge]-[Edge Env.]** tab.


\*For the OpenBlocks IoT Family BX series and the OpenBlocks IoT Family EX series, since Docker or Moby does not work, It can not use the localhost as a GW host of IoT Edge.

\*When IoT Edge 's transparent (transparent mode) is used, the module ID is ignored.

\*Upload the X.509 root certificate, certificate and private key using the **[System]-[File Management]** tab.

## 2-4-2-4. MS Azure IoT Hub[Websocket] (iothub\_ws)

### ■ Settings at the **Tx/Rx setting** menu

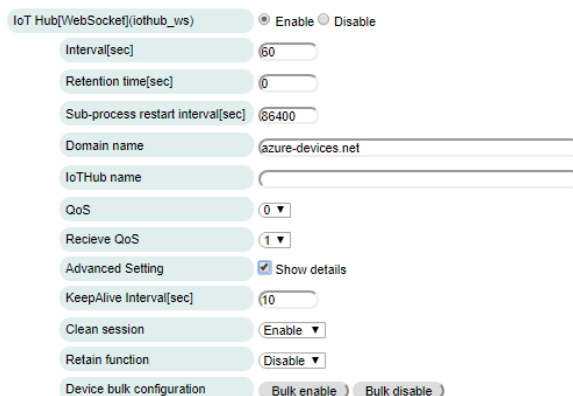

IoT Hub[Websocket](iothub\_ws) ☒ Enable ☐ Disable

Interval[sec]

Retention time[sec]

Sub-process restart interval[sec]

Domain name

IoT Hub name

QoS

Recieve QoS

Advanced Setting ☒ Show details

KeepAlive Interval[sec]

Clean session

Retain function

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Domain name:** Sets domain name of IoT Hub to be connected.

**IoT Hub name:** Sets name of IoT Hub to be connected.

**QoS:** Sets QoS of the MQTT protocol for data transmission to IoT Hub.

**Receiving QoS:** Sets QoS of the MQTT protocol for control message reception from IoT Hub.

**Advanced setting:** Sets values of the MQTT protocol in detail.

**Keep Alive Interval[sec]:** Sets keep alive interval of MQTT protocol.

**Clean session:** Selects if using the clean session of the MQTT protocol.

**Retain function:** Selects if the retention function of the MQTT protocol is used or not.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to "Enable" in individual device setup menu.

## ■ Settings for individual device setting menu

**Tx/Rx setting**

☐ lo ☐ pd\_ex ☐ iotHub ☒ iotHub\_ws ☐ awsIot  
☐ awsIot\_ws ☐ iotcore ☐ w4g ☐ eventHub ☐ kinesis  
☐ w4d ☐ i4d ☐ kddi\_std ☐ pd\_web ☐ web  
☐ mqtt ☐ ltcp ☐ lsocket

**Device ID(iotHub\_ws)**

**Device key(iotHub\_ws)**


**Device ID(iotHub):** Sets device ID for IoT Hub.

**Device key(iotHub):** Sets device key for IoT Hub.

\* IoT Edge is not supported.

## 2-4-2-5. AWS IoT Core(awsiot)

### ■ Settings at the Tx/Rx setting menu

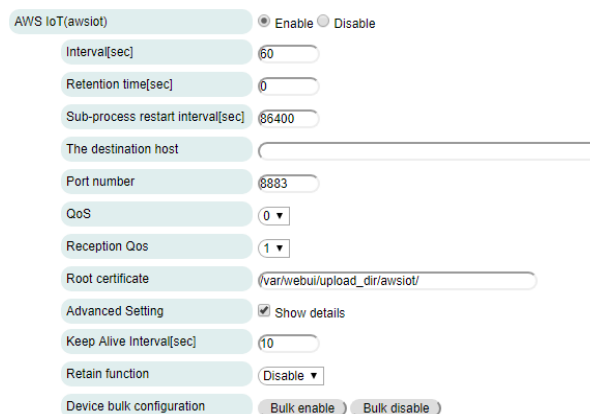

AWS IoT(awsiot) ☒ Enable ☐ Disable

Interval[sec]

Retention time[sec]

Sub-process restart interval[sec]

The destination host

Port number

QoS

Reception QoS

Root certificate

Advanced Setting ☒ Show details

Keep Alive Interval[sec]

Retain function

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Destination host:** Sets host name of AWS IoT to be connected.

**Port number:** Sets port number of AWS IoT to be connected.

**QoS:** Sets QoS of MQTT protocol when data is sent to AWS IoT.

**Reception QoS:** Sets QoS of MQTT protocol when a control message is received from AWS IoT.

**Root certificate:** Sets path name of the root certification file when connected to AWS IoT.

**Advanced setting:** Sets detailed values of MQTT protocol.

**Keep Alive Interval[sec]:** Sets keep alive interval of MQTT protocol.

**Retain function:** Selects if the retention function of the MQTT protocol is used or not.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to "Enable" in individual device setup menu.

## ■ Settings for individual device setting menu

Tx/Rx setting

☐ lo
 ☐ pd\_ex
 ☐ iothub
 ☒ awsiot
 ☐ iotcore
 ☐ w4g
 ☐ eventhub
 ☐ kinesis
 ☐ w4d
 ☐ nt\_dvhub
 ☐ t4d
 ☐ kddi\_std
 ☐ pd\_web
 ☐ web
 ☐ mqtt
 ☐ lftp
 ☐ lsocket

Client ID(awsiot)

Thing Shadows(awsiot)

Topic(awsiot)

Receiving topic(awsiot)

Certificate(awsiot)

Private key(awsiot)

**Client ID(awsiot):** Sets client ID for AWS IoT.

**Thing Name(awsiot):** Specify the thingName to be used for Device Shadows function.

See also chapter 2-5-5-2.

**Topic(awsiot):** Sets topic of MQTT protocol used when data is sent to AWS IoT.

**Receiving topic(awsiot):** Sets topic of MQTT protocol used for waiting and receiving a control message from AWS IoT.


**Certificate(awsiot):** Sets path name for the certificate file to connect to AWS IoT.

**Private key(awsiot):** Sets path name for the private key file to connect to AWS IoT.

\*Upload the root certificate, certificate and private key using the **[System]-[File Management]** tab.

## 2-4-2-6. AWS IoT Core[Websocket](awsiot\_ws)

### ■ Settings at the Tx/Rx setting menu

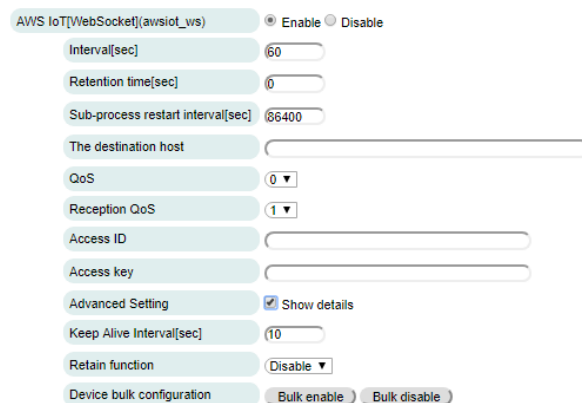

AWS IoT[WebSocket](awsiot\_ws) ☒ Enable ☐ Disable

Interval[sec]

Retention time[sec]

Sub-process restart interval[sec]

The destination host

QoS

Reception QoS

Access ID

Access key

Advanced Setting ☒ Show details

Keep Alive Interval[sec]

Retain function

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Destination host:** Sets host name of AWS IoT to be connected.

**Port number:** Sets port number of AWS IoT to be connected.

**QoS:** Sets QoS of MQTT protocol when data is sent to AWS IoT.

**Reception QoS:** Sets QoS of MQTT protocol when a control message is received from AWS IoT.

**Access ID:** Sets access ID for AWS IoT.

**Access key:** Sets access key for AWS IoT.

**Advanced setting:** Sets detailed values of MQTT protocol.

**Keep Alive Interval[sec]:** Sets keep alive interval of MQTT protocol.

**Retain function:** Selects if the retention function of the MQTT protocol is used or not.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to "Enable" in individual device setup menu.



## ■ Settings for individual device setting menu

Tx/Rx setting

☐ io ☐ pd\_ex ☐ iohub ☐ iohub\_ws ☐ awsiot  
☒ awsiot\_ws ☐ iotcore ☐ w4g ☐ eventhub ☐ kinesis  
☐ w4d ☐ t4d ☐ kddl\_std ☐ pd\_web ☐ web  
☐ mqtt ☐ ltcp ☐ lsocket

Client ID(awsiot\_ws)

ThingName(awsiot\_ws)

Topic(awsiot\_ws)

Receiving topic(awsiot\_ws)

**Client ID(awsiot):** Sets client ID for AWS IoT.

**Thing Name(awsiot):** Specify the thingName to be used for Device Shadows function.


See also chapter 2-5-5-2.

**Topic(awsiot):** Sets topic of MQTT protocol used when data is sent to AWS IoT.

**Receiving topic(awsiot):** Sets topic of MQTT protocol used for waiting and receiving a control message from AWS IoT.

## 2-4-2-7. Google IoT Core(iotcore)

### ■ Settings at the Tx/Rx setting menu

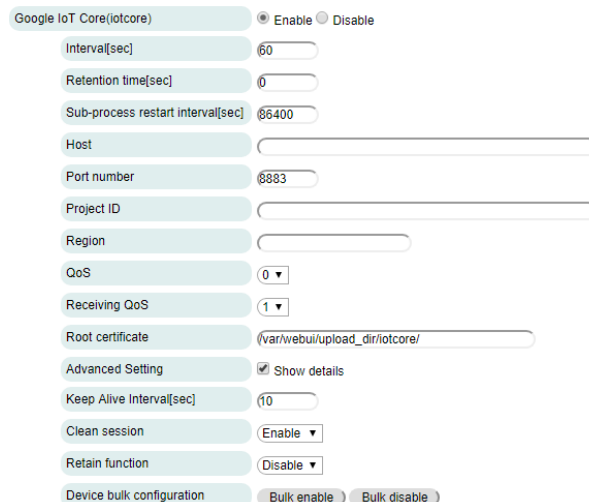

Google IoT Core(iotcore) ☒ Enable ☐ Disable

Interval[sec] 60

Retention time[sec] 0

Sub-process restart interval[sec] 86400

Host

Port number 8883

Project ID

Region

QoS 0 ▼

Receiving QoS 1 ▼

Root certificate /var/webui/upload\_dir/iotcore/

Advanced Setting ☒ Show details

Keep Alive Interval[sec] 10

Clean session Enable ▼

Retain function Disable ▼

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Host:** Sets host name of Google IoT Core to be connected.

**Port number:** Sets port number of Google IoT Core to be connected.

**Project ID:** Sets project ID for Google IoT Core.

**Region:** Sets region code for Google IoT Core.

**QoS:** Sets QoS of MQTT protocol when data is sent to Google IoT Core.

**Receiving QoS:** Sets QoS of MQTT protocol when a control message is received from Google IoT Core.

**Root certificate:** Sets path name of the root certificate file to connect to Google IoT Core.

**Advanced Setting:** Sets detailed values of MQTT protocol.

**Keep Alive Interval[sec]:** Sets keep alive interval of MQTT protocol.

**Clean session:** Selects if using the clean

session of the MQTT protocol.

**Retain function:** Selects if the retention function of the MQTT protocol is used or not.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to “Enable” in individual device setup menu.

## ■ Settings for individual device setting menu

Tx/Rx setting

☐ lo ☐ pd\_ex ☐ iotHub ☐ awsIot ☒ iotcore  
☐ w4g ☐ eventHub ☐ kinesis ☐ w4d ☐ nf\_dvhub  
☐ t4d ☐ kddi\_std ☐ pd\_web ☐ web ☐ mqtt  
☐ ltcp ☐ lsocket

Registry ID(iotcore)

Device ID(iotcore)

JWT algorithm(iotcore) (RS256)

Receiving topic prefix(iotcore)

Certificate(iotcore) (/var/webui/upload\_dir/iotcore/bledev\_0000001/cert.pem)

Private key(iotcore) (/var/webui/upload\_dir/iotcore/bledev\_0000001/private.key)

**Registry ID(iotcore):** Sets client ID for Google IoT Core.

**Device ID(iotcore):** Sets device ID for Google IoT Core.

**JWT algorithm(iotcore):** Selects JWT algorithm to connect to Google IoT Core.


**Certificate(iotcore):** Sets path name of the certificate file to connect to Google IoT Core.

**Private key(iotcore):** Sets path name of the private key file to connect to Google IoT Core.

\*Upload the root certificate, certificate and private key using the **[System]-[File Management]** tab

## 2-4-2-8. Watson IoT for Gateway(w4g)

### ■ Settings at the **Tx/Rx setting** menu

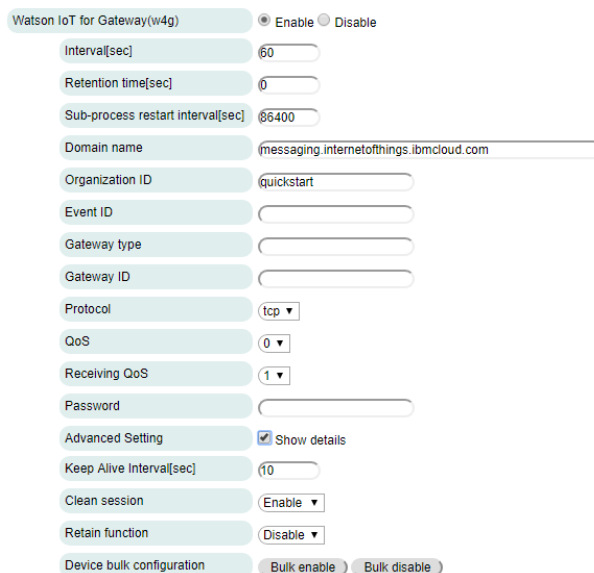

Watson IoT for Gateway(w4g) ☒ Enable ☐ Disable

Interval[sec] 60

Retention time[sec] 0

Sub-process restart interval[sec] 86400

Domain name messaging.internetofthings.ibmcloud.com

Organization ID quickstart

Event ID

Gateway type

Gateway ID

Protocol tcp

QoS 0

Receiving QoS 1

Password

Advanced Setting ☒ Show details

Keep Alive Interval[sec] 10

Clean session Enable

Retain function Disable

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Domain name:** Sets domain name of Watson IoT for Gateway to be connected.

**Organization ID:** Sets organization ID for Watson IoT for Gateway.

**Event ID:** Sets event ID for Watson IoT for Gateway.

**Gateway type:** Sets gateway type of Watson IoT for Gateway.

**Gateway ID:** Sets gateway ID of Watson IoT for Gateway.

**Protocol:** Sets protocol to use for connection (TCP/SSL).

**QoS:** Sets QoS for MQTT protocol to send data to Watson IoT for Gateway.

**Receiving QoS:** Sets QoS of MQTT protocol when a control message is received from Watson IoT for Gateway.

**Password:** Sets password used for connection with Watson IoT for Gateway.

**Trust Store:** Sets path name of the root certificate file to connect to Watson IoT for

Gateway.

**Key Store:** Sets path name of the client certificate file to connect to Watson IoT for Gateway.

**Private key:** Sets path name of the private key file to connect to Watson IoT for Gateway.

**Advanced Setting:** Sets detailed values of MQTT protocol.

**Keep Alive Interval[sec]:** Sets keep alive interval of MQTT protocol.

**Clean session:** Selects if using the clean session of the MQTT protocol.

**Retain function:** Selects if the retention function of the MQTT protocol is used or not.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to “Enable” in individual device setup menu.

#### ■ Settings for individual device setting menu

Tx/Rx setting

☐ lo ☐ pd\_ex ☐ iothub ☐ aws\_iot ☐ iotcore  
☒ w4g ☐ eventhub ☐ kinesis ☐ w4d ☐ inf\_dvhub  
☐ t4d ☐ kddi\_std ☐ pd\_web ☐ web ☐ mqtt  
☐ itcp ☐ lsocket

Device ID(w4g)

Device type(w4g)

**Device ID(w4g):** Sets device ID for Watson IoT for Gateway.

**Device type(w4g):** Sets device type of Watson IoT for Gateway.

\*Upload the Trust Store, Key Store and private key using the **[System]-[File Management]** tab.

## 2-4-2-9. MS Azure Event hubs(eventhub)

### ■ Settings at the Tx/Rx setting menu

MS Azure Event hubs(eventhub) ☒ Enable ☐ Disable

Interval[sec] 60

Retention time[sec] 0

Sub-process restart interval[sec] 86400

Domain name servicebus.windows.net

Name space

port number 5671

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Domain name:** Sets domain name of Event hubs to be connected.

**Name space:** Sets name space of Event hubs.

**Port number:** Sets port number of Event hubs for destination.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to "Enable" in individual device setup menu.

### ■ Settings for individual device setting menu

Tx/Rx setting

☐ lo ☐ pd\_ex ☐ iothub ☐ awsiot ☐ iotcore  
☐ w4g ☒ eventhub ☐ kinesis ☐ w4d ☐ inf\_dvhub  
☐ t4d ☐ kddi\_std ☐ pd\_web ☐ web ☐ mqtt  
☐ ltp ☐ lsocket

Event hubs name

SAS policy(eventhub)

SAS key(eventhub)

**Event hubs name(eventhub):** Sets hub name of Event hubs.

**SAS policy(eventhub):** Sets SAS policy of Event hubs.

**SAS key(eventhub):** Sets SAS key of Event hubs.

## 2-4-2-10. Amazon Kinesis(kinesis)

### ■ Settings at the Tx/Rx setting menu

Amazon Kinesis(kinesis) ☒ Enable ☐ Disable

Interval[sec]

Retention time[sec]

Sub-process restart interval[sec]

Domain name

Region

Access ID

access key

Stream name

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Domain name:** Sets domain name for Amazon Kinesis of the destination.

**Region:** Sets region code for Amazon Kinesis of the destination.

**Access ID:** Sets access ID for Amazon Kinesis.

**Access key:** Sets access key for Amazon Kinesis.

**Stream name:** Sets stream name for Amazon Kinesis.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to "Enable" in individual device setup menu.

### ■ Settings for individual device setting menu

Tx/Rx setting

☒ io ☒ pd\_ex ☒ iothub ☒ awsiot ☒ iotcore

☒ w4g ☒ eventhub ☒ kinesis ☒ w4d ☒ nf\_dvhub

☒ t4d ☒ kddi\_std ☒ pd\_web ☒ web ☒ mqtt

☒ ltp ☒ lsocket

No setting item is available other than checking check boxes in Tx/Rx setting.

## 2-4-2-11. Watson IoT for Device(w4d)

### ■ Settings at the **Tx/Rx setting** menu

Watson IoT for Device(w4d) ☒ Enable ☐ Disable

Interval[sec] 60

Retention time[sec] 0

Sub-process restart interval[sec] 86400

Domain name messaging.internetofthings.ibmcloud.com

Organization ID quickstart

Event ID

Protocol tcp ▼

QoS 0 ▼

Receiving QoS 1 ▼

Advanced Setting ☒ Show details

Keep Alive Interval[sec] 10

Clean session Enable ▼

Retain function Disable ▼

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Domain name:** Sets domain name of Watson IoT for Device to be connected.

**Organization ID:** Sets organization ID for Watson IoT for Device. To use Quickstart, enter "quickstart" here.

**Event ID:** Sets event ID for Watson IoT for Device.

**Protocol:** Sets protocol to use for connection (TCP/SSL).

**QoS:** Sets QoS for MQTT protocol to send data to Watson IoT for Device. To use Quickstart, enter "0" here.

**Receiving QoS:** Sets QoS of MQTT protocol when a control message is received from Watson IoT for Device.

**Trust Store:** Sets path name of the root certificate file to connect to Watson IoT for Device.

**Advanced Setting:** Sets detailed values of MQTT protocol.

**Keep Alive Interval[sec]:** Sets keep alive



interval of MQTT protocol.

**Clean session:** Selects if using the clean session of the MQTT protocol.

**Retain function:** Selects if the retention function of the MQTT protocol is used or not.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to “Enable” in individual device setup menu.

## ■ Settings for individual device setting menu

Tx/Rx setting	<input type="checkbox"/> lo <input type="checkbox"/> pd_ex <input type="checkbox"/> iotHub <input type="checkbox"/> awsIot <input type="checkbox"/> iotcore <input type="checkbox"/> w4g <input type="checkbox"/> eventhub <input type="checkbox"/> kinesis <input checked="" type="checkbox"/> w4d <input type="checkbox"/> inf_dvhub <input type="checkbox"/> t4d <input type="checkbox"/> kddl_std <input type="checkbox"/> pd_web <input type="checkbox"/> web <input type="checkbox"/> mqtt <input type="checkbox"/> ltcp <input type="checkbox"/> lsocket
Device ID(w4d)	<input type="text"/>
Device type(w4d)	<input type="text"/>
Password(w4d)	<input type="text"/>
Key Store(w4d)	/var/webui/upload_dir/w4d/bledev_0000001/keyst
Private key(w4d)	/var/webui/upload_dir/w4d/bledev_0000001/privat

**Device ID(w4d):** Sets device ID for Watson IoT for Device.

**Device type(w4d):** Sets device type of Watson IoT for Device.

**Password:** Sets password used for connection with Watson IoT for Device.

**Key Store:** Sets path name of the client certificate file to connect to Watson IoT for Device.

**Private key:** Sets path name of the private key file to connect to Watson IoT for Device.

\*Upload the Trust Store, Key Store and private key using the **[System]-[File Management]** tab.

## 2-4-2-12. Toami for DOCOMO(t4d)

### ■ Settings at the Tx/Rx setting menu

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Destination URL:** Sets URL of Toami for DOCOMO.


**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to "Enable" in individual device setup menu.

### ■ Settings for individual device setting menu

**Gateway Name(t4d):** Sets gateway name of Toami for DOCOMO.

**App Key(t4d):** Sets gateway name of Toami for DOCOMO.

\*With Toami for DOCOMO, as key information of data it can handle (JSON string) is fixed, it is necessary to transfer output of the PD Handler via the PD Repeater to Node-RED, where key information is converted and send this converted information to Toami for DOCOMO via the PD Repeater as shown in the figure below.

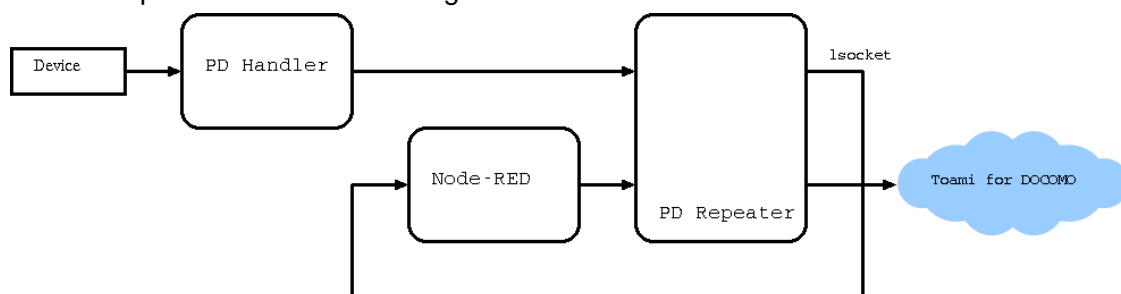

Taking an example of a Beacon device (PD Handler BLE) to explain the set up.

1. Set destination of PD Handler BLE (device #: device\_beacon) as domain socket (Issocket).  
For settings of domain socket(Issocket), refer to Chapter 2-4-2-17.  
The socket path prefix is the default value "@/node-red/".
2. Register Node-RED as a user-defined device.  
For registration of user-defined devices, refer to Chapter 2-4-8.  
Suppose that "userdev\_0000001" is assigned as the user-defined device.
3. In Node-RED, deploy ipc-in, ipc-out and t4d-keymapper nodes and connect them.  
As to how to use Node-RED, refer to the OpenBlocks IoT Family Node-RED Starter Guide.




Deploy ipc-in, ipc-out and t4d-keymapper nodes and connect them.

4. Set property of the ipc-in node.



Set Path in the property to "/node-red/device\_beacon.sock".  
Check the Abstract Flag check box.

5. Set property of the ipc-out node.

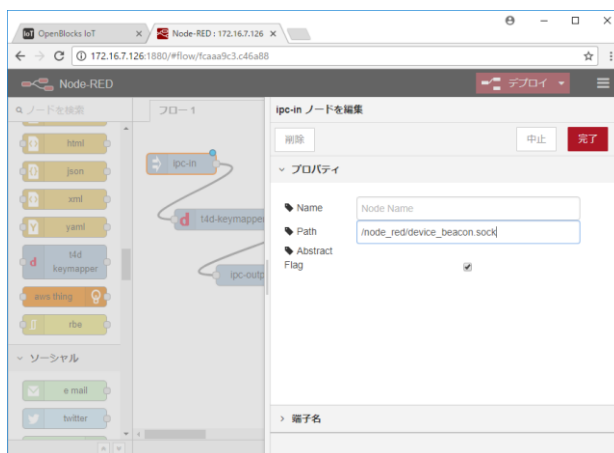


Set Path in the property to  
"/pd\_repeater/userdev\_0000001.sock".

Check the Abstract Flag check box.


6. The table below shows JSON keys of the beacon output from the PD Handler BLE and keys following conversion set with this example.

JSON keys	Data format	Description	Keys following conversion
deviceId	String	Device ID	s01
appendixInfo	String	Accompanying information	s02
time	String	Acquisition time of data	s03
rsi	Integer	RX signal strength	n01
type	String	RX signal strength	s04
data	String	Payload data (hex notation)	s05
status	String	Beacon status	s06
memo	String	String set from WEB UI	s07

For the property of t4d-mapper, set up the settings as per the above table.

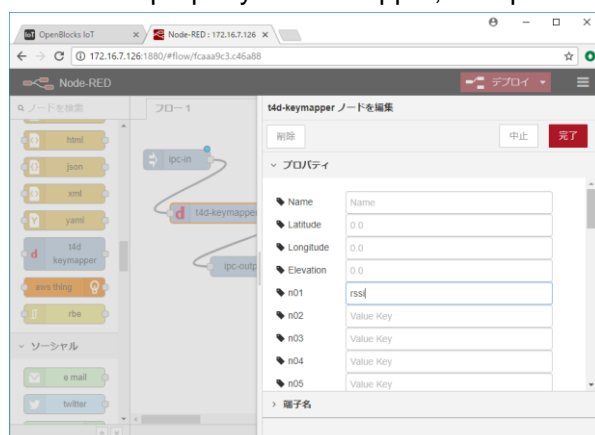

1. Set n01 to "rsi".

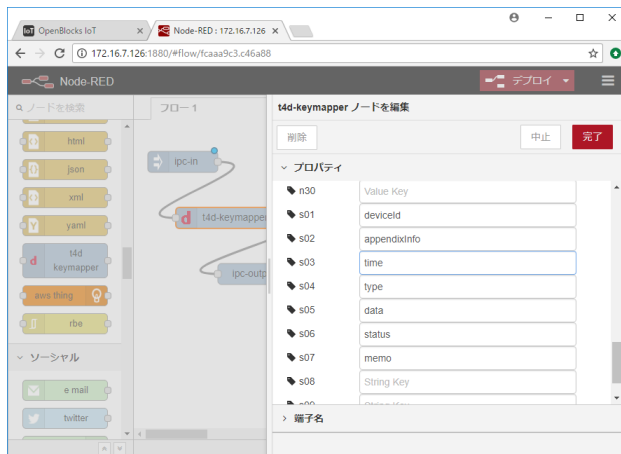

2. Set s01 to "deviceId".
3. Set s02 to "appendixInfo".
4. Set s03 to "time".
5. Set s04 to "type".
6. Set s05 to "data".
7. Set s05 to "data".
8. Set s07 to "memo".

\*The data acquisition time set to s03 is handled as a simple string in Toami for DOCOMO. The time information of Toami for DOCOMO (timestamp key value) will be automatically generated and added in the t4d-keymapper node.

\*The t4d-keymapper node cannot support devices that output values as arrays or JSON objects such as the PD Handler Modbus Client/Server. For such devices, create a unique function node depending on conversion conditions.

## 2-4-2-13. KDDI IoT Cloud Standard(kddi\_std)

### ■ Settings at the Tx/Rx setting menu

KDDI IoT cloud Standard(kddi\_std) ☒ Enable ☐ Disable

Interval[sec] 60

Retention time[sec] 0

Sub-process restart interval[sec] 86400

Domain name

Terminal ID

Username

Password

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Domain name:** Sets domain name of the KDDI IoT Cloud Standard to be connected.

**Terminal ID:** Sets terminal ID of KDDI IoT Cloud Standard.

**Username:** Sets username for basic authentication of KDDI IoT Cloud Standard.

**Password:** Sets password for basic authentication of KDDI IoT Cloud Standard.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to "Enable" in individual device setup menu.

### ■ Settings for individual device setting menu

Tx/Rx setting

☐ lo ☐ pd\_ex ☐ iothub ☐ awsiot ☐ iotcore  
☐ w4g ☐ eventhub ☐ kinesis ☐ w4d ☐ nf\_dvhub  
☐ t4d ☒ kddi\_std ☐ pd\_web ☐ web ☐ mqtt  
☐ lltcp ☐ lsocket

No setting item is available other than checking check boxes in Tx/Rx setting.

## 2-4-2-14. Web server of Plat'Home's original specifications

### ■ Settings at the Tx/Rx setting menu

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Destination URL:** Sets URL of web server for Plat'Home's original specifications to be connected.

**Polling interval[sec]:** Sets interval to read control messages from web server.

**Username:** Sets username for basic authentication of web server.

**Password:** Sets password for basic authentication of web server.

**Maximum POST data size:** Selects maximum data size to send a single POST method. Select between 1 to 4 Mbytes.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to "Enable" in individual device setup menu.

### ■ Settings for individual device setting menu

**ID(pd\_web):** Sets ID for token authentication of web server.

**Key(pd\_web):** Sets key for token authentication of web server.

With the data transmission method of the web server for Plat'Home original specifications, Content-Type is posted as "application/json". For further details, refer to Chapter 4-11.

## 2-4-2-15. WEB server(web)

### ■ Settings at the Tx/Rx setting menu

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Destination URL:** Sets URL of the general-purpose web server to be connected.

**Maximum POST data size:** Selects maximum data size to send a single POST method. Select between 1 to 4 Mbytes.

**Content type:** Selects content type of web server ("web from"/"plain text"/"JSON").

**Username:** Sets username for basic authentication of web server.

**Password:** Sets password for basic authentication of web server.

**Device bulk configuration:** To enable/disable all TX destination settings where TX destination is set to "Enable" in the BLE device information transmission settings.

### ■ Settings for individual device setting menu

No setting item is available other than checking check boxes in Tx/Rx setting.



Data is sent to web server with the POST method. If the Tx/Rx format setting is a web form format, **Content-Type** will be "application/x-www-form-urlencoded". Payload (TX data body) will be transmitted as an x-www-form-urlencoded variable containing multiple data called Records.

If the Tx/Rx format is a plain text format, **Content-Type** will be "text/plain". URL safe encoding of payload (TX data body) will not be preformed, and multiple data (presumed to be JSON) will be sent in bulk.

If the Tx/Rx format is a JSON format, **Content-Type** will be "application/json". URL safe encoding of payload (TX data body) will not be preformed, and multiple data (presumed to be JSON) will be sent in bulk.

■ Transmission format setting: Web form format

● Data format

Records=[{DATA1},{DATA2},{DATA3},...{DATAn}]

● Transmission sample

```
POST / HTTP/1.0
Content-Length: 422
Content-Type: application/x-www-form-urlencoded

Records=[{"deviceId":"b0b448b81105","memo":"cc2650-1","objectTemp":20,"ambientTemp":24.84375,"humidity":47.91259765625,"temperature":25.32928466796875,"pressure":1016.37,"time":"2016-11-24T16:50:23.431+0900"},{"deviceId":"b0b448b81105","memo":"cc2650-1","objectTemp":19.75,"ambientTemp":24.875,"humidity":47.91259765625,"temperature":25.3594970703125,"pressure":1016.31,"time":"2016-11-24T16:50:26.459+0900","lux":427.68}]
```

■ Transmission format setting: Plain text format

● Data format

[{DATA1},{DATA2},{DATA3},...{DATAn}]

● Transmission sample

```
POST / HTTP/1.0
Content-Type: text/plain
Content-Length: 209

[{"deviceId":"6d4adcb7133f","appendixInfo":"G8H00010","rssi":-90,"time":"2017-12-04T14:07:18.157+09:00"},{"deviceId":"e135535f61e4","appendixInfo":"G8H00010","rssi":-74,"time":"2017-12-04T14:07:18.762+09:00"}]
```

■Transmission format setting: JSON format

●Data format

[{DATA1},{DATA2},{DATA3},...{DATA<sub>n</sub>}]

●Transmission sample

POST / HTTP/1.0


Content-Type: application/json

Content-Length: 209

```
[{"deviceId":"6d4adcb7133f","appendixInfo":"G8H00010","rssi":-90,"time":"2017-12-04T14:07:18.157+09:00"}, {"deviceId":"e135535f61e4","appendixInfo":"G8H00010","rssi":-74,"time":"2017-12-04T14:07:18.762+09:00"}]
```

## 2-4-2-16. MQTT server(mqtt)

### ■ Settings at the Tx/Rx setting menu

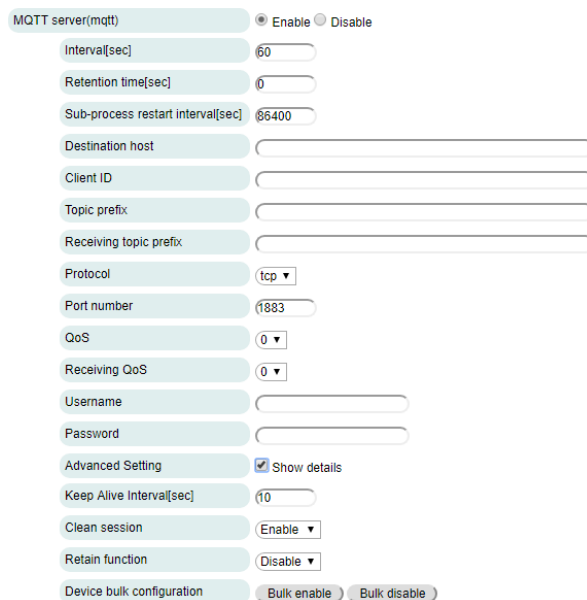

MQTT server(mqtt) ☒ Enable ☐ Disable

Interval[sec] 60

Retention time[sec] 0

Sub-process restart interval[sec] 86400

Destination host

Client ID

Topic prefix

Receiving topic prefix

Protocol tcp

Port number 1883

QoS 0

Receiving QoS 0

Username

Password

Advanced Setting ☒ Show details

Keep Alive Interval[sec] 10

Clean session Enable

Retain function Disable

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Destination host:** Sets host name of general-purpose MQTT server to be connected.

**Client ID:** Sets client ID to connect to general-purpose MQTT server.

**Topic prefix:** Sets prefix for the topic of MQTT protocol used when data is sent to general-purpose MQTT server. Its suffix follows "/" to be set as a unique ID.

**Receiving topic prefix:** Sets prefix for the topic of MQTT protocol used to wait for control messages from general-purpose MQTT server.

**Protocol:** Sets protocol to use for connection (TCP/SSL).

**Port number:** Sets port number of destination host.

**QoS:** Sets QoS for MQTT protocol to send data to general-purpose MQTT server.

**Receiving QoS:** Sets QoS for MQTT protocol when control message is received from

general-purpose MQTT server.

**Username:** Sets username used for connection with general-purpose MQTT server.

**Password:** Sets password used for connection with general-purpose MQTT server.

**Trust Store:** Sets path name of the root certificate file to connect to general-purpose MQTT server.

**Key Store:** Sets path name of the client certificate file to connect to general-purpose MQTT server.

**Private key:** Sets path name of the private key file to connect to general-purpose MQTT server.

**Advanced Setting:** Sets detailed values of MQTT protocol.

**Keep Alive Interval[sec]:** Sets keep alive interval of MQTT protocol.

**Clean session:** Selects if using the clean session of the MQTT protocol.

**Retain function:** Selects if the retention function of the MQTT protocol is used or not.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to “Enable” in individual device setup menu.

## ■ Settings for individual device setting menu

Tx/Rx setting

☐ lo ☐ pd\_ex ☐ iothub ☐ awsiot ☐ iotcore  
☐ w4g ☐ leventhub ☐ kinesis ☐ w4d ☐ nf\_dvhub  
☐ t4d ☐ kddi\_std ☐ pd\_web ☐ web ☒ mqtt  
☐ ltcp ☐ lsocket

Unique ID(mqtt)

**Unique ID(mqtt):** Sets unique text string for each device to be used as a suffix of MQTT topics when data is sent to a general-purpose MQTT server or when control message is received. "." (ASCII code 0x2e ) will be converted to "/" (ASCII code 0x2f).

\*Upload the Trust Store, Key Store and private key using the **[System]-[File Management]** tab.

## 2-4-2-17. TCP(ltcp)

### ■ Settings at the Tx/Rx setting menu

TCP socket(ltcp) ☒ Enable ☐ Disable

Interval[sec]

Retention time[sec]

Sub-process restart interval[sec]

IP address

Delimiter

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**IP address:** Sets IP address of general-purpose TCP server to be connected.

**Delimiter:** Sets one or two-character ASCII code to serve as data border. For example, "0x03" if CR (carriage return) is set as the delimiter, and "0x0d0a" if CRLF (carriage return line feed) is set as the delimiter.

**Device bulk configuration:** To enable/disable all TX destination settings whose TX destination is set to "Enable" in individual device setup menu.

### ■ Settings for individual device setting menu

Tx/Rx setting

☐ lo ☐ pd\_ex ☐ iothub ☐ aws\_iot ☐ iotcore  
☐ w4g ☐ eventhub ☐ kinesis ☐ w4d ☐ nf\_dvhub  
☐ t4d ☐ kddi\_std ☐ pd\_web ☐ web ☐ mqtt  
☒ ltcp ☐ lsocket

Tx/Rx port(ltcp)

**Tx/Rx port(ltcp):** Sets port number of general-purpose TCP server to connect between 49152 and 65535.

## 2-4-2-18. Domain socket(lsocket)

### ■ Settings at the Tx/Rx setting menu

UNIX domain socket(lsocket) ☒ Enable ☐ Disable

Interval[sec]

Retention time[sec]

Sub-process restart interval[sec]

Socket path prefix

Device bulk configuration

**Interval[sec]:** Sets time interval between the completion of transmission and the start of next transmission in seconds.

**Retention time[sec]:** Sets retention time when the PD Repeater cannot send data. If "0" is specified, retention will continue until data transmission is completed.

**Sub-process restart interval[sec]:** Sets interval to restart a sub-process. Usually, it is not necessary to change the default value (86,400 seconds). If "0" is specified, restart will not be performed.

**Socket path prefix:** Sets prefix to the path name of the UNIX domain socket to output data. If the name starts with "@", it is treated as an abstract domain socket. As a suffix to the path name, the device number is given.

### ■ Settings for individual device setting menu

Tx/Rx setting

☐ lo ☐ pd\_ex ☐ iothub ☐ awsiot ☐ iotcore  
☐ w4g ☐ eventhub ☐ kinesis ☐ w4d ☐ nf\_dvhub  
☐ t4d ☐ kddi\_std ☐ pd\_web ☐ web ☐ mqtt  
☐ ltcp ☒ lsocket

No setting item is available other than checking check boxes in Tx/Rx setting.

## 2-4-3. Beacon data transmission settings

From the **Beacon data transmission settings** menu in the [IoT Data]-[Tx/Rx setting] tab, it is possible to set up beacon data transmission.

To enable beacon data transmission, BT I/F (hci0) must be set to “Enable” in the [Basic]-[BT I/F] tab as the basic setup of the service function.

For basic setup of the service function, refer to Chapter 5 of the OpenBlocks IoT Family WEB UI Set-up Guide.

If the **Beacon data transmission settings** menu is not displayed, refer to Chapter 2-3 "Application setup for IoT data control" and set “Enable” to the PD Handler BLE.

Default destination setup is as shown in the figure on the left.

To transmit beacon data to cloud, etc., choose “Enable”

**Note:** This item does not apply to beacons subject to transmissions by a device information transmission setting, which will be discussed later.

Choosing “Enable” will display individual setup items.

**Device number:** This is controlled by the OpenBlocks IoT Family WEB UI and cannot be modified.

**Time span to thin out data[ms]:** Sets the time input data is not received in order to thin out time in milliseconds. If set to "0", data will not be thinned out.

**Buffer size:** Sets maximum size of data in bytes.

**Beacon sonar function:** Sets if beacon sonar is enabled or disabled when beacon data subject to reception is received.

**Control type:** Selects method to control beacon data. For a description of each system, refer to "Duplicated beacon data



control algorithm".

- Interval transfer
- Entry point transfer
- In/out status transfer

**Duplication control time interval[msec]:**

Sets control time for each control type in milliseconds.

**Payload management:** Selects if beacons will accompany information when beacon data is transferred to PD Repeater.

data: advertise data (hexadecimal)

localname: device name

type: data type

**Appendix information:** Sets information to accompany beacon data such as from which OpenBlocks IoT Family data is sent, when being sent to individual clouds.

\*Default is the unit serial number.

**Data filter:** (Data prefix) Sets a filter to select a beacon to be transmitted. By entering a filtering condition in the Data prefix field in a hexadecimal string, the system compares the advertised information of beacons with a prefix search and transmits only those that match the search to the destination.

\*Use the Add button to make more than one selection.

\*To set a data filter, refer to the log data in the unit (local) and filter the device. Filtering will be applied to local logs in this unit.

**RSSI threshold:** Sets if an RSSI threshold filter is applied to beacons to receive or not.

**RSSI threshold:** Sets signal strength of beacons to receive in dBm.

**User-defined information added:** Enables user to add a combination of key names and

values to data to be sent to the PD Repeater.

\*Use the Add button to register up to five pieces of information.

\*Use the Location Information Setting button to enter already registered location information to the form.

**Tx/Rx setting:** Check boxes for destinations with "Enable" selected will become available for selection. Transmission will be made to destinations with a checked check box. If checking the box, setting items unique to the destination will be displayed. For settings unique to destinations, refer to "2-4-2. Settings for individual Tx/Rx destinations."


\*With beacon sonar function set to the destination and when beacon data set to receive (in consideration of data filter and RSSI threshold) are received with USB speaker connected, detection alarms will be outputted from the speaker.

## Duplicated beacon data control algorithm

Presumed settings for this explanation:  
 Beacon transmission interval: 1 sec.  
 Duplication control time interval (CHt) = 5 sec.


### ① Interval transfer

Data transmitted to the TX program at designated intervals while beacons are received

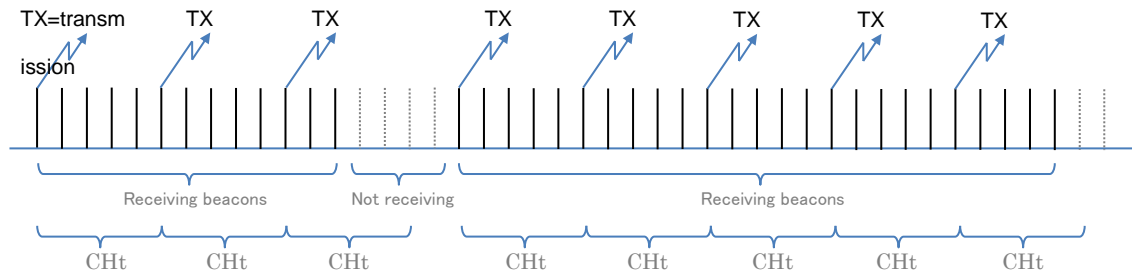


### ② Entry point transfer

Data transmitted to the TX program once when a beacon is received (Temporary non-reception within CHt time is not regarded as exiting.)

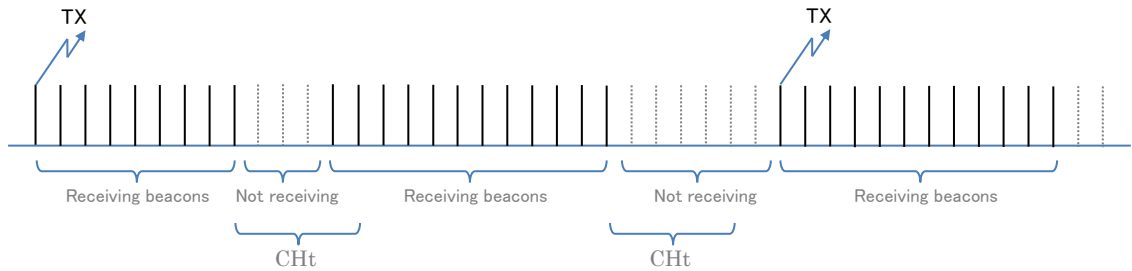

### ③ In-out status transfer

Data with IN/OUT flag transmitted to TX program at the timing of entering/exiting  
 (Temporary non-reception within CHt time is not regarded as exiting.)

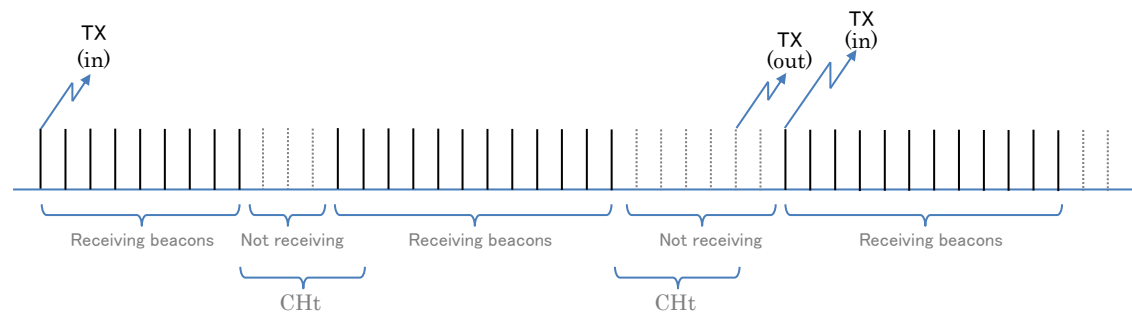

## 2-4-4 Setting for BLE device

Use the **Setting for BLE device** menu in the **[IoT Data]-[Tx/Rx setting]** tab, it is possible to make transmission setups for BLE device information.

To enable BLE device information transmission, BF I/F (hci0) must be set to “Enable” in the **[Basic]-[BT I/F]** tab as the basic setup of the service function.

In addition, the BLE device must be registered in the **[Basic]-[BLE regist.]** tab as the basic setup of the service function.

For basic setup of the service function, refer to Chapter 5 of the OpenBlocks IoT Family WEB UI Set-up Guide.

If the **Setting for BLE device** menu is not displayed, refer to Chapter 2-3 "Application setup for IoT data control", and set PD Handler BLE to “Enable”

Settings for BLE device Bulk Enable Bulk Disable

Tx/Rx settings ☐ Enable ☒ Disable

Device number bledev\_0000001

If any BLE device is already registered, default settings are as in the figure on the left.

\*Here, only one device is registered.

Choosing “Enable” for Tx/Rx setting for each device will display setup items.

\*Use the Bulk Enable and Bulk Disable buttons to control all Tx/Rx settings for all registered devices.

Choosing “Enable” will display individual setup items.

**Device number:** This is controlled by the OpenBlocks IoT Family WEB UI and cannot be modified.

**Time span to thin out data[ms]:** Sets the time input data is not received in order to thin out time in milliseconds. If set to "0", data will not be thinned out.

**Buffer size:** Sets maximum size of data in bytes.

**Address:** Shows BT address of registered device.

**User Note:** Shows notes created for registered device.

**Sensor signal strength[dbm]:** For a model

Settings for BLE device Bulk Enable Bulk Disable

Tx/Rx settings ☒ Enable ☐ Disable

Device number bledev\_0000001

Time span to thin out data[ms] 0

Buffer size 4096

Address C2:47:89:3F:1F:09

User Note FCLWirelessModule

Sensor signal strength[dbm] 0

Acquisition time interval[ms] 5000

Tx/Rx setting ☐ io ☐ pd\_ex ☐ iotHub ☐ awsIot ☐ iotcore ☐ w4g ☐ eventHub ☐ kinesis ☐ w4d ☐ nf\_dvhub ☐ t4d ☐ kddl\_std ☐ pd\_web ☐ web ☐ mqtt ☐ ltcp ☐ lsocket

that can set a signal strength to sensors, it is possible to enter a desired signal strength. If a desired signal strength is not available, an approximation or default value will be set.

**Acquisition time interval[ms]:** Sets time interval to obtain data from sensors in numerical value in milliseconds.

" \*Fujitsu Component BT Smart Sensor Beacon and Texas Instruments SimpleLink Sensor Tag only are supported.

**Tx/Rx setting:** Check boxes for destinations with "Enable" selected will become available for selection. Transmission will be made to destinations with a checked check box. If checking the box, setting items unique to the destination will be displayed. For settings unique to destinations, refer to "2-4-2. Settings for individual Tx/Rx destinations."

\*It is recommended to use the same settings so that when existing faulty devices are replaced, they can be handled in the same manner. (Change destination setting of the faulty device to "Disable").

## 2-4-5. Setting for EnOcean device (For domestic use in Japan only)

By mounting an EnOcean module (additional expansion module) or USB dongle for EnOcean reception to an OpenBlocks IoT Family product, it is possible to obtain information from an EnOcean device using PD Handler UART.

Use the **Setting for EnOcean device** menu in the **[IoT data]-[Tx/Rx setting]** tab, it is possible to perform settings to obtain information from an EnOcean device and send it.

To collect information from an EnOcean device, an EnOcean device must be registered in the **[Basic]-[EnOcean regist.]** tab as a basic setup of service functions.

For basic setup of the service function, refer to Chapter 5 of the OpenBlocks IoT Family WEB UI Set-up Guide.


If the **Setting for EnOcean device** menu is not displayed, refer to "Chapter 2-3. Application setup for IoT data control," and set PD Handler UART to "Enable"

If any EnOcean device is already registered, default settings are as in the figure on the left.

\*Here, only one device is registered.

**Device file:** To use an additional expansion module, choose "/dev/ttyEX2". To use a USB dongle, choose a corresponding device file.

\*In the case of a USB dongle, its device file name may differ, depending on the order of recognition of USB devices.

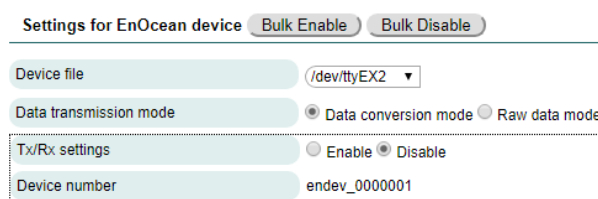

Settings for EnOcean device	
Device file	/dev/ttyEX2
Data transmission mode	<input checked="" type="radio"/> Data conversion mode <input type="radio"/> Raw data mode
Tx/Rx settings	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Device number	endev_0000001

**Data transmission mode:** Sets data mode to be transmitted to PD Repeater. For data conversion mode, analyzed data will be sent to the PD Repeater for compatible EEP and received data converted to a hexadecimal string will be sent to the PD Repeater for an incompatible EEP. Furthermore, in raw data mode, regardless of compatibility of EEP, received data is converted to a hexadecimal string and sent to the PD Repeater.

Choosing "Enable" for Tx/Rx setting for each device will display setup items.

\*The "Bulk Enable" and "Bulk Disable" buttons will set all settings to "Enable" or "Disable."

Choosing "Enable" will display individual setup items.

**Device number:** This is controlled by the OpenBlocks IoT Family WEB UI and cannot be modified.

**Time span to thin out data[ms]:** sets the time input data is not received in order to thin out time in milliseconds. If set to "0", data will not be thinned out.

**Buffer size:** Sets maximum size of data in bytes.

**Device ID:** Shows ID of registered EnOcean device.

**EEP(device information profile):** Shows device information profile of registered EnOcean device. User Note: Shows notes created for registered device.

**Tx/Rx setting:** Check boxes for destinations with "Enable" selected will become available for selection. Transmission will be made to destinations with a checked check box. If checking the box, setting items unique to the destination will be displayed. For settings unique to destinations, refer to "2-4-2. Settings for individual Tx/Rx destinations."

\*It is recommended to use the same settings so that when existing faulty devices are replaced, they can be handled in the same manner. (Change destination setting of the faulty device to "Disable").

## 2-4-6. Setting for Wi-SUN B Route device(For domestic use in Japan only)

By mounting a Wi-Sun B Route module (additional expansion module) to an OpenBlocks IoT Family product, it is possible to obtain information from a Wi-Sun B Route device using PD Handler UART.

Use the **Setting for Wi-Sun B Route device** menu in the **[IoT data]-[Tx/Rx setting]** tab, it is possible to perform settings to obtain information from a Wi-SUN B Route device and send it.

If the **Setting for Wi-SUN B Route device** menu is not displayed, refer to "Chapter 2-3. Application setup for IoT data control," and set PD Handler UART to "Enable"

Wi-SUN Bルート情報送信設定

デバイスファイル: /dev/ttyEX2

送受信設定: ☐ 使用する ☒ 使用しない

デバイス番号: device\_wisun\_broute

Default settings are as in the figure on the left.

**Device file:** To use an additional expansion module, choose "/dev/ttyEX2".

Choosing "Enable" will display individual setup items.

**Device number:** This is controlled by the OpenBlocks IoT Family WEB UI and cannot be modified.

**Time span to thin out data[ms]:** sets the time input data is not received in order to thin out time in milliseconds. If set to "0", data will not be thinned out.

**Buffer size:** Sets maximum size of data in bytes.

**B-route ID:** Specify the B-route ID for connection to the Smart Meter.

\*B-route ID begins with '00'.

**B-route Password:** Specify the password for the connection to the Smart Meter.

**Tx/Rx setting:** Check boxes for destinations

Wi-SUN Bルート情報送信設定

デバイスファイル: /dev/ttyEX2

送受信設定: ☒ 使用する ☐ 使用しない

デバイス番号: device\_wisun\_broute

データ間隔[ms]: 0

バッファサイズ: 4096

BルートID: 00123456789012345678901234567890

Bルートパスワード: 0123456789AB

送受信設定:

☐ pd\_ex ☐ iothub ☐ awsiot ☐ iotcore ☐ w4g  
☐ eventhub ☐ kinesis ☐ w4d ☐ nf\_dvhub ☐ t4d  
☐ kddi\_std ☐ pd\_web ☐ web ☐ mqtt ☐ l1tcp



with "Enable" selected will become available for selection. Transmission will be made to destinations with a checked check box. If checking the box, setting items unique to the destination will be displayed. For settings unique to destinations, refer to "2-4-2. Settings for individual Tx/Rx destinations."

## 2-4-7. Setting for Modbus client device

A Modbus client can use Modbus protocol to periodically read data from PLC devices (polling) and send data to cloud via PD Repeater.

In addition, based on control messages (JSON strings) sent from cloud via the PD Repeater, it can connect to a PLC device using Modbus protocol to read/write data.

Use the **Setting for Modbus client device** menu in the **[IoT data]-[Tx/Rx setting]** tab, it is possible to perform settings of the Modbus client device.

To use a Modbus client device, a Modbus client device must be registered in the **[Basic]-[Modbus(C) regis.]** tab as the basic setup of the service function.

For basic setup of the service function, refer to Chapter 5 of the OpenBlocks IoT Family WEB UI Set-up Guide.

If the **Setting for Modbus client device** menu is not displayed, refer to Chapter 2-3 "Application setup for IoT data control" and set the PD Handler MODBUS Client to "Enable"


If a Modbus client device is already registered, default settings are as in the figure on the left.

\*Here, only one device is registered.

\*Modbus client devices do not refer to PLC devices themselves but are conceived as a combination of settings such as "read method," "read start address" and "read register number" to collect data, in addition to connection methods to subject PLC devices.

Choosing "Enable" for Tx/Rx setting for each device will display setup items.

\*The "Bulk Enable" and "Bulk Disable" buttons will set all settings to "Enable" or "Disable."

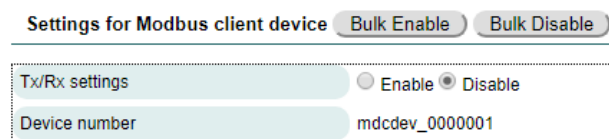

Settings for Modbus client device	
<input type="button" value="Bulk Enable"/> <input type="button" value="Bulk Disable"/>	
Tx/Rx settings	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Device number	mdcdev_0000001

Settings for Modbus client device **Bulk Enable** **Bulk Disable**

---

Tx/Rx settings	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Device number	mdcdev_0000001
Time span to thin out data[ms]	0
Buffer size	4096
Receive settings	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
User Note	Test Client
Read method	Register input ▼
Data type	Unsigned 16bits integer ▼
Start address of data to be read	0
Number of registers to be read	1
Unit ID	17
Acquisition time interval[sec]	60
Reference time control function	Enable ▼
Reference time	00:00
Timeout[ms]	5000
Protocol	TCP ▼
Connection address	192.168.123.123
Connection port	502
Tx/Rx setting	<input type="checkbox"/> pd_ex <input type="checkbox"/> iohub <input type="checkbox"/> awsiot <input type="checkbox"/> iotcore <input type="checkbox"/> w4g <input type="checkbox"/> eventhub <input type="checkbox"/> kinesis <input type="checkbox"/> w4d <input type="checkbox"/> nf_dvhub <input type="checkbox"/> t4d <input type="checkbox"/> kddi_std <input type="checkbox"/> pd_web <input type="checkbox"/> web <input type="checkbox"/> mqtt <input type="checkbox"/> itcp <input type="checkbox"/> lsocket

\*When "TCP" is selected as Protocol

Choosing "Enable" will display individual setup items.

**Device number:** This is controlled by the OpenBlocks IoT Family WEB UI and cannot be modified.

**Time span to thin out data[ms]:** Sets the time input data is not received in order to thin out time in milliseconds. If set to "0", data will not be thinned out.

**Buffer size:** Sets maximum size of data in bytes.

**Receive setting:** Selects if downstream control to receive control messages from cloud via PD Repeater or not.

**User Note:** Shows notes created for registered device.

**Read method:** Selects "Digital output (bit)", "digital input (bit)", "Register output" or "Register input".

If "Digital output" or "Digital input" is selected, a row of "0" or "1" will be output.

**Data type:** Selects one of the following data types when "Register output" or "Register input" is selected for Read method.

- Unsigned 16 bits integer
- Signed 16 bits integer
- Unsigned 32 bits integer/little endianness
- Signed 32 bits integer/little endianness
- Unsigned 32 bits integer/big endianness
- Signed 32 bits integer/big endianness

**Start address of data to be read:** Sets read start address on PLC device storing data to be read.

**Number of registers to be read:** Interpreted as the number of bits to be read if "Digital output" or "Digital input" is selected

Settings for Modbus client device
Bulk Enable
Bulk Disable

Tx/Rx settings

☒ Enable
☐ Disable

Device number

mdcdev\_0000001

Time span to thin out data[ms]

0

Buffer size

4096

Receive settings

☐ Enable
☒ Disable

User Note

Test Client

Read method

Register input

Data type

Unsigned 16bits integer

Start address of data to be read

0

Number of registers to be read

1

Unit ID

17

Acquisition time interval[sec]

60

Reference time control function

Enable

Reference time

00:00

Timeout[ms]

5000

Protocol

RTU

Device file

/dev/ttyRS485

Baud rate

9600

Parity bit

none

Data bits

8bit

Stop bit

1bit

Tx/Rx setting

☐ pd\_ex
☐ iohub
☐ awsiot
☐ iotcore
☐ w4g
☐ eventhub
☐ kinesis
☐ w4d
☐ nf\_dvhub
☐ t4d
☐ kddi\_std
☐ pd\_web
☐ web
☐ mqtt
☐ ltcp
☐ lsocket

\*When "RTU" is selected as Protocol

for Read method.

Sets number of registers or bits to be read from the address set for "Start address of data to be read".

**Unit ID:** Sets Modbus unit ID of PLC device.

Unit idea is number between 1 and 247 or 255.

**Acquisition time interval[sec]:** Sets interval of time to acquire data from PLC device in seconds. If the reference time control function described below is used, time interval is internally converted to the values below:

- 86400[sec] × integral multiple
- 43200[sec]
- 28800[sec]
- 21600[sec]
- 14400[sec]
- 10800[sec]
- 7200[sec]
- 3600[sec]
- 1800[sec]
- 900[sec]
- 60[sec]

**Reference time control function:** To acquire data at a specific hour, enable this function and set the reference time.

**Reference time:** Sets reference time to acquire data at a specific hour. Format is HH:MM.

**Timeout[msec]:** Sets timeout when data is acquired from PLC device in milliseconds.

**Protocol:** Selects "TCP" or "RTU". The former is network, while the latter is serial.

**Connection address (TCP):** Sets IP address of PLC device to be connected.

Connection port: Sets TCP port number of PLC device to be connected. Default value is "502".

**Device file (RTU):** Sets device filename of serial port to connect PLC device.

Baud rate: Selects baud rate for the serial port.

**Parity bit (RTU):** Selects parity bit for the serial port.

**Data bit (RTU):** Selects data bit for the serial port.

**Stop bit (RTU):** Selects stop bit for the serial port.

**Tx/Rx setting:** Check boxes for destinations with "Enable" selected will become available for selection. Transmission will be made to destinations with a checked check box. If checking the box, setting items unique to the destination will be displayed. For settings unique to destinations, refer to "2-4-2. Settings for individual Tx/Rx destinations."

### ■ Expansion of acquired Modbus client devices using CSV file

By placing a CSV file whose filename is **pd\_handler\_modbus\_client.csv** in /var/webui/upload\_dir using the **[System]-[File Management]** tab, it is possible to assign multiple acquired Modbus client devices for a single device number set up by WEB UI.

Format of this CSV is as follows:

**Device number, Unit ID, Read method, Data type, Start address of data to be read, Number of registers to be read**

Parameter	Data format	Description
Device number	Alphanumerical	Gives device number assigned by WEB UI. Device numbers not set up in WEB UI will be ignored. If the first character of a line is "#" or "/", the line will be treated as a comment line.
Unit ID	Numerical	Sets Modbus unit ID of PLC device. Unit ID is between 1 and 247 or 255.
Read method	Alphanumerical	One of the following to be given as a read method: Digital output: "read_coils" or "0x01" or "1" Digital input: "read_discrete_input" or "0x02" or "2" Register output: "read_holding_registers" or "0x03" or "3" Register input: "read_input_registers" or "0x04" or "4"
Data type	Alphanumerical	One of the following to be given as a data type: Unsigned 16 bit integer: "uint16_t" or "0" Signed 16 bit integer: "int16_t" or "1" Unsigned 32 bit integer/little endianness: "uint32lsb_t" or "2" Signed 32 bit integer/little endianness: "int32lsb_t" or "3" Unsigned 32 bit integer/big endianness: "uint32msb_t" or "4" Signed 32 bit integer/big endianness: "int32msb_t" or "5"
Start address of data to be read	Alphanumerical	Sets start address on the PLC device storing data to read. If the address starts with "0x", it will be interpreted as hexadecimal.
Number of registers to be read	Numerical	Enter the register number to read.

CSV file format for PD Handler Modbus Client

Parameters are divided by a comma. If the parameter starts with a sharp (#) or slash (/), it is considered a comment line.

Examples:

```
#localname,unit_id,read_function,data_type,read_addr,read_registers
mdcdev_0000001,15,read_coils,uint16_t,0x130,37
mdcdev_0000001,15,read_discrete_input,uint16_t,0x1c4,22
mdcdev_0000001,15,read_holding_registers,uint16_,0x160,3
mdcdev_0000001,16,read_input_registers,uint32lsb_t,0x108,1
mdcdev_0000002,17,read_coils,uint16_t,0x130,37
mdcdev_0000002,18,read_discrete_input,u_int16,0x1c4,22
mdcdev_0000002,19,read_holding_registers,int16,0x160,3
mdcdev_0000002,20,read_input_registers,int32lsb,0x108,1
mdcdev_0000003,30,read_coils,u_int16,0x130,37
mdcdev_0000003,30,read_discrete_input,u_int16,0x1c4,22
mdcdev_0000003,31,read_holding_registers,u_int16,0x160,3
mdcdev_0000003,31,read_input_registers,u_int32msb,0x108,1
mdcdev_0000004,32,read_coils,u_int16,0x130,37
mdcdev_0000004,32,read_discrete_input,u_int16,0x1c4,22
mdcdev_0000004,33,read_holding_registers,int16,0x160,3
mdcdev_0000004,33,read_input_registers,int32msb,0x108,1
```

When a CSV file is read, the Modbus client device set by WEB UI will be overwritten. For this reason, in the CSV file, give all the Modbus client devices to be acquired, including Modbus client devices set by WEB UI.

### ■Reference time control

Reference time control is a function to acquire data at a specific hour.

Set the Reference time control item in the **Setting for Modbus client device** menu to "Enable" and set the acquisition time interval and acquisition hour in the **Acquisition time interval[sec]** and the **Reference time**, respectively.

For reference time control, the **Acquisition time interval** is limited to 300, 600, 900, 1800, 3600, 7200, 10800, 14400, 21600, 28800, 43200 and multiples of 86400. If any other time is entered for the **Acquisition time interval**, it will be treated in the PD Handler Modbus client as per the following:

Setting values of acquisition time interval	Actual working values
0 ~ 599	300
600 ~ 899	600
900 ~ 1799	900
1800 ~ 3599	1800
3600 ~ 7199	3600
7200 ~ 10799	7200
10800 ~ 14399	10800
14400 ~ 21599	14400
21600 ~ 28799	21600
28800 ~ 43199	28800
43200 ~ 86399	43200
86400~	Multiple of 86400

Settings and actual working values of **Acquisition time intervals** in reference time control

The **Reference time** is the time serving as the starting point of action. For example, suppose the **Acquisition time interval** is set to "300" and the **Reference time** to "00:01." In this case, data is acquired at 00: 01, 00: 06, 00: 11 ... 00: 56, 01: 01 ... 23: 56, 00: 01 sharp. The starting time of data acquisition will not be the time set in the **Reference time** but the time just coming, calculated by the **Reference time** and the **Acquisition time interval**.

For example, if settings are made at "08:30" for the **Reference time** of "01:05" and the **Acquisition time interval** of "10800," the first data acquisition will take place at "10:05", followed by 13: 05, 16: 05, 19: 05, 22: 05, 01: 05.



## 2-4-8. Setting for Modbus server device

The Modbus server maintains a register map, as shown in the table below, a wait for connections from PLC device via Modbus protocol, updates the register value written by the PLC device and sends the updated register and its values to cloud via the PD Repeater. Based on control messages sent from cloud (JSON string) via the PD Repeater, it can also read and write a register map.

Register	Start address	Size
Digital output (Coils)	0x000	uint8_t x 2048
Digital input (Discrete Input)	0x000	uint8_t x 2048
Register output (Holding Registers)	0x000	uint16_t x 2048
Register input (Input Registers)	0x000	uint16_t x 2048


Register map of PD Handler Modbus Server

Use the **Setting for Modbus server device** menu in the **[IoT Data]-[Tx/Rx setting]** tab, it is possible to setup a Modbus server device.

To use a Modbus server device, a Modbus server device must be registered in the **[Basic]-[Modbus(S) regis.]** tab as the basic setup of the service function.

For basic setup of the service function, refer to Chapter 5 of the OpenBlocks IoT Family WEB UI Set-up Guide.

If the Setting for Modbus server device menu is not displayed, refer to Chapter 2-3 "Application setup for IoT data control" and set PD Handler MODBUS Server to "Enable"

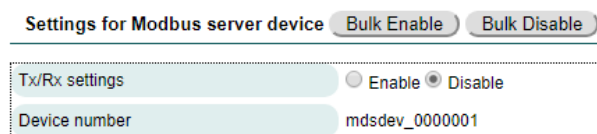

If a Modbus server device is already registered, default settings are as in the figure on the left.

\*Here, only one device is registered.

Choosing "Enable" for Tx/Rx setting for each device will display setup items.

\*The "Bulk Enable" and "Bulk Disable" buttons will set all settings to "Enable" or "Disable."

- When the Device type (waiting type) of the Modbus server device is set to "TCP":

Choosing "Enable" will display individual setup items.

**Device number:** This is controlled by the OpenBlocks IoT Family WEB UI and cannot be modified.

**Time span to thin out data[ms]:** Sets the time input data is not received in order to thin out time in milliseconds. If set to "0", data will not be thinned out.

**Buffer size:** Sets maximum size of data in bytes.

**Receive setting:** Sets if control messages from cloud are received or not via PD Repeater.

**User Note:** Shows notes created for registered device.

**Tx/Rx setting:** Check boxes for destinations with "Enable" selected will become available for selection. Transmission will be made to destinations with a checked check box. If checking the box, setting items unique to the destination will be displayed. For settings unique to destinations, refer to "2-4-2. Settings for individual Tx/Rx destinations."

Settings for Modbus server device **Bulk Enable** **Bulk Disable**

**Tx/Rx settings** ☒ Enable ☐ Disable

**Device number** mdddev\_0000001

**Time span to thin out data[ms]** 0

**Buffer size** 4096

**Receive settings** ☐ Enable ☒ Disable

**User Note** Modbus TCP server 1

**Tx/Rx setting**

<input type="checkbox"/> pd_ex	<input type="checkbox"/> iohub	<input type="checkbox"/> aws iot	<input type="checkbox"/> iotcore	<input type="checkbox"/> w4g
<input type="checkbox"/> eventhub	<input type="checkbox"/> kinesis	<input type="checkbox"/> w4d	<input type="checkbox"/> nf_dvhub	<input type="checkbox"/> t4d
<input type="checkbox"/> kddi_std	<input type="checkbox"/> pd_web	<input type="checkbox"/> web	<input type="checkbox"/> mqtt	<input type="checkbox"/> ltcp
<input type="checkbox"/> lsocket				

\*If waiting with TCP, it is necessary to keep the TCP port (502) of Modbus protocol open. In the **Filter open Settings** menu in the **[System]-[Filter]** tab, set Modbus to "Enable."

The number of Modbus server devices whose Device type (waiting type) that can be registered from WEB UI for TCP is limited to one due to the relationship with opening operation of the TCP port (502).

■ When Device type (waiting type) of the Modbus server device is set to "RTU":

Choosing "Enable" will display individual setup items.

**Device number:** This is controlled by the OpenBlocks IoT Family WEB UI and cannot be modified.

**Time span to thin out data[ms]:** Sets the time input data is not received in order to thin out time in milliseconds. If set to "0", data will not be thinned out.

**Buffer size:** Sets maximum size of data in bytes.

**Receive setting:** Selects if downstream control to receive control messages from cloud via PD Repeater or not.

**User Note:** Shows notes created for registered device.

**Device file:** Sets device filename for the serial port to wait for connections from PLC devices.

**Baud rate:** Selects baud rate for the serial port to wait for connections from PLC devices.

**Parity bit (RTU):** Selects parity bit for the serial port.

**Data bit (RTU):** Selects data bit for the serial port.

**Stop bit (RTU):** Selects stop bit for the serial port.

**Unit ID:** Sets the Modbus unit ID on the OpenBlocks IoT Family side waiting for connections from PLC device. Unit ID is a numerical value between 1 and 247.

**Tx/Rx setting:** Check boxes for destinations with "Enable" selected will become available for selection. Transmission will be made to destinations with a checked check box. If checking the box, setting items unique to the

destination will be displayed. For settings unique to destinations, refer to "2-4-2. Settings for individual Tx/Rx destinations."

\*Multiple Modbus server devices whose Device Type (waiting type) is set to "RTU" can be registered, but if the **Device file** settings overlap, performance cannot be guaranteed.

\*If multiple Modbus service devices are registered, the register map will be shared by multiple Modbus server devices. As a result, these Modbus server devices are the input/output devices of the Modbus server.

## 2-4-9. Setting for High Voltage Smart Meter (B-route). (For domestic use in Japan only)

PD Handler HVSMC is used to acquire data based on the specification of ECHONET Lite and AIF from the high voltage smart power meter (B-route) and send it to the cloud via PD Repeater.

Use the **Setting for High Voltage Smart Meter (B-route)** menu in the **[IoT data]-[Tx/Rx setting]** tab, it is possible to perform settings of this.

If the **Setting for High Voltage Smart Meter (B-route)** menu is not displayed, refer to Chapter 2-3 "Application setup for IoT data control", and set PD Handler HVSMC to "Enable". In addition, PD Handler HVSMC needs to open this port as it will listen for data using the UDP port (3610) from the high voltage smart port meter. Therefore, please set ECHONET(HVSMC) to "Enable" on the **Filter open Settings** menu in the **[System]-[Filter]** tab.

For OpenBlocks IoT Family BX series without built-in Ethernet I / F, this function is not supported because ECHONET Lite and AIF certification can not be approved.

Choosing "Enable" will display individual setup items.

**Device number:** This is controlled by the OpenBlocks IoT Family WEB UI and cannot be modified.

**Time span to thin out data[ms]:** Sets the time input data is not received in order to thin out time in milliseconds. If set to "0", data will not be thinned out.

**Buffer size:** Sets maximum size of data in bytes.

**Communication Interface:** Select the Ethernet I/F to which the high voltage smart power meter is connected.

**Raw Data Mode:** Send the acquired data to the PD Repeater without converting it.

**Demand power acquisition setting:** Sets whether to obtain maximum demand electric

Settings for High Voltage Smart Meter(B-route)

Tx/Rx settings: ☒ Enable ☐ Disable

Device number: device\_hvsmc

Time span to thin out data[ms]: 0

Buffer size: 4096

Communication interface: eth0

Raw Data Mode: Disable

Demand power acquisition setting: Enable

Measurement acquisition setting: Enable

Measurement value acquisition time interval[min]: 30

User Note: hoge

Tx/Rx setting:

<input type="checkbox"/> pd_ex	<input type="checkbox"/> iotub	<input type="checkbox"/> iotub_ws	<input type="checkbox"/> awsiot	<input type="checkbox"/> awsiot_ws
<input type="checkbox"/> iotcore	<input type="checkbox"/> w4g	<input type="checkbox"/> eventhub	<input type="checkbox"/> kinesis	<input type="checkbox"/> w4d
<input type="checkbox"/> t4d	<input type="checkbox"/> kddi_std	<input type="checkbox"/> pd_web	<input type="checkbox"/> web	<input type="checkbox"/> mqtt
<input type="checkbox"/> ittcp				

power when the fixed time measurement value is sent from the high voltage smart power meter.

**Measurement acquisition setting:** Sets whether to acquire accumulated power at the following acquisition time interval or not.

**Measurement value acquisition time interval[min]:** Specify the acquisition time interval of accumulated power in minutes.

**User Note:** It can set comments on the setting information. This user note may be used for data communication with the cloud.

**Tx/Rx setting:** Check boxes for destinations with "Enable" selected will become available for selection. Transmission will be made to destinations with a checked check box. If checking the box, setting items unique to the destination will be displayed. For settings unique to destinations, refer to "2-4-2. Settings for individual Tx/Rx destinations."

#### ■ Data acquisition timing

PD Handler HVSMC acquires data from the high voltage smart power meter at the following four timings and sends it to PD Repeater.


1. When the PD Handler HVSMC starts up.
2. Regular time measurement every 30 minutes and power demand acquisition by autonomous operation of high voltage smart power meter.
3. Measurement value acquisition based on acquisition time interval set in the PD Handler HVSMC.
4. Operation status notification from high voltage smart power meter

The acquired data and sequence at each acquisition timing are shown below.  
In the table, EPC is stands for ECHONET Propaty Code.

1. When the PD Handler HVSMC starts up.

Data type	EPC	Acquired data
Operating Status	0x80	Operating Status
ECHONET Lite Property Information	0x82	Standard version number
	0x9D	State transition announcement property map
	0x9E	Set property map
	0x9F	Get property map
	0x8D	Serial number
High Voltage Smart Power Meter Property Information	0xD3	Coefficient
	0xD4	Scale factor
	0xE0	Fixed date
	0xE5	Number of significant digits of accumulated active power
	0xE6	Unit of cumulated effective electric power
	0xC4	Number of significant digits of demand power
	0xC5	Unit of Demand Power
	0xC7	Unit of cumulative maximum demand power
	0xCC	Number of significant digits of cumulative reactive power amount (lag phase)
	0xCD	Unit of cumulative reactive power amount (lag phase)

List of Acquired data when PD Handler HVSMC starts up.

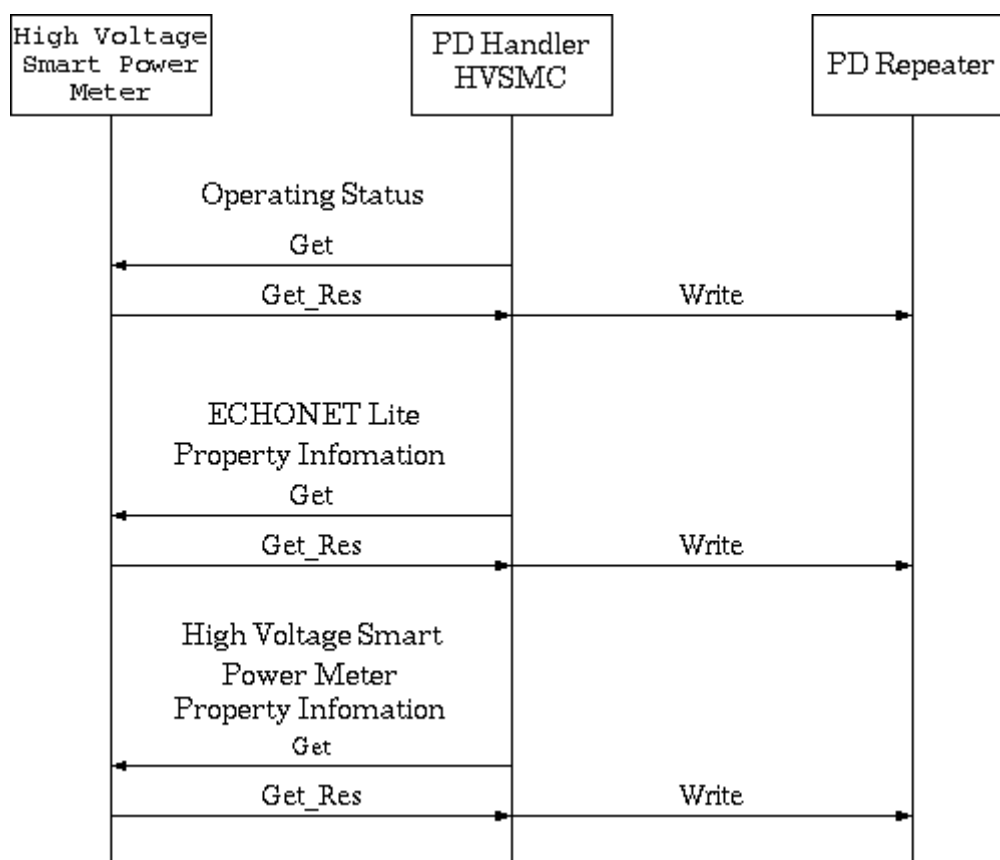


Acquisition timing when PD Handler HVSMC starts up.

2. Regular time measurement every 30 minutes and power demand acquisition by autonomous operation of high voltage smart power meter.

Data type	EPC	Acquired data
Fixed Time measurement value (0 minutes per hour, 30 minutes)	0xE3	Predetermined accumulated active power amount measurement value
	0xC3	Scheduled demand power
	0xCB	Regular power measurement Integrated reactive power (lag phase) measurement value
Demand power (data request at the timing of receiving the fixed measurement value)	0xC1	Maximum demand power per month
	0xC2	Cumulative maximum demand power

List of Acquired data for Punctual measurement and demand power

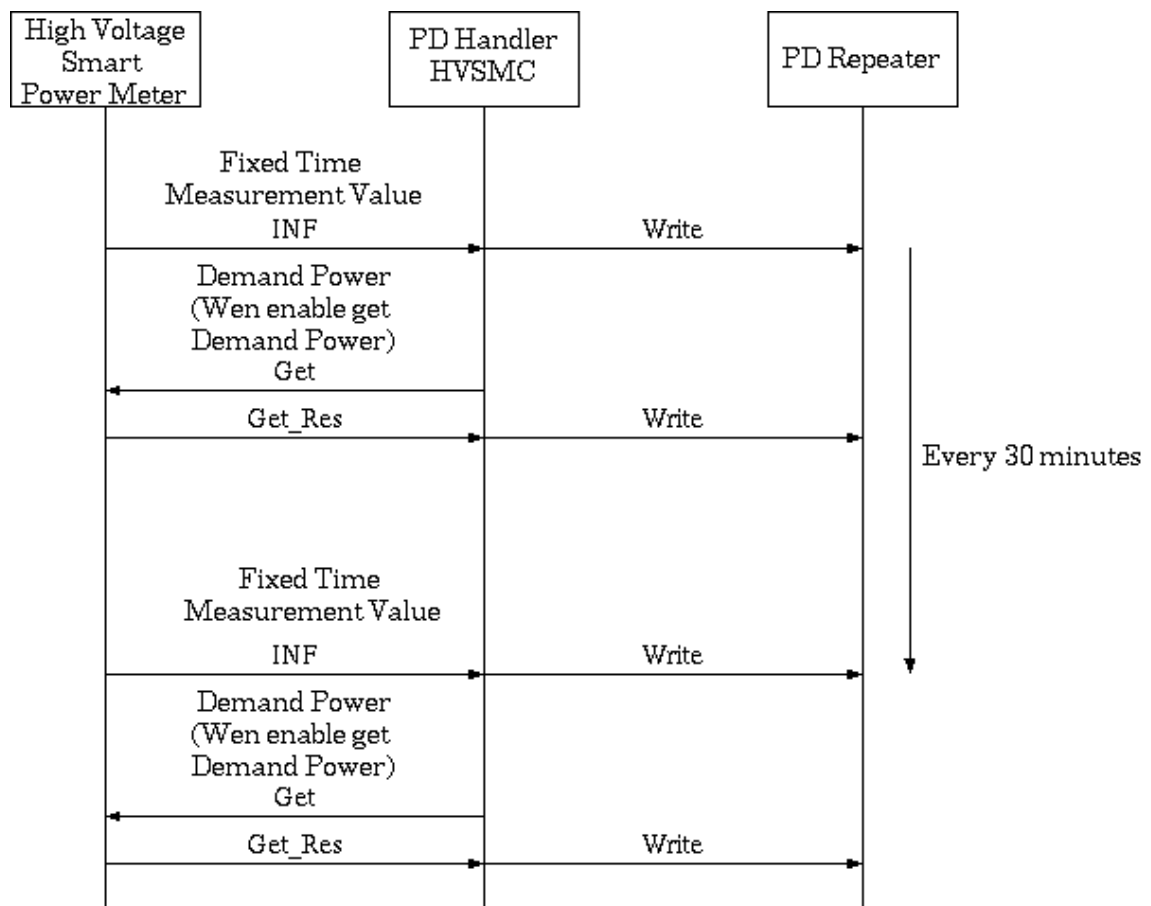


Acquisition timing for demand power



3. Measurement value acquisition based on acquisition time interval set in the PD Handler HVSMC.

Data type	EPC	Acquired data
Measurement Value	0xE2	Cumulated effective power amount measurement value
	0xE4	Measured cumulative active power amount
	0xCA	Measurement integrated value reactive power amount (lag phase) measured value

List of Acquired data for measurement value

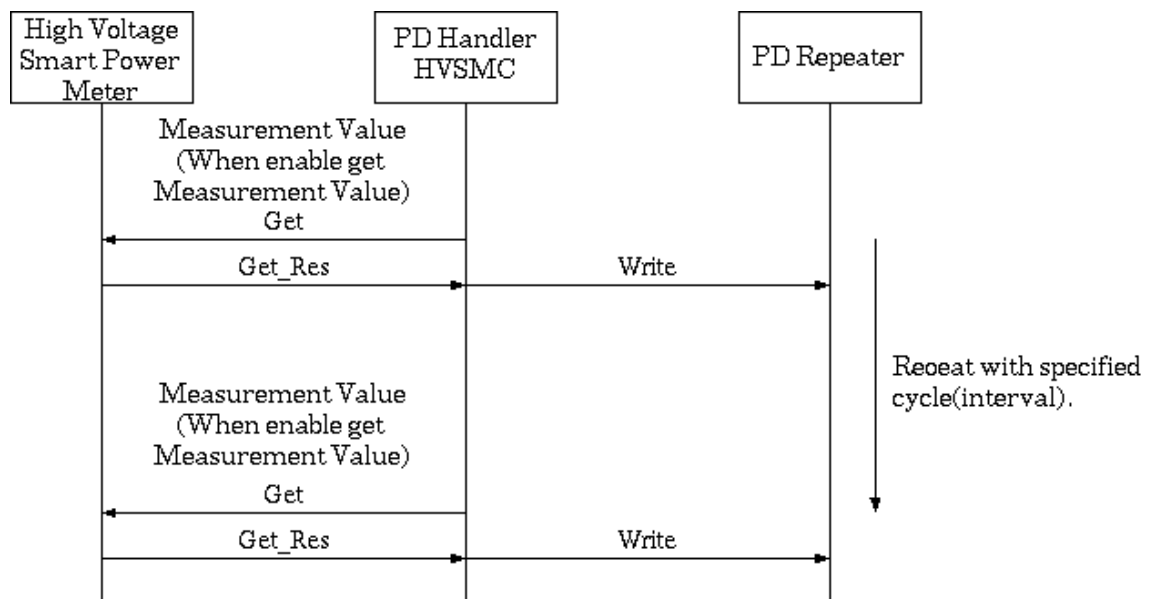


Acquisition timing for measurement value

4. Operation status notification from high voltage smart power meter

Data type	EPC	Acquired data
Operating Status	0x80	Operating Status
Abnormal Status	0x88	Abnormal Status

List of data for operation status notification

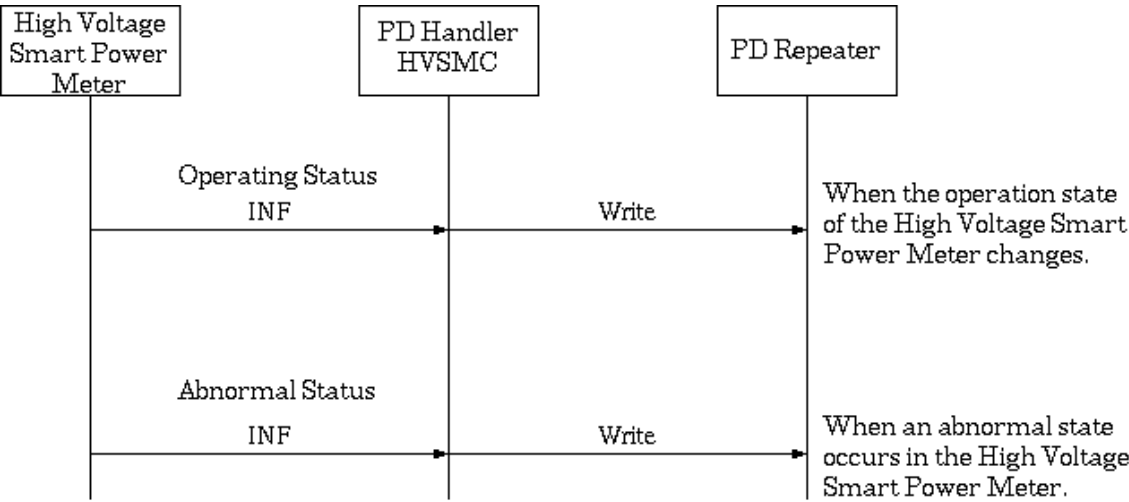

Timing for operation status notification

## 2-4-10. Setting for User defined device


Instead of using standard OpenBlocks IoT Family data collection application (PD Handler), users can independently prepare an application to handle data and cooperate with the PD Repeater.

Use the **Setting for User defined device** menu in the **[IoT Data]-[Tx/Rx setting]** tab, it is possible to make settings for a user-defined device.

To use a user-defined device, a user device must be registered in the **[Basic]-[User Dev. regis.]** tab as the basic setup of the service function.

For basic setup of the service function, refer to Chapter 5 of the OpenBlocks IoT Family WEB UI Set-up Guide.

The registration of a user-defined device refers to the operation of allocating a device number and adding note information.

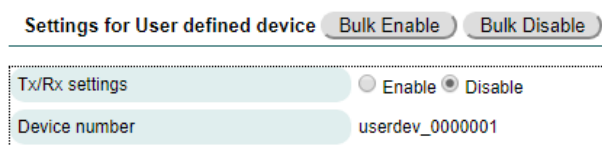

If a user-defined device is already registered, default settings are as in the figure on the left.

\*Here, only one device is registered.

Choosing "Enable" for Tx/Rx setting for each device will display setup items.

\*The "Bulk Enable" and "Bulk Disable" buttons will set all settings to "Enable" or "Disable."

Choosing "Enable" will display individual setup items.

**Device number:** This is controlled by the OpenBlocks IoT Family WEB UI and cannot be modified.


**Time span to thin out data[ms]:** Sets the time input data is not received in order to thin out time in milliseconds. If set to "0", data will not be thinned out.

**Buffer size:** Sets maximum size of data in bytes.

**Receive setting:** Selects if control messages from cloud are received via PD Repeater.

**User Note:** Shows notes created for registered device.

**Tx/Rx setting:** Check boxes for destinations

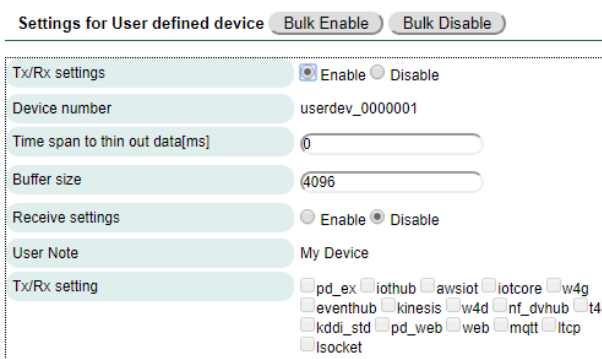

with "Enable" selected will become available for selection. Transmission will be made to destinations with a checked check box. If checking the box, setting items unique to the destination will be displayed. For settings unique to destinations, refer to "2-4-2. Settings for individual Tx/Rx destinations."

## 2-5. Downstream control

This section explains the downstream control function to receive messages from cloud, etc. and how to control PLC devices supporting Modbus.

### 2-5-1. Overview of downstream control


Software modules that provide an IoT data control function use a UNIX domain socket for inter-process communication. Downstream control also operates using a UNIX domain socket.

Of destinations supported by the PD Repeater, downstream control supports MQTT protocol-based cloud service, PD Exchange(pd\_ex), the web server of Plat'Home's original specifications(pd\_web) and TCP(ltcp) connections.

With MQTT protocol-based and TCP connections, downstream control operates with an always-on connection for both transmission/reception (Pub/Sub) and for PD Exchange, while periodically performing polling to determine if there are any control messages.

The web server of Plat'Home's original specifications deals with response messages at the time of data transmission as downstream control messages.


Control messages from upstream (cloud) are transferred to downstream software modules such as PD Handler Modbus Client from a UNIX domain socket via the PD Repeater. Downstream software modules return control results to cloud via the PD Repeater using a UNIX domain socket for data transmission.

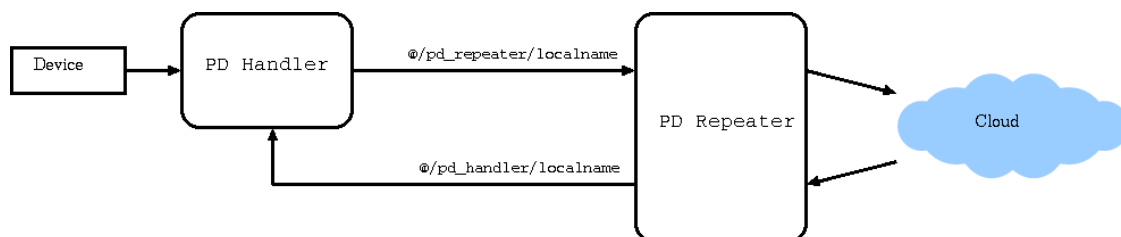

Control messages assume a JSON character string, yet as information that cannot be included in payload may be required as control requirement on the cloud side, and while topics may be required for MQTT, command IDs for PD Exchange, response headers for web server of Plat'Home's original specifications and port numbers for TCP connection, the said information as well as a hash value (MD5) is added when control messages are transferred from the PD Repeater to downward software modules.

The hash value of a control message is used to clarify to which control message control results from downstream software modules respond to.

Taking the example of cloud connected with MQTT protocol, the flow of downstream control is explained below.

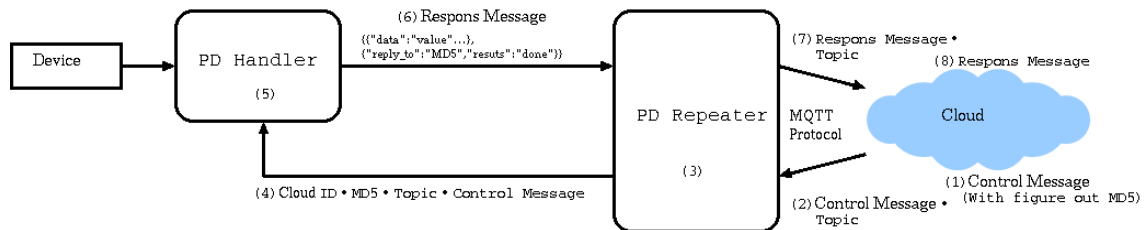

- (1) Calculates the hash value (MD5) for control messages.
- (2) Publishes a control message using MQTT protocol.
- (3) Based on the control message, calculates its hash value (MD5).
- (4) Transfers the control message to a downstream software module, together with cloud ID (number for convenience on PD Repeater), hash value of control message (MD5) and topic.
- (5) Based on the control message, performs the processing.
- (6) Returns a response message with process results, in addition to the hash value of the control message (MD5).
- (7) Publishes the control message via MQTT protocol.
- (8) Comparing the hash value on the response message (MD5) and that calculated in (1) (MD5) will clarify to which control message the control message addresses.

## 2-5-2. Downstream messages of PD Repeater

If using the IoT data control function incorporated in the OpenBlocks IoT Family as-is, no additional attention is needed for this item.

■ Shown below is the format of a message to be transferred to downstream software module by the PD Repeater.

Cloud ID (1Byte)	Sub ID (1Byte)	Header Size (2Bytes)	MD5 (16Bytes)	Header	Payload
---------------------	-------------------	-------------------------	------------------	--------	---------

Cloud ID (1 Byte): Number of the sender and destination protocol on PD Repeater assigned for convenience.

Sub ID (1 Byte): Sub-number ("0x00" or "0x01") of the sender and destination protocol on PD Repeater

assigned for convenience.

Header Size (2 Bytes): Size of header added by PD Repeater.

Header: MQTT topic or HTTP response header added by PD Repeater.

Payload: Control message sent from cloud.

■ Table below shows the details of Cloud ID and header

Cloud	Cloud ID	Downstream control	Header description
PD Exchange	0x00	Supported	Command ID, ApplicationID
MQTT server	0x01	Supported	MQTT reception topic
Watson IoT for Device	0x02	Supported	MQTT reception topic
Amazon Kinesis	0x03		
<Reserved>	0x04		
<Reserved>	0x05		
WEB server	0x06		
AWS IoT	0x07	Supported	MQTT reception topic
MS Azure Event hubs	0x08		
Watson IoT for Gateway	0x09	Supported	MQTT reception topic
MS Azure IoT Hub	0x0a	Supported	MQTT reception topic
Toami for DOCOMO	0x0b		
Domain socket	0x0c		
KDDI IoT Cloud Standard	0x0d		
IoT device hub	0x0e	Supported	MQTT reception topic
Web server of Plat'Home's original specifications	0x0f	Supported	HTTP response header
Google IoT Core	0x10	Supported	MQTT reception topic
TCP	0x11	Supported	Destination IP address and port number
AWS IoT[Websocket]	0x12	Supported	MQTT reception topic
MS Azure IoT Hub[Websocket]	0x13	Supported	MQTT reception topic

Cloud ID and contents of header

For Watson IoT, as payload is set as a JSON object of "d" key, after obtaining hash value (MD5), decodes and outputs only JSON object of "d" key as control message.

For IoT Device Hub, as payload is a JSON object of a "parameters" key, after obtaining the

hash value (MD5), decodes and outputs only JSON object of "parameters" key as control message.

Destination IP address and port number of TCP socket are added with the following JSON character string.◦

```
{“ip_addr”:”<IP address>”,“port”:<port>}
```



### 2-5-3. Downstream control of Modbus client/server

This section explains the downstream control of PD Handler Modbus.

In order to use the downstream control of PD Handler Modbus, it is necessary to understand the function codes used by Modbus.

Shown below is a list of function codes used by PD Handler Modbus.

Code	Name	Description
0x01	Read Coils	Reads bit value set for digital output.
0x02	Read Discrete Input	Reads bit value of digital input.
0x03	Read Holding Registers	Reads value set in register output.
0x04	Read Input Registers	Reads register input value.
0x05	Write Single Coil	Writes bit value to digital output 1 bit.
0x06	Write Single Register	Writes value to register output 1 register.
0x07	Read Exception Status	Notifies error status between Modbus server/client.
0x09	Write Single Discrete Input	Writes bit value to digital input 1 bit.
0x0a	Write Single Input Register	Writes value to register input 1 register.
0x0f	Write Multiple Coils	Writes bit values to multiple consecutive digital outputs.
0x10	Write Multiple Registers	Writes values to multiple consecutive register outputs.
0x11	Report Slave ID	Notifies IDs of slave (server) devices that can be connected.
0x13	Write Multiple Discrete Input	Writes bit values to multiple consecutive digital inputs.
0x14	Write Multiple Input Registers	Writes values to multiple consecutive register inputs.
0x16	Mark Write Registers	Masks register output.
0x17	Write and Read Registers	Writes values to multiple consecutive register outputs and reads their values.

Modbus Function Code for PD Handler

00x09, 0x0a, 0x13, 0x14 are proprietary expansion functions that are different from original Modbus protocol prepared to be able to set digital input or register input of PD Handler Modbus Server without physical input from cloud side.

Modbus function codes are set to "function" keys in the JSON character string in the configuration file of PD Handler Modbus (pd\_handler\_modbus\_client.conf, pd\_handler\_modbus\_server.conf) or downstream control.

In CSV file (pd\_handler\_modbus\_client.csv), it is set to a third column as "reading method". It is possible to set function code in a hexadecimal notation starting from "0x" to the value of function keys and strings. It is also possible to use integer notation and string notation in

addition to hexadecimal notation.

Shown below is a list of function codes that can be used for function keys.

Code	Name	Integer notation	String notation
0x01	Read Coils	1	read_coils
0x02	Read Discrete Input	2	read_discrete_input
0x03	Read Holding Registers	3	read_holding_registers
0x04	Read Input Registers	4	read_input_registers
0x05	Write Single Coil	5	write_single_coil
0x06	Write Single Register	6	write_single_register
0x07	Read Exception Status	7	read_exception_status
0x09	Write Single Discrete Input	9	write_single_input_register
0x0a	Write Single Input Register	10	write_single_input_register
0x0f	Write Multiple Coils	15	write_multiple_coils
0x10	Write Multiple Registers	16	write_multiple_register
0x11	Report Slave ID	17	report_slave_id
0x13	Write Multiple Discrete Input	19	write_multiple_discrete_input
0x14	Write Multiple Input Registers	20	write_multiple_input_registers
0x16	Mark Write Registers	22	mark_write_registers
0x17	Write and Read Registers	23	write_and_read_registers

List of function codes that can be used for function keys

## 2-5-3-1. Modbus client

This section explains the downstream control of PD Handler Modbus Client.

Shown below is a list of objects for JSON character strings used in downstream control of PD Handler Modbus Client.

Key	Data type	Required	Description
protocol	String	○	"tcp" for TCP-connected device and "rtu" for RTU-connected device
node	String	△	IP address of TCP-connected PLC device
port	String	△	Port number of TCP-connected PLC device
device	String	△	Device file for RTU-connected PLC device
unit	Integer	○	Modbus ID of PLC device: 1 ~ 247 or 255 (for TCP connection only)
function	String or integer	○	Codes described in next table, "Function codes that can be used for PD Handler Modbus Client" among function codes are explained in Chapter 2-5-3.
data_type	String or integer	-	One of the following: Unsigned 16 bit integer: "uint16_t" or "0" Signed 16 bit integer: "int16_t" or "1" Unsigned 32 bit integer/little endianness: "uint32lsb_t" or "2" Signed 32 bit integer/little endianness: "int32lsb_t" or "3" Unsigned 32 bit integer/big endianness: "uint32msb_t" or "4" Signed 32 bit integer/big endianness: "int32msb_t" or "5" If not designated, unsigned 16 bit integer
address	String or integer	-	Sets start address on the PLC device to which data is or will be stored. If '0x' is appended to the beginning of a character string, will be interpreted as a hexadecimal notation.
number	String or integer	-	Sets register number to be read/written. If not designated, "1".
values	Integer array	△	An array of data to be written (integer)

JSON character string objects used for downstream control by PD Handler Modbus Client

Shown in table below are function codes that can be used for PD Handler Modbus Client

Code	Name	Can be used or not
0x01	Read Coils	<input type="radio"/>
0x02	Read Discrete Input	<input type="radio"/>
0x03	Read Holding Registers	<input type="radio"/>
0x04	Read Input Registers	<input type="radio"/>
0x05	Write Single Coil	<input type="radio"/>
0x06	Write Single Register	<input type="radio"/>
0x07	Read Exception Status	
0x09	Write Single Discrete Input	
0x0a	Write Single Input Register	
0x0f	Write Multiple Coils	<input type="radio"/>
0x10	Write Multiple Registers	<input type="radio"/>
0x11	Report Slave ID	<input type="radio"/>
0x13	Write Multiple Discrete Input	
0x14	Write Multiple Input Registers	
0x16	Mark Write Registers	
0x17	Write and Read Registers	<input type="radio"/>

Function codes that can be used for PD Handler Modbus Client

For example, to read from a TCP-connected input resistor, the following control message will be sent from cloud.

```
{
  "protocol": "tcp", "node": "192.168.1.8", "port": "502", "unit": "255",
  "function": "0x04", "data_type": "uint16_t", "address": "0x160", "number": 5
}
```

Response message will be as follows:

```
{
  "time": "2017-09-05T15:30:05.758+09:00",
  "reply_to": "452556d8daf1f7eb483d00ee03718e8e", "result": "done",
  "memo": "Modbus Client 00",
  "protocol": "tcp", "node": "192.168.1.8", "port": "502",
  "unit": "255", "address": "352", "function": "4", "data_type": "uint16_t",
  "values": [65535, 0, 1, 2, 3]
}
```

Here, "reply\_to" is the hash value (MD5) of control message.

To write a value to the output resistor on a PLC device serially connected, a message like the following will be sent from cloud.

```
{
  "protocol": "rtu", "device": "/dev/ttyEX1",
  "unit": 16, "function": "0x10", "data_type": "uint32lsb_t", "address": "0x120",
  "number": 2, "values": [4567, 891011]
}
```

Here, if "data\_type" is 32 bits, "values" will be divided into upper and lower 16 bits and processed. Therefore, even if "number" is "1", function must use "Write Multiple Registers".

Response message will be as follows:

```
{
  "time": "2017-09-05T16:35:13.653+09:00",
  "reply_to": "fe9b49ff045f435a371303a82281f3f9", "result": "done",
  "memo": "Modbus Client 01",
  "protocol": "rtu", "device": "/dev/ttyMDF1",
  "unit": 16, "address": 288, "function": 16, "data_type": "uint32_t",
  "values": [4567, 891011]
}
```

Note that (connection methods to) PLC devices designated by "protocol", "node", "port" and "device" must be registered as Modbus client devices and use settings enabled.

## 2-5-3-2. Modbus server

This section explains the downstream control of PD Handler Modbus Server.

Shown below is a list of objects for JSON character strings used in downstream control of PD Handler Modbus Server.

Key	Data type	Required	Description
function	String or integer	○	Codes described in next table, "Function codes that can be used for PD Handler Modbus Client" among function codes are explained in Chapter 2-5-3.
data_type	String or integer	-	One of the following: Unsigned 16 bit integer: "uint16_t" or "0" Signed 16 bit integer: "int16_t" or "1" Unsigned 32 bit integer/little endianness: "uint32lsb_t" or "2" Signed 32 bit integer/little endianness: "int32lsb_t" or "3" Unsigned 32 bit integer/big endianness: "uint32msb_t" or "4" Signed 32 bit integer/big endianness: "int32msb_t" or "5" If not designated, unsigned 16 bit integer
address	String or integer	-	Sets start address on the PLC device to which data is or will be stored. If '0x' is appended to the beginning of a character string, will be interpreted as a hexadecimal notation. If not designated, "0x00"
number	String or integer	-	Sets register number to be read/written. If not designated, "1".
values	Integer array	△	An array of data to be written (integer)

JSON character string objects used for downstream control by PD Handler Modbus Server

Different from PD Handler Modbus Client, the register map of PD Handler Modbus Server itself will be operated, therefore, "node" or "device" key settings are not required.

Shown in table below are function codes that can be used for PD Handler Modbus Server.

Code	Name	Can be used or not
0x01	Read Coils	<input type="radio"/>
0x02	Read Discrete Input	<input type="radio"/>
0x03	Read Holding Registers	<input type="radio"/>
0x04	Read Input Registers	<input type="radio"/>
0x05	Write Single Coil	<input type="radio"/>
0x06	Write Single Register	<input type="radio"/>
0x07	Read Exception Status	
0x09	Write Single Discrete Input	<input type="radio"/>
0x0a	Write Single Input Register	<input type="radio"/>
0x0f	Write Multiple Coils	<input type="radio"/>
0x10	Write Multiple Registers	<input type="radio"/>
0x11	Report Slave ID	
0x13	Write Multiple Discrete Input	<input type="radio"/>
0x14	Write Multiple Input Registers	<input type="radio"/>
0x16	Mark Write Registers	
0x17	Write and Read Registers	<input type="radio"/>

Function codes that can be used for PD Handler Modbus Server

For example, to read from an input resistor, the following control message will be sent from cloud.

```
{
  "function": "0x04", "data_type": "uint16_t", "address": "0x160", "number": 5
}
```

Response message will be as follows:

```
{
  "time": "2017-09-05T15:30:05.758+09:00",
  "reply_to": "452556d8daf1f7eb483d00ee03718e8e", "result": "done",
  "memo": "Modbus Server 00",
  "protocol": "tcp", "node": "192.168.1.8", "port": 502,
  "unit": 255, "address": 352, "function": 4, "data_type": "uint16_t",
  "values": [65535, 0, 1, 2, 3]
}
```

Here, "reply\_to" is the hash value (MD5) of control message.

Though the register map does not differentiate "node", "port" or "device", as they are positioned as individual Modbus server devices with a different device number from PD

Repeater, response message will be appended with "node", "port" or "device" to form a counterpart to UNIX domain socket that receives a control message from the PD Repeater.

To write a value to the input register, a message like the following will be sent from cloud.

The input resistor is essentially a resistor physically set via an AD converter, etc., but with PD Handler Modbus Server, the register map can be written over by downstream control.

```
{
  "function": "0x14", "data_type": "uint32_t", "address": "0x140", "number": 4,
  "values": [4567, 8910, 561, 435]
}
```

Here, if "data\_type" is 32 bits, "values" will be divided into upper and lower 16 bits and processed. Therefore, even if "number" is "1", function must use "Write Multiple Registers".

Response message will be as follows:

```
{
  "time": "2017-09-05T16:35:13.653+09:00",
  "reply_to": "d5bcc347ad36fa6e7090d0f763108882", "result": "done",
  "memo": "Modbus Server 01",
  "protocol": "rtu", "device": "/dev/ttyEX1",
  "unit": 17, "address": 320, "function": 20, "data_type": "uint32_t",
  "values": [4567, 8910, 561, 435]
}
```



## 2-5-4. PD Agent

PD Agent receives control messages (JSON character strings) from the PD Repeater and with preset key and value matched, carries out execution objects, as prepared by the user or shell script. (Comparison condition in the PD Agent is perfect match in string type).


PD Agent is an application prepared on the assumption that by using user-defined config. setups, it will cooperate with PD Handler BLE, etc. that does not have any downstream control function. In this chapter, however, instead of cooperation with the PD Handler, we will take the example of a method to enable the application to be registered as a user-defined device and work independently to explain how to use it.

### 2-5-4.1. Registration of user-defined device and setup of sender and destination

1. Register the PD Agent as a user-defined device using **[Basic]-[User Dev. regist. ]** tab.  
If operated as multiple devices as in the case where there are multiple senders and destinations, register multiple devices.  
For basic setup of the service function, refer to Chapter 5 of the OpenBlocks IoT Family WEB UI Set-up Guide.  
Registration of a user-defined device is a process that involves assigning a device number and adding note information.
2. Use the **Application control** menu in the **[IoT Data]-[App setting]** tab, set the PD Agent to be started up.  
For startup settings of applications, refer to Chapters 2 and 3.
3. Use the **Tx/Rx setting** menu in the **[IoT Data]-[Tx/Rx setting]** tab, choose a sender and destination and setup a setting not depending on individual devices in the **Tx/Rx setting** menu.  
For transmission/reception settings, refer to Chapter 2-4-2.
4. Use the **Setting for User defined device** menu in the **[IoT Data]-[Tx/Rx setting]** tab, set transmission and reception setup for a user-defined device.  
For transmission/reception settings of a user-defined device, refer to Chapter 2-4-8.

## 2-5-4-1. PD Agent setup

Can set the PD Agent using the [IoT Data]-[PD Agent] tab.

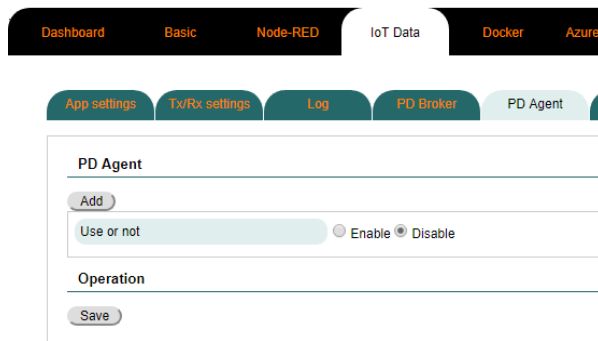

The figure on the left shows the default screen.

Set To be use to "Enable" the showing of setting items.

To set up multiple devices, press the Add button to add the setup form.

Set To be use to "Enable" the showing of setting items.

**To be use:** Selects if this setup is enabled or disabled.

**Local name:** Usually, it is the device number assigned to device.

**Buffer size:** Sets maximum size of data in bytes, match this value with that on device side.

**Binding socket:** Pathname of the UNIX domain socket to receive control messages.

In this example, set to:

@/pd\_handler/userdev\_0000001.sock

Details will be given in the margin.

**Destination socket:** Pathname of the UNIX domain socket to send response messages.

In this example:


@/pd\_repeater/userdev\_0000001.sock

Details will be given in the margin.

**Execution process (Add):** To set more than one condition key, condition value, command to execute and argument of the command, use the Add key.

**Processing name:** Gives name of the process.

**Reply settings:** Sends response message

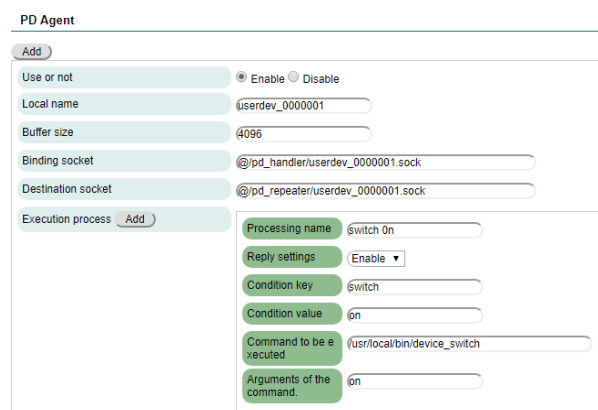

when this item is set to "Enable." This is used when the command to execute does not have a function to return a message.

**Condition key:** Sets a JSON character string key included in the control message to be evaluated as an execution condition of an object designated in Command to execute.

**Condition value:** Sets value of JSON character string included in the control message to be evaluated as an execution condition of an object designated in Command to execute.

**Execution command:** Sets pathname of an execution object or shell script to be executed when the key designated by Condition key and value designated in Condition value are included in control message.

**Arguments of command:** Sets argument of execution command.

#### \*Binding socket

This is the pathname of UNIX domain socket to receive control messages.

As a device, it uses a user-defined device. In this example where it directly receives control messages from the PD Repeater, set to "@/pd\_handler/userdev\_0000001.sock".

The prefix, "@", means that the pathname is an abstract UNIX domain socket, and if wait for an execution object that does not support abstract UNIX domain socket names, it will be a pathname that exists in a file system like, "/tmp/pd\_agent\_0000001.sock".

#### \*Pathname of destination socket

This is the pathname of UNIX domain socket to send response messages.

As a device, it uses a user-defined device. In this example where it directly receives control messages from the PD Repeater, set to "@/pd\_repeater/userdev\_0000001.sock".

The prefix, "@", means that the pathname is an abstract UNIX domain socket, and if wait for an execution object that does not support abstract UNIX domain socket names, it will be a pathname that exists in a file system like, "/tmp/ anyobject\_0000001.sock".

## 2-5-4-2. PD Agent setup and control messages

Shown below are examples of the PD Agent settings and control messages.

- 1 . Control message for the settings below will be " {"switch": "on"}".

Processing name	<input type="text" value="switch on"/>
Reply settings	<input type="button" value="Enable"/> <input type="button" value="v"/>
Condition key	<input type="text" value="switch"/>
Condition value	<input type="text" value="on"/>
Command to execute	<input type="text" value="/usr/local/bin/device_switch"/>
Arguments of the command.	<input type="text" value="on"/>

If a matching control message is received, "/usr/local/bin/device\_switch on" will be executed.

- 2 . Control message for the settings below will be " {"switch": "off"}".

Processing name	<input type="text" value="switch off"/>
Reply settings	<input type="button" value="Enable"/> <input type="button" value="v"/>
Condition key	<input type="text" value="switch"/>
Condition value	<input type="text" value="off"/>
Command to execute	<input type="text" value="/usr/local/bin/device_switch"/>
Arguments of the command.	<input type="text" value="off"/>

If a matching control message is received, "/usr/local/bin/device\_switch off" will be executed.

3. Control message for the settings below will be " {"report": "do"}".

Processing name	<input type="text" value="report"/>
Reply settings	<input type="button" value="Disable"/> <input type="button" value="v"/>
Condition key	<input type="text" value="report"/>
Condition value	<input type="text" value="do"/>
Command to execute	<input type="text" value="/usr/local/bin/device_report"/>
Arguments of the command.	<input type="text"/>

If a matching control message is received, "/usr/local/bin/device\_report" will be executed.

4. In the above example, if the control message is " {"switch": "on", "report": "do"}", "/usr/local/bin/device\_switch on" and "/usr/local/bin/device\_report" will be executed.

If a message to be applied with multiple execution conditions is received, processes will be executed in series. However, the order of execution will not be fixed.

### 2-5-4-3. Succession to environmental variables

When control messages (as JSON character strings) include the key and value to be used as execution conditions of an execution object or shell scrip and the value is either a string or numerical value, they will be set up as environmental variables and succeeded by the execution object or shell script.

For example, in the example below, if a control message, " {"switch": "on", "report": "do","page": 40} " is received, the following environmental variables will be succeeded in command execution.

```
switch="on"
report="do"
page=40
```

In addition, regardless of the content of control messages, the PD agent will succeed the following values as environmental variables to execution objects or shell scripts in executing the execution object or shell script.

Environmental variable	Data type	Description
request_cloud_id	Integer	Cloud ID described in Chapter 2-5-2
request_sub_id	Integer	Sub ID described in Chapter 2-5-2
request_header	String	Header described in Chapter 2-5-2
request_md5	String	Hash value of control message described in Chapter 2-5-2
request_payload	String	Payload sent from cloud
agent_localname	String	Local name set in Local name in Chapter 2-5-4-1
agent_bind	String	Binding socket name set in Binding socket in Chapter 2-5-4-1
agent_push_to	String	Destination socket name set in Destination socket in Chapter 2-5-4-1
agent_buffer_size	Integer	Buffer size set in Buffer size in Chapter 2-5-4-1

Parameters succeeded to execution object or shell script as environmental variables

## 2-5-4-4. Response messages

When Reply settings in Chapter 2-5-4-1 are set to "Enable", the following response message will be returned as an execution status.

Execution command started up:

```
{“time”:“timestamp”,“reply_to”:“md5”,“result”:“queuing”,  
  “reason”:“matched”,“matched”:{“key”:“value”}}
```

Execution of execution command failed:

```
{“time”:“timestamp”,“reply_to”:“md5”,“result”:“faild”,  
  “reason”:“matched”,“matched”:{“key”:“value”}}
```

Execution of execution command completed:

```
{“time”:“timestamp”,“reply_to”:“md5”,“result”:“done”,  
  “reason”:“matched”,“matched”:{“key”:“value”}}
```

No matching key and value:

```
{“time”:“timestamp”,“reply_to”:“md5”,“result”:“not queuing”,  
  “reason”:“key and value not matched”}
```

Control message not a JSON character string:

```
{“time”:“timestamp”,“reply_to”:“md5”,“result”:“not queuing”,  
  “reason”:“not JSON form”}
```

Here, md5 is the hash value of control message described in Chapter 2-5-2, and {“key”: “value”} is matched Condition key and Condition value.

The execution status is a return value from `execv()` to call execution object or shell script and does not show the processing results of such an execution object or shell script. To achieve perfection of process, set response messages to return from the execution object or shell script to the UNIX domain socket that is succeeded by "agent\_push\_to" an environmental variable.

## 2-5-5. Message syntax depending on device control method

Topics of the MQTT protocol are used for control of Device Twins of IoT Hub and Device Shadow of AWS IoT.

Therefore, the PD Repeater controls the topic of the MQTT protocol by setting rules on the transmission message (input to PD Repeater) for IoT Hub and AWS IoT.

### 2-5-5. Azure IoT Hub Message syntax

To support Device Twins and Direct Method of IoT Hub, the following syntax is provided.

Get Device Twins Properties:

@GET <Request ID>

Notify Device Twins' property update:

@PATCH <Request ID>;{<Reported>}

Response to Direct Method:

@RES <Request ID>,<Status Code>;{<Any Payload>}

The parameters are as follows.

<Request ID> is request ID of Device Twins or Direct Method.

<Reported> is reported property of Device Twins with JSON object.

<Status Code> is execution status code of Direct Method.

<Any Payload> is response payload for Direct Method with JSON object.

In order to use these functions, it is necessary to develop applications that process downstream messages (Device Twins, Direct Method) from the IoT Hub.



## 2-5-5-2. AWS IoT Message syntax

To support Device Shadow of AWS IoT, the following syntax is provided.

Get Device Shadow:

@GET {}

Update Device Shadow:

@UPDATE {"state":{"reported": <Reported>}}

Delete Device Shadow:

@DELETE {}


<Reported> is reported property of Device Shadow with JSON object.

See chapter 2-4-2-5 or 2-4-2-6 for setting thingName.


Also, in order to receive the desired property from the AWS IoT service, it is necessary to develop an application that processes downstream messages from AWS IoT.

## 2-6. Log of IoT data control tool

The log of the IoT data control tool can be viewed using **[IoT data]-[Log]** tab

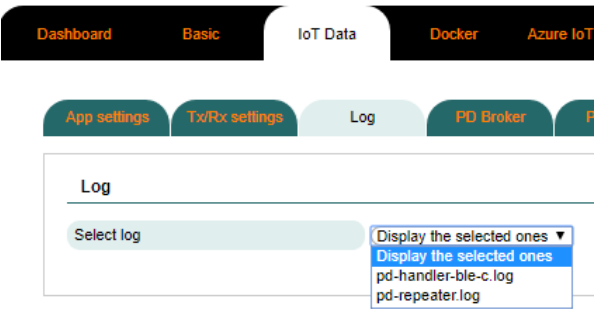

Select the log file you want to view from the pull-down menu.

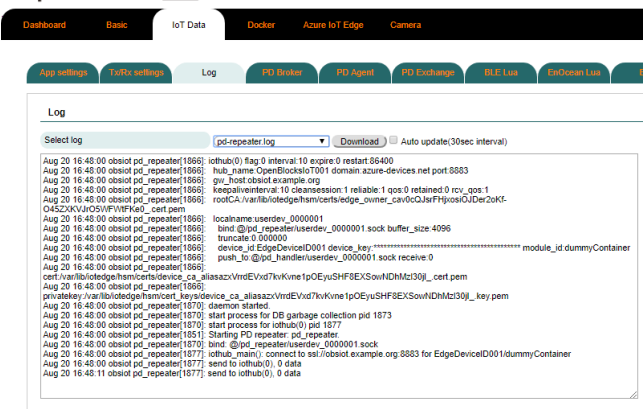


When selecting a log file, the end of the target log file is displayed.

In addition, you can download the log file by pressing the download button.

## 2-7. Confirm sensor data

[IoT Data]-[Display the data] tab is a display page for checking how the BLE sensor data is acquired. In order to display data, it is necessary to set the output to Local (lo) shown in section 2-4-2-1.

Example of graph drawing

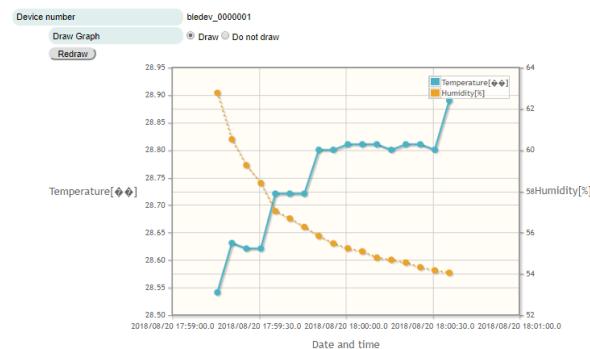

Perform graph drawing of temperature and humidity data of target sensor.

Click the "Redraw" button to draw the latest 20 data on the graph.

The humidity display of the sensor corresponding only to the temperature is drawn at "0%", the other hand, the temperature display of the sensor corresponding only to the humidity is drawn at "0 °C".

This graph is based on the acquisition time interval of sensor data collection. For a sensor whose scale does not match, adjust the acquisition interval.

Device number: bledev\_0000001

Draw Graph: ☐ Draw ☒ Do not draw

Display table data: ☒ Draw ☐ Do not draw

Refresh

0	deviceld	5c3f3ec11d64
	memo	TI CC2541
	accelX	-4.375
	accelY	0.9375
	accelZ	-1.625
	objectTemp	23.43
	ambientTemp	28.06
	gyroX	-36.7813
	gyroY	-15.8539
	gyroZ	-29.0451
	humidity	62.77
	temperature	28.54
	pressure	1011.56
	magX	-43.0298
	magY	36.4685
	magZ	122.6907
	time	2018-08-20T17:59:15.669+09:00
1	deviceld	5c3f3ec11d64
	memo	TI CC2541
	accelX	-2.8125
	accelY	1.5625
	accelZ	-2
	objectTemp	24.04
	ambientTemp	28.13
	gyroX	61.5788
	gyroY	249.9924
	gyroZ	-250
	humidity	60.51
	temperature	28.63
	pressure	1011.53
	magX	-40.5884
	magY	40.4653
	magZ	104.126
	time	2018-08-20T17:59:20.674+09:00

Example of table data display

Click the "Refresh" button to update the displayed contents to the latest data.


# Chapter 3 Customization

This section explains how to cooperate the IoT data control function of the OpenBlocks IoT Family and applications independently prepared by user.

## 3-1 Independently developed data collection application

This section describes how the user independently develops an application to collect data from individual devices instead of using our application (PD Handler) and have it cooperate with the PD Repeater to send data to cloud.

Shown below is a conceptual image:

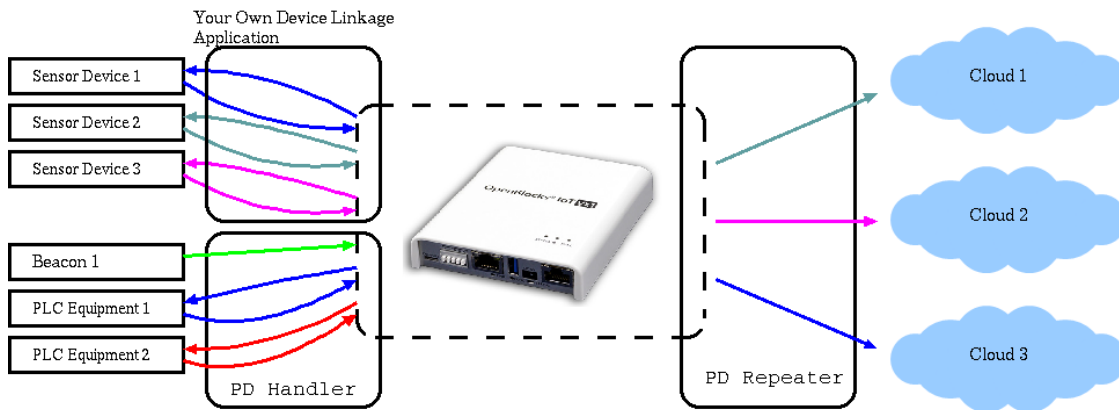

### 3-1-1 Registration of user-defined device and set up of sender and destination

1. Use the **[Basic]-[User Dev. regist.]** tab, it is possible to register an independently developed application as a user-defined device.  
For basic setup of the service function, refer to Chapter 5 of the OpenBlocks IoT Family WEB UI Set-up Guide.  
Registration of a user-defined device is a process that involves assigning a device number and adding note information.
2. If a device file used by an independently developed application conflicts with that of our application (PD Handler), disable the application using the **Application control** menu in the **[IoT Data]-[App setting]** tab to ensure it does not start up.
3. For the start/stop control of an independently developed application, refer to Chapter 3-3.

4. Use the **Tx/Rx setting** menu in the **[IoT Data]-[Tx/Rx setting]** tab, choose a sender and destination and setup a setting not depending on individual devices in the **Tx/Rx setting** menu.

For transmission/reception settings, refer to Chapter 2-4-2.

5. Use the **Setting for User defined device** menu in the **[IoT Data]-[Tx/Rx setting]** tab, set transmission and reception setup for a user-defined device.

For transmission/reception settings of a user-defined device, refer to Chapter 2-4-8.

## 3-1-2 Writing data to PD Repeater

PD Repeater creates an abstract UNIX domain socket based on the device number set up by WEB UI. (This socket is created for a device whose Tx destination is set to “Enable” with an effective destination, excluding local).

When this UNIX domain socket is written, written data will be sent to cloud.

Path rules of subject UNIX domain socket are as follows:

(If using a user-defined config file described in Chapter 2-3, this pathname can be changed to a desired pathname).

### ●UNIX domain socket of PD Repeater

¥0/pd\_repeater/<device number>.sock

Given below is a sample of writing {“x”: 1} to the PD Repeater UNIX domain socket.

Sample of writing in command line is as follows:

\*Written with <device number> as userdev\_0000001 and written in PD Repeater<sup>\*1</sup>:

```
# echo -n '{“x”:1}' | socat stdin abstract-connect:/pd_repeater/userdev_0000001.sock
```

Script sample with PHP is as follows:

\* Written with <device number> as userdev\_0000001:

```
<?php
    $value = '{ "x" : 1 }';
    $sock = socket_create(AF_UNIX , SOCK_STREAM , 0);
    socket_set_nonblock($sock);
    socket_set_option( $sock, SOL_SOCKET, SO_SNDTIMEO, array( "sec"=>1, "usec"=>0 ) );
    socket_connect($sock , "¥0/pd_repeater/userdev_0000001.sock" , 0);
    socket_write($sock, $value);
    socket_close($sock);
?>
```

Below is a script sample in Node.js:

\*Written to PD Repeater with <device number> as "userdev\_0000001"\*<sup>2</sup>:

```
var absocket = require('abstract-socket');
try {
    var absclient = absocket.connect('¥0/pd_repeater/userdev_0000001.sock', function() {
        console.log('connect ok');
    });
    absclient.write({'x':1});
    absclient.end();
} catch(e) {
    console.log('fail');
}
process.exit();
```

## 3-2. Independently developed downstream control application

Here are key points on using an application independently developed by user to receive control messages from cloud via the PD Repeater and to perform certain processing.

### 3-2-1. Registration of user-defined device and setup of sender and destination

The registration of user-defined devices, in addition to setup of sender and destination (cloud) are the same as those of data collection applications described in Chapter 3-1-1.

Use the **Setting for User defined device** menu in the **[IoT Data]-[Tx/Rx setting]** tab, choose "Enable" for Receive setting.

### 3-2-2. Writing data from PD Repeater

Upon receiving a control message from cloud, the PD Repeater will write data in abstract UNIX domain socket to be determined on the basis of device number setup by WEB UI in the format described in Chapter 2-5-2.

Path rules of subject UNIX domain socket are as follows:

(If using a user-defined config file described in Chapter 2-3, this pathname can be changed to a desired pathname).

●UNIX domain socket to which PD Repeater sends control messages:

¥0/pd\_handler/<device number>.sock

## 3-3 Start/stop control of independently developed applications

By preparing a few files, can link the start/stop control of the PD Repeater by WEB UI with independently developed applications.

### 3-3-1. Registration of applications

Register (write) the name of application to link to the following file:

```
/etc/default/obsiot-webui-ext-handler
```

In this file, write one application name per line. A blank line or a duplicated application name is not permitted.

Example:

```
testhandler  
myhandler
```

### 3-3-2. Designating script to be used by the application

Indicate script to be used by the application to link with in the following file:

```
/etc/default/<application name>
```

In the file, designate start, stop and status check scripts as follows:

```
bootcmd_<application name>="<startup script>"  
haltcmd_<application name>="<stop script>"  
statuscmd_<application name>="<status check script>"
```

After running status check script, if "is running" or "RUNNING" is outputted or status is not "inactive," "failed" or "dead", the WEB UI dashboard recognizes the status as being in operation.

Example: /etc/default/ testhandler

```
bootcmd_ testhandler="/etc/init.d/testhandler start"  
haltcmd_ testhandler="/etc/init.d/testhandler stop"  
statuscmd_ testhandler="/etc/init.d/testhandler status"
```



### 3-3-3. deb package

It is recommended to organize the application registration processing in Chapter 3-3-1, together with application and its startup/stop script into a deb package (Debian GNU Linux software package).

For detail on how to create a deb package, please visit the official Debian website.


Due caution should be paid to the following:

- The application registration file (/etc/default/obsiot-webui-ext-handler) described in Chapter 3-3-1 is edited by postinstall or postrm script for multiple deb packages.
- For an application that outputs log files via syslog, restart rsyslog using postinstall. (The syslog service used by the OpenBlocks IoT Family is rsyslog).
- WEB UI implements startup control, etc. but a config. file to be used for the application will not be generated. Therefore, it is recommended to put a template config. file in the deb package.
- A config. file is needed for setup to output logs via syslog. In addition, for the output destination, a tmpfs domain is recommended, not regular real storage. As a tmpfs domain is prepared in "/var/webui/pd-logs" by WEB UI, please write here. Also, note that files prepared with the extension, ".log" in this domain can be browsed from the log check tab.


If a large amount of logs are continuously created, the file size will become large, straining the tmpfs domain. Therefore, add a log rotation setup. From the viewpoint of an overflowing tmpfs, a rotation setting is recommended to be triggered based on file size.

### 3-4. Realizing complex configurations

In order to filter data from the PD Handler with Node-RED, by defining Node-RED as a user-defined device at WEB UI settings, it is possible to obtain a configuration to send data to Node-RED from the PD Repeater by using lsocket and return output from Node-RED to the PD handler.

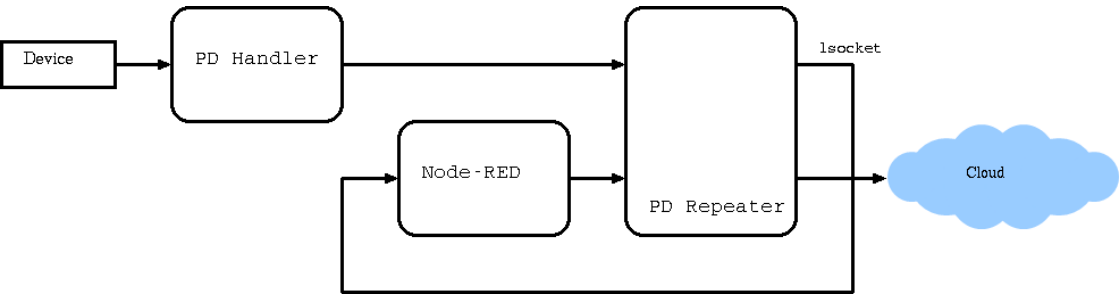

However, by using the user-defined config. file described in Chapter 2-3 to change the UNIX domain socket name, it is also possible to achieve a configuration with a more throughput-oriented configuration.

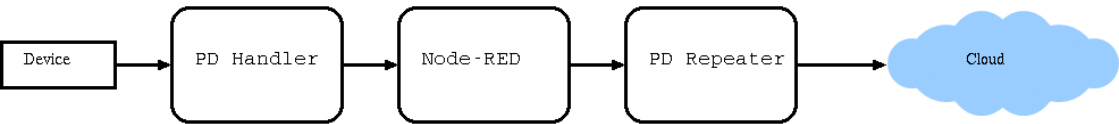

The setup file (config.) is written in a JSON format. The UNIX domain socket is expressed as the following keys:

Key	Format	
bind	String	The name of the UNIX domain socket waiting for data. If this is left blank, a socket name will have a default value of each application appended as a prefix and a device number as a suffix. If "@" is appended as a prefix, it means there is an abstract UNIX domain name.
push_to	String	The name of the UNIX domain socket to send data. If this is left blank, a socket name will have a default value of each application appended as a prefix and a device number as a suffix. If "@" is appended as a prefix, it means there is an abstract UNIX domain name.

:

Here, the setting method is explained by taking a Beacon device (PD Handler BLE) as an example.

1. Check that the **Configuration Settings** mode is set to "The system configuration" as shown in Chapter 2-3.

Application Start-up control ☐ Display the default application start-up control setting menu ☒ Display the config

Bulk Enable Bulk Disable

PD Repeater ☒ To be use ☐ Disable

PD Agent ☐ To be use ☒ Disable

PD Broker ☐ To be use ☒ Disable

PD Handler BLE ☒ To be use ☐ Disable

Use target pd-handler-ble-c

PD Handler UART ☐ To be use ☒ Disable

Use target EnOcean

PD Handler MODBUS Client ☐ To be use ☒ Disable

PD Handler MODBUS Server ☐ To be use ☒ Disable

Configuration Settings

PD Repeater ☒ The system configuration ☐ User-defined configuration

PD Agent ☒ The system configuration ☐ User-defined configuration

PD Broker ☒ The system configuration ☐ User-defined configuration

PD Handler BLE ☒ The system configuration ☐ User-defined configuration

PD Handler UART ☒ The system configuration ☐ User-defined configuration


PD Handler MODBUS Client ☒ The system configuration ☐ User-defined configuration

PD Handler MODBUS Server ☒ The system configuration ☐ User-defined configuration

Use the **[IoT Data]-[App settings]** tab, check the "Display the config" check box and confirm that the PD Handler BLE is set to "The system configuration."

2. Use the **Tx/Rx setting** menu in the **[IoT Data]-[Tx/Rx setting]** tab, make sender and destination settings. For the setting method, refer to Chapter 2-4-2.
3. Use the **Beacon data transmission setting** menu in the **[IoT Data]-[Tx/Rx setting]** tab, make settings to receive and send beacons. For the setting method, refer to Chapter 2-4-3.
4. With the above settings, the PD Repeater will wait for data with a UNIX domain socket, `@/pd_repeater/device_beacon.sock`, and the PD Handler BLE will write data in `@/pd_repeater/device_beacon.sock`.

Here, "@" in the UNIX domain socket names means that they are abstract UNIX domain names.

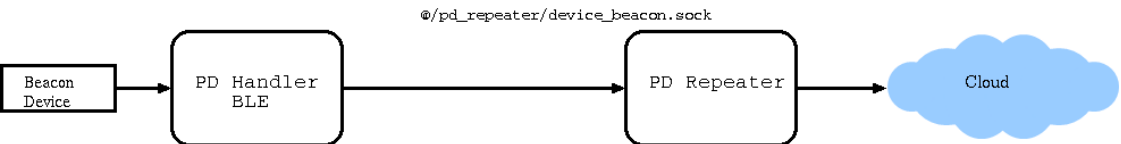

## 5. Switch Configuration Settings to "User-defined configuration."

Application Start-up control ☐ Display the default application start-up control settings menu ☒ Display the configuration settings menu

Bulk Enable  Bulk Disable

PD Repeater ☒ Enable ☐ Disable

PD Agent ☐ Enable ☒ Disable

PD Broker ☐ Enable ☒ Disable

PD Handler BLE ☒ Enable ☐ Disable  
Use target

PD Handler UART ☐ Enable ☒ Disable  
Use target

PD Handler MODBUS Client ☐ Enable ☒ Disable

PD Handler MODBUS Server ☐ Enable ☒ Disable

---

Configuration Settings

PD Repeater ☒ The system configuration ☐ User-defined configuration

PD Agent ☒ The system configuration ☐ User-defined configuration

PD Broker ☒ The system configuration ☐ User-defined configuration

PD Handler BLE ☐ The system configuration ☒ User-defined configuration

PD Handler UART ☒ The system configuration ☐ User-defined configuration

PD Handler MODBUS Client ☒ The system configuration ☐ User-defined configuration

PD Handler MODBUS Server ☒ The system configuration ☐ User-defined configuration

Use the [IoT Data]-[App settings] tab, check the "Display the config" check box and confirm that the PD Handler BLE is set to "User-defined configuration."

## 6. Copy the system configuration created by WEB UI as a user configuration, and change the UNIX domain socket name from "@/pd\_repeater/device\_beacon.sock" to "@/node-red/device\_beacon.sock."

OpenBlocks® IoT

Dashboard Basic Node-RED IoT Data Cluster Acorn IoT Edge

The configuration is loaded by the browser. You can use the node-red web interface.

App settings Other settings Log PD Repeater PD Agent PD Controller BLE Tool EnOcean Tool Edit

Edit

Edited file PD Handler BLE Load user configuration Load System Configuration

```

{
  "servers": [
    {
      "port": "10240",
      "handler_id": "10240",
      "handler_idr": "10240",
      "handler_idr_monitor": "10240"
    }
  ],
  "beacon": {
    "localname": "device_beacon",
    "enable": false,
    "push_to": "@/node-red/device_beacon.sock",
    "duplicate_type": "interval",
    "duplicate_interval": 60000,
    "append_info": "11/00017",
    "payload_manager": {
      "data": false,
      "localname": false,
      "type": false
    }
  }
}


```

Operation

Save Export

1. Use the [IoT Data]-[Edit] tab, choose "PD Handler BLE" for Edited File.
2. Click the "Load (System Configuration)" button, then copy the setting information shown in the text area (JSON character strings).
3. Click the "Load (user configuration)" button, then paste the setting information (JSON character strings) copied in Item 2 to text area.
4. Change the value of "push\_to" key to: "@/node-red/device\_beacon.sock".
5. Press the Save button.

## 7. Set the property of the UNIX domain socket input ipc-in node of Node-RED. On how to use Node-RED, refer to the OpenBlocks IoT Family Node-RED Start Guide."

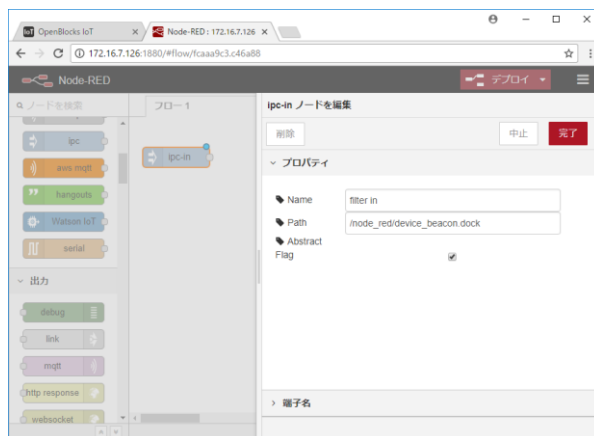


Put the ipc-in node in place, set the Path in Property to `"/node_red/device_beacon.sock"` and check the Abstract Flag check box.

8. Set the property of the UNIX domain socket output, ipc-out node of Node-RED.




Put the ipc-out node in place, set the Path in Property to `"/pd_repeater/device_beacon.sock"` and check the Abstract Flag check box.

With the above settings, the PD Handler BLE will write data to `"@/node-red/device_beacon.sock"` while Node-RED will wait for data at `"@/node-red/device_beacon.sock"` and write them to `"@/pd_repeater/device_beacon.sock"`.

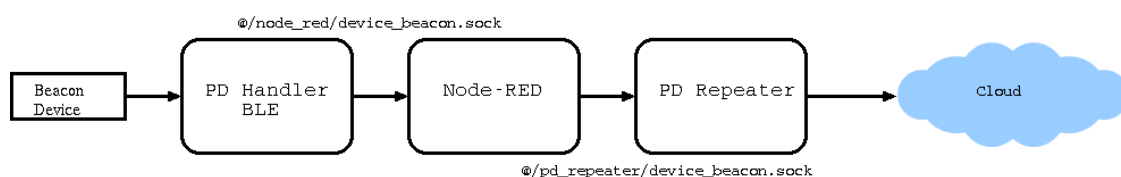


### 3-4-1. PD Broker

PD Broker is an application to customize connection configurations to send data received from a single UNIX domain socket to multiple UNIX domain sockets.

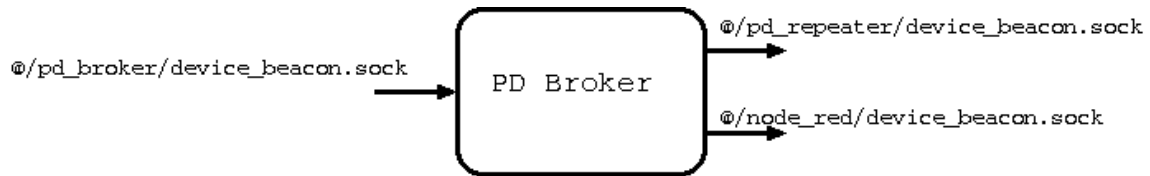

For example, in the configuration shown below, the PD Handler BLE receives beacon signals, which are then filtered by Node-RED and sent to cloud in MQTT connections via the PD Repeater. PD Broker is used to receive control messages using the same MQTT connection and control the filtering parameter of Node-RED and PD Agent.

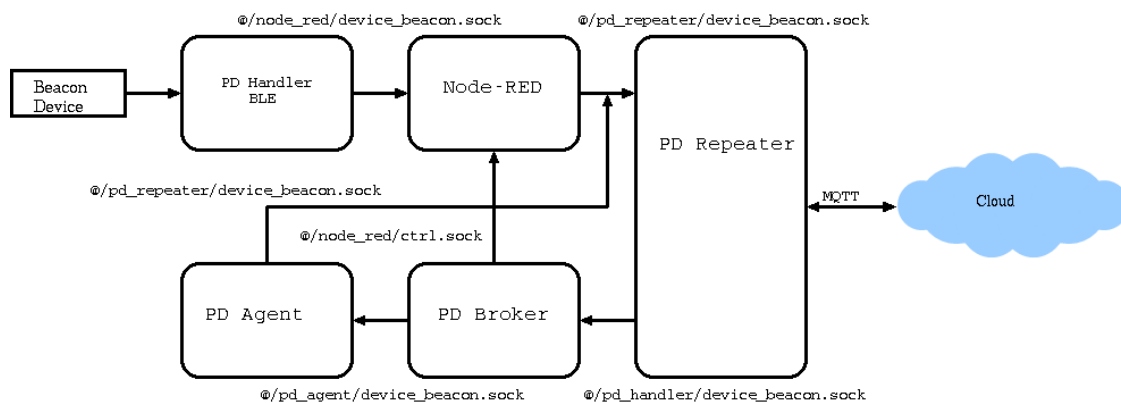

It is possible to set the PD Broker from the **[IoT Data]-[PD Broker]** tab. If no the **[PD Broker]** tab is displayed, refer to "Chapter 2-3 Application setup for IoT data control," and set To be use to "Enable."

PD Broker

Add


Use or not

☐ Enable ☒ Disable

The figure on the left shows the default screen.

When "Enable" is selected, setting items will be displayed.

Selecting "Enable" will show the screen as below:

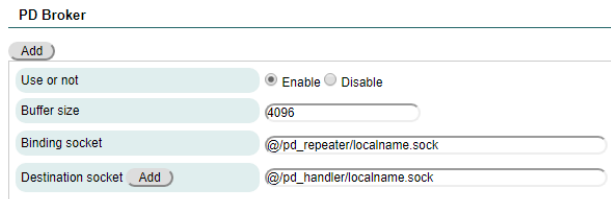

The screenshot shows a window titled "PD Broker". At the top left is an "Add" button. Below it is a section with four rows, each with a light blue header box and a corresponding input field or control:

- Row 1: Header "Use or not", control with "Enable" (selected) and "Disable" (unselected) radio buttons.
- Row 2: Header "Buffer size", input field containing "4096".
- Row 3: Header "Binding socket", input field containing "@/pd\_repeater/localname.sock".
- Row 4: Header "Destination socket", input field containing "@/pd\_handler/localname.sock". To the right of this header is a small "Add" button.

**Add:** Click this button to set multiple waiting sockets. Input forms for a second socket and beyond will be displayed.

**Buffer size:** Sets maximum size of data in bytes.

**Binding socket:** Sets pathname of the UNIX domain socket to wait for data. If "@" is appended as a prefix, it will indicate an abstract domain name.

**Destination socket:** Sets pathname of the UNIX domain socket to send data. If "@" is appended as a prefix, it will indicate an abstract domain name.

Click the Add button to display input forms for a second socket and beyond.


## 3-5. Lua expansion

### 3-5-1. BLE Lua

The C-language version of the PD Handler BLE (pd-handler-ble-c) can support unsupported non-connection type BLE sensors.

This is implemented by uploading a Lua file for the sensor to be supported by pd-handler-ble-c from the **[IoT Data]-[BLE Lua]** tab.

\*Rebooting the process is required following upload.

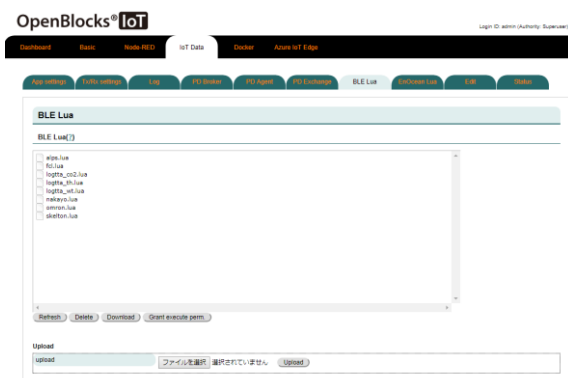

**Refresh:** Refresh a list of files to upload the Lua file.

**Delete:** Select a file and press this button to delete file.

**Download:** Enables user to download a selected file.

**Grant execute perm.:** Gives a right of execution to selected file. Not required in normal operation.

**Upload:** Press this button after choosing a file to be uploaded in the dialog to upload file.


If any file apart from a Lua file is present at the upload destination, this process will not operate normally. For this reason, refer to skelton.lua when creating the content of a file.



## 3-5-2. EnOcean Lua

The EnOcean function of PD Handler UART can support unsupported EnOcean devices. This is implemented by uploading a Lua file for the sensor to be supported from the **[IoT Data]-[EnOcean Lua]** tab.

\*Rebooting the process is required following upload.

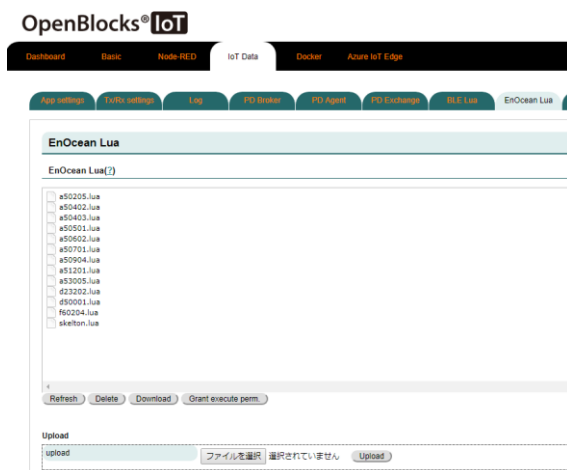

**Refresh:** Refresh a list of files to upload the Lua file.

**Delete:** Select a file and press this button to delete file.

**Download:** Enables user to download a selected file.

**Grant execute perm.:** Gives a right of execution to selected file. Not required in normal operation.

**Upload:** Press this button after choosing a file to be uploaded in the dialog to upload file.

If any file apart from a Lua file is present at the upload destination, this process will not operate normally. For this reason, refer to skelton.lua when creating the content of a file.

# Chapter 4 Supplementary information

## 4-1. Amount of transmitted data and line speed

If data transmission is slow against the information acquired from beacons and devices, the amount of information in the buffer within the OpenBlocks IoT Family will increase. In this case, unless an improvement is made to the data transmission section, data will continue being accumulated. Therefore, check the buffer data and adjust intervals, data acquisition time intervals, etc.

\*For buffer data, check the buffer file size from the Status tab in Service tab.

## 4-2. Write data format to PD Repeater

PD Repeater is assumed to handle data in a JSON format, but depending on a connection destination, it may handle character strings not in a JSON format.

Cloud	Non-JSON format support
PD Exchange	
MQTT server	○
Watson IoT for Device	
Amazon Kinesis	○
WEB server	
AWS IoT	
MS Azure Event hubs	○
Watson IoT for Gateway	
MS Azure IoT Hub	○
Toami for DOCOMO	
Domain socket	○
KDDI IoT Cloud Standard	
IoT device hub	
Web server of Plat'Home's original specifications	
Google IoT Core	○
TCP	○

Destination that can support non-JSON format strings

### 4-3. Data write size to PD Repeater

Though it is possible to change the data write size to the PD Repeater for individual devices, the larger this size is, the more memory will be consumed, thereby deteriorating performance. It is recommended to keep the size as small as possible, depending on data size.

As each cloud service has different maximum values specified, check the specifications of cloud used and make this setting.

### 4-4. Buffer size of PD Repeater

The PD Repeater temporarily accumulates data as a transmission buffer and writes data in DB as a buffer. The default upper limit of DB size is 16 Mbytes. When this is exceeded, new data will be dumped, and data will not be received until the DB size is reduced to 8 Mbytes or less.

### 4-5. Resending at the time of PD Repeater error

Depending on communication conditions of a network, transmission from the PD Repeater to cloud may fail. In this case, if four failures in a row have occurred or an unexpected error condition has taken place, a resending process will start in one minute.

### 4-6. About the configuration file of an independently developed application

A function to create a configuration file (Config) of an independently developed application by the user is not available. Therefore, the user must save this file for each unit. Please use the file upload function, etc.

## 4-7. Method to send data from PD Repeater to Node-RED

Data is sent from the PD Repeater to Node-RED by way of a UNIX domain socket.

The path of a UNIX domain socket to which the PD Repeater writes individual data is as follows:

`<Socket path prefix>/<device number>.sock`

By appending "@" as a prefix for a path, it will be handled as an abstract domain socket. (Refer to Chapter 2-4-2-17)

On the Node-RED side, prepare an ipc-in node of the subject device for inputting in the flow. The ipc-in node installed in the OpenBlocks IoT Family is expanded to deal with an abstract domain socket.

For pathname, set it to the "Path" of the property of the ipc-in node. To deal with the pathname as an abstract domain socket, check the Abstract Flag check box in the same property. Different from the PD Repeater, there is no need to appendix "@" as a prefix for the path.

## 4-8. Beacon added as a BLE device

Sensors and beacons registered as BLE devices and setup as destinations by WEB UI are handled individually.

In this case, beacon devices in particular have no dependence on the transmission settings of beacons. Therefore, control type, data filter, etc. of beacon transmission settings will not be applied.

In addition, data to be sent from beacons with supported sensors to the PD Repeater will be analyzed sensor data. Normal beacons, however, will send time, device ID and note information to the PD Repeater.

## 4-9. Data transmission to web server

From the PD Repeater (firmware of OpenBlocks IoT), transmission is made using a HTTP POST method to the endpoint of a designated URL.

For this reason, the HTTP server must return a status code in HTTP 2xx.

No HTTP header or payload requirement exists when a status code in HTTP 2xx is returned.

If any status other than HTTP 2xx is returned, the PD Repeater (OpenBlocks IoT firmware) will handle it as an error.

## 4-10. Handler config user settings

Use the [IoT data]-[App settings] tab, set the **Handler config settings** to "User-defined configuration" and save it to switch to user-defined configuration.

To edit the file, choose the Edit tab in the IoT Data tab.

However, using this function is not in the scope of our support.

## 4-11. Web server of Plat'Home's original specifications (PD Web)

This is a web server whose specifications are independently defined by Plat'Home to realize bidirectional communication using HTTP.

### 4-11-1. Overview of PD Web

- PD Web offers bidirectional communication with HTTP.
  - Downstream payload transfer is provided as a response message against upstream POST.
  - If no payload to be sent upstream exists, the PD Repeater will make empty connections at an interval, as specified in the Polling interval setting.
  - If no payload to be sent downstream exists, the web server only returns the response header. If a response message is not empty, the PD Repeater transfers the payload to the UNIX domain socket of the downstream module designated by the push\_to key.
- The authentication method of the PD Web is a bidirectional token authentication.
  - PD Repeater and web server has ID and key information assigned to each device.
  - As token for request, the PD Repeater uses a hash value (signature) that is a

character string (for request) subject to signature, constituted by version number (version number of the PD Web specification), ID, time stamp, payload's hash value (MD5) and signed by the key.

- As token for response, the web server uses a hash value (signature) that is a character string (for response), constituted by version number, ID, time stamp, payload's hash value (MD5) plus the token of the request header and signed by the key.
- If the signature of the response header or MD5 of the payload does not match the expected value, the PD Repeater will make the payload empty until the expected signature is returned to the response header.
- It is also possible to use BASIC authentication in bulk for web server at the same time.
- Error handling
  - Error handling between the PD Repeater and web sever is performed with HTTP status codes only. If the status is not in a range of 200 and 299, a payload transfer to downstream modules will not be made, regardless of the content of response header.
- Payload format and transaction control
  - The format of payload in the upstream direction is a JSON character string. To transfer multiple messages together, regardless of the number of messages, the top layer will be an array.
  - The message format of the PD Repeater in the downstream direction is shown in Chapter 2-5-2, but a payload format is not defined. The payload format in the downstream direction depends on specifications of the downstream module to receive payload from the PD Repeater.
  - Transaction (arrival and resend process) control of payload is assumed to be performed between web server and downstream modules. PD Repeater does not control transactions.
  - For the purpose of transaction control applications, PD Handler Modbus and PD Agent offered by Plat'Home has a specification to return the hash value (MD5) of the payload in the downstream direction, as the value of the reply\_to key in a JSON character string.

## 4-11-2. HTTP header of PD Web

Below is a list of HTTP headers specified by PD Web.

HTTP header	Description
X-Pd-Web-Version	Version number of PD Web specifications
X-Pd-Web-Id	Client ID
X-Pd-Web-Time	RFC3339-compliant time stamp
X-Pd-Web-Md5	Hash value
X-Pd-Web-Signature	Hash value created by header information and key
Content-Type	application/json;charset=UTF-8

```
Host: 127.0.01
Accept: */*
X-Pd-Web-Version: 1.0
X-Pd-Web-Id: pd_web_02
X-Pd-Web-Time: 2017-09-01T18:11:01.101+09:00
X-Pd-Web-Md5: 26b32b7bc6b4587c2ded48128e809b08
X-Pd-Web-Signature: c91279bc0d9896745e4e12e73917aafd56c017966a89375273ba4b9be8b02096
Content-Length: 190
Content-Type: application/json;charset=UTF-8
```

Below is an example of response header to PD Repeater.

```
HTTP/1.1 200 OK
Date: Fri, 01 Sep 2017 08:34:35 GMT
Server Apache/2.4.27 (Unix)
X-Powered-By: PHP/5.6.31
X-Pd-Web-Version: 1.0
X-Pd-Web-Id: pd_web_03
X-Pd-Web-Time: 2017-09-01T17:34:35.000+09:00
X-Pd-Web-Md5: d41d8cd98f00b204e9800998ecf8427e
X-Pd-Web-Signature: b4e23876e866e9225e2f83cbd1df8b6387fe5da9e160b222953464b1ae87a9d3
Content-Length: 0
Content-Type: application/json;charset=UTF-8
```

### 4-11-3. Token of PD Web

The token of request header created by the PD Repeater (X-Pd-Web-Sinature) can be reproduced at the web server with the following PHP script:

```
$hash_hmac_data =  
$_SERVER['HTTP_X_PD_WEB_VERSION'] .  
$_SERVER['HTTP_X_PD_WEB_ID'] .  
$_SERVER['HTTP_X_PD_WEB_TIME'] .  
$_SERVER['HTTP_X_PD_WEB_MD5'];  
$signature = hash_hmac ('sha256', $hash_hmac_data, $key, false);
```

Here, "\$key" is a key stored in web server in advance to be a pair with "\$\_SERVER['HTTP X PD WEB ID'] ". It is authenticated by comparing reproduced "\$signature" with "\$\_SERVER['HTTP X PD WEB SIGNATURE'] ".

The token of response header (X-Pd-Web-Sinature) is created at the web server with the following PHP script:

```
$tm = localtime();  
$timestamp = sprintf("%04d-%02d-%02dT%02d:%02d:%02d.000+09:00",  
$tm[5]+1900,$tm[4]+1,$tm[3],$tm[2],$tm[1],$tm[0]);  
$hash_hmac_data = '1.0' . $_SERVER['HTTP_X_PD_WEB_ID'] . $timestamp .  
md5($payload) . $_SERVER['HTTP_X_PD_WEB_SIGNATURE'];  
$signature = hash_hmac ('sha256', $hash_hmac_data, $key, false);
```

Here, if no payload character string or character string to be sent (control message in the downstream direction) is present, \$payload will be set as \$payload="";"

Note that different from token of request header, the character string to be signed contains the request header token sent from the PD Repeater (\$\_SERVER['HTTP X PD WEB SIGNATURE']).



## 4-11.4. Installation example of web server (PHP script)

Shown below is an example of an installation of web server (PHP script)

```
<?php
/*
 * This PHP script is a sample of PHP script on the server side.
 * to use PD Web of PD Repeater.
 *
 * To enable this script to function,
 * SQLite3 database ($db_file in the script) created by the following SQL syntax is required.
 *
 * CREATE TABLE client (id TEXT, key TEXT, flags INTEGER, payload BLOB, md5 TEXT);
 * CREATE INDEX index_client ON client (id);
 *
 * Here id is the PD Web ID set for each sensor device,
 * key is the key to create a token, and content is a JSON character string (payload)
 * to be sent to individual sensor devices via the PD Repeater,
 * md5 is the MD5 hash value of the JSON character string.
 * Flags is a code to indicate the payload's transmission status:
 * 0: Transmitted, 1: In process and 2: Not transmitted.
 *
 * Shown below is an example of settings of initial values.
 *
 * INSERT INTO client(id, key, flags, payload, md5)
 * VALUES('id00', 'key00', 0, '{"any_key": "any_value"}',
'd29e8a13452e5bc5218d9df7e6ea991f');
 * INSERT INTO client(id, key, flags, payload, md5)
 * VALUES('id01', 'key10', 0, '{"any_key": "any_value"}',
'd29e8a13452e5bc5218d9df7e6ea991f');
 *
 * Here d29e8a13452e5bc5218d9df7e6ea991 is MD5 value of '{"any_key": "any_value"}'.
 * With Linux OS, this can be acquired with the following command.
 *
 * echo -n '{"any_key": "any_value"}' | md5sum
 *
 * To send a payload, use UPDATE of SQL to change flags to 2: Not transmitted.
 *
 * UPDATE client SET flags = 2 WHERE id = 'id00';
 *
 * It is possible to naturally set a payload and MD5 value together.
 *
 * UPDATE client
 * SET flags = 2,
 * payload = '{"any_key": "new_value"}',
 * md5 = '94f030ebd7bed4a5ee08fc6fa75ae64e'
 * WHERE id = 'id00';
 *
 * When transmission is completed, PHP script will update flag to 1,
 * and wait for a response payload containing "reply_to" key.
 *
 * Example of a response payload
 *
 * {"reply_to": "94f030ebd7bed4a5ee08fc6fa75ae64e", "result": "done"}
 *
 * A response payload is returned from (the handler of) each sensor device to receive a payload via the PD Repeater.
 * PD Agent and PD Handler Modbus handles the MD5 value of payload using "reply_to" key.
 * To use a unique handler, can make it a unique response payload.
 *
```

\* \*When a response payload is received, the PHP script will compare the md5 on the database  
 \* with the value of "reply\_to" and update flag to "0".  
 \* \*If no response payload is included in a received payload, the PHP script will change flag to "2"  
 \* and resend it.  
 \*

```

*/
$dump_file = '/tmp/dump.txt';
$db_file = '/tmp/pd_web.db';

/* HTTP header confirmation */
if (!(isset($_SERVER['HTTP_X_PD_WEB_VERSION']) &&
    isset($_SERVER['HTTP_X_PD_WEB_ID']) &&
    isset($_SERVER['HTTP_X_PD_WEB_TIME']) &&
    isset($_SERVER['HTTP_X_PD_WEB_MD5']) &&
    isset($_SERVER['HTTP_X_PD_WEB_SIGNATURE']))) {
    /* If HTTP header is invalid, returns Bad Request 400. */
    http_response_code (400);
    exit;
}

/* SQLite3 database reading */

/* As this code is a sample, countermeasures against SQL injection are omitted.
   To use this in actual operations, sufficiently conduct validation
   of $_SERVER['HTTP_X_PD_WEB_ID']. */

$db = new SQLite3($db_file);
$query = sprintf("SELECT key, flags, payload, md5 FROM client WHERE id = '%s';",
    $_SERVER['HTTP_X_PD_WEB_ID']);
$results = $db->query($query);

if(! $results) {
    /* If no HTTP_X_PD_WEB_ID exists, returns Unauthorized 401. */
    http_response_code (401);
    $db->close();
    exit;
}
else {
    $row = $results->fetchArray();
    $key = $row['key'];
    $flags = $row['flags'];
    $payload_tx = $row['payload'];
    $md5_tx = $row['md5'];
}

/* Create a signature by using a given character string in HTTP request header
   and key on the database. */

$hash_hmac_data =
    $_SERVER['HTTP_X_PD_WEB_VERSION'] .
    $_SERVER['HTTP_X_PD_WEB_ID'] .
    $_SERVER['HTTP_X_PD_WEB_TIME'] .
    $_SERVER['HTTP_X_PD_WEB_MD5'];

$signature = hash_hmac ('sha256', $hash_hmac_data, $key, false);

/* Settings of common part of HTTP response header */
date_default_timezone_set('Asia/Tokyo');
$tm = localtime();
$timestamp = sprintf("%04d-%02d-%02dT%02d:%02d:%02d.000+09:00",
    $tm[5]+1900,$tm[4]+1,$tm[3],$tm[2],$tm[1],$tm[0]);

header('Pd_Web_Version: 1.0');
  
```

```

header('Pd_Web_Id: ' . $_SERVER['HTTP_X_PD_WEB_ID']);
header('Pd_Web_Time: ' . $timestamp);
header('Content-Type: application/json;charset=UTF-8');

/* It should be noted that while the string of a request header to be signed is constituted by
VERSION.ID.TIME.MD5,
the string of response header to be signed is constituted by
VERSION.ID.TIME.MD5.SIGNATURE
(SIGNATURE is a string contained in request header). */

if ($signature != $_SERVER['HTTP_X_PD_WEB_SIGNATURE']) {
    /* If HTTP_X_PD_WEB_SIGNATURE and signature do not match,
    401 Unauthorized will be returned. */
    header('Pd_Web_Md5: ' . md5(""));
    $hash_hmac_data = '1.0' . $_SERVER['HTTP_X_PD_WEB_ID'] . $timestamp .
        md5(") . $_SERVER['HTTP_X_PD_WEB_SIGNATURE'];
    $signature = hash_hmac('sha256', $hash_hmac_data, $key, false);
    header('Pd_Web_Signature: ' . $signature);
    http_response_code(401);
    $db->close();
    exit;
}

$payload = file_get_contents("php://input");

if(md5($payload) != $_SERVER['HTTP_X_PD_WEB_MD5']) {
    /* If the MD5 value of payload does not match HTTP_X_PD_WEB_MD5,
    406 Not Acceptable will be returned. */
    header('Pd_Web_Md5: ' . md5(""));
    $hash_hmac_data = '1.0' . $_SERVER['HTTP_X_PD_WEB_ID'] . $timestamp .
        md5(") . $_SERVER['HTTP_X_PD_WEB_SIGNATURE'];
    $signature = hash_hmac('sha256', $hash_hmac_data, $key, false);
    header('Pd_Web_Signature: ' . $signature);
    http_response_code(406);
    $db->close();
    exit;
}

/* The reception payload and the HTTP request header is stored in dump_file. */
$fp = fopen($dump_file, 'a+');
fputs($fp, $_SERVER['HTTP_X_PD_WEB_VERSION']);
fputs($fp, "\n");
fputs($fp, $_SERVER['HTTP_X_PD_WEB_ID']);
fputs($fp, "\n");
fputs($fp, $_SERVER['HTTP_X_PD_WEB_TIME']);
fputs($fp, "\n");
fputs($fp, $_SERVER['HTTP_X_PD_WEB_MD5']);
fputs($fp, "\n");
fputs($fp, $_SERVER['HTTP_X_PD_WEB_SIGNATURE']);
fputs($fp, "\n");
fputs($fp, $_SERVER['CONTENT_LENGTH']);
fputs($fp, "\n");
fputs($fp, $payload);
fputs($fp, "\n");
fputs($fp, "\n");
fclose($fp);

/* If flags are "1" (payload in process present),
the value of "reply_to" key will be acquired from reception payload. */
if($flags === 1) {
    $json = mb_convert_encoding($payload, 'UTF8', 'ASCII,JIS,UTF-8,EUC-JP,SJIS-WIN');
    $array = json_decode($json,true);
    if ($array !== NULL) {

```

```

/* Reception payload is an array of JSON objects. */
$payload_count = count($array);
for($i=0;$i<$payload_count;$i++) {
    if (isset($array[$i]['reply_to'])) {
        /* Compare the value of "reply_to" key and md5_tx */
        if($array[$i]['reply_to'] === $md5_tx) {
            /* If matched, flags will be set to "0". */
            $flags = 0;
        }
        else {
            /* If not matched, flags will be "2". */
            $flags = 2;
        }
    }
    break;
}
if($i == $payload_count) {
    /* If "reply_to" key does not exist, flags will be set to "2". */
    $flags = 2;
}
}
else {
    /* If not a JSON character string, flags will be set to "2". */
    $flags = 2;
}
}

/* Update flags of database. */
$query = sprintf("UPDATE client SET flags = %d WHERE id = '%s';" ,
    $flags, $_SERVER['HTTP_X_PD_WEB_ID']);
$results = $db->query($query);
}

if($flags == 2) {
    /* If flags is "2" (with transmission payload), payload_tx will be sent, and "200 OK" will be returned.
*/
    header('Pd_Web_Md5: ' . md5($payload_tx));
    $hash_hmac_data = '1.0' . $_SERVER['HTTP_X_PD_WEB_ID'] . $timestamp .
        md5($payload_tx) . $_SERVER['HTTP_X_PD_WEB_SIGNATURE'];
    $signature = hash_hmac ('sha256', $hash_hmac_data, $key, false);
    header('Pd_Web_Signature: ' . $signature);
    echo $payload_tx;
    http_response_code (200);


    /* flags will be changed to "1" (payload in process present), and flags in the database will be
updated. */
    $flags = 1;
    $query = sprintf("UPDATE client SET flags = %d WHERE id = '%s';" ,
        $flags, $_SERVER['HTTP_X_PD_WEB_ID']);
    $results = $db->query($query);
}
else {
    /* Returns "200 OK". */
    header('Pd_Web_Md5: ' . md5(""));
    $hash_hmac_data = '1.0' . $_SERVER['HTTP_X_PD_WEB_ID'] . $timestamp .
        md5("") . $_SERVER['HTTP_X_PD_WEB_SIGNATURE'];
    $signature = hash_hmac ('sha256', $hash_hmac_data, $key, false);
    header('Pd_Web_Signature: ' . $signature);
    http_response_code (200);
}

$db->close();
exit;
?>


```

## 4-12. Data transmission to IoT Hub/IoT Edge

When transmission from the PD Repeater to Azure IoT Hub is conducted, it is made from the host machine (OpenBlocks) via the Internet. For this reason, if filtering is made on cloud side only to obtain data to be used, data to be transmitted must be narrowed down in the host machine (in OpenBlocks) or cooperate with a different service in Azure in order to perform processing.

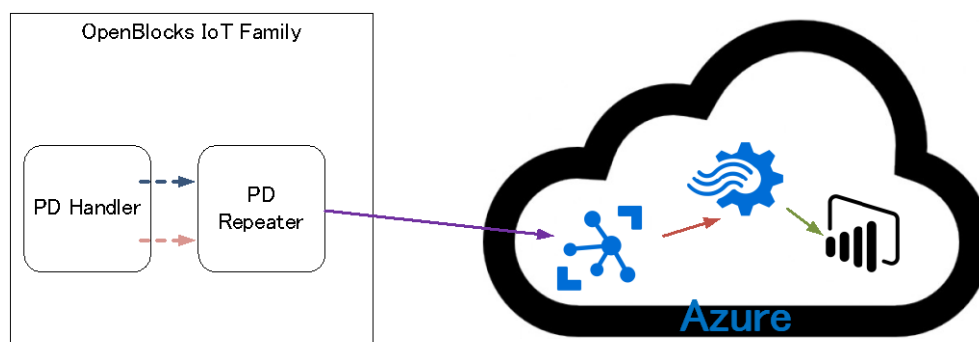


To transmit from the PD Repeater to Azure IoT Edge, data is transmitted from the host machine (OpenBlocks) to a container within the host or another machine in which Azure IoT is run. Azure IoT Edge can process data by running a container to filter data. In addition, in normal operations, it supports operations in an offline environment and data transmission to IoT Hub is not always required. (To download container or change configuration, communication with IoT Hub is required).

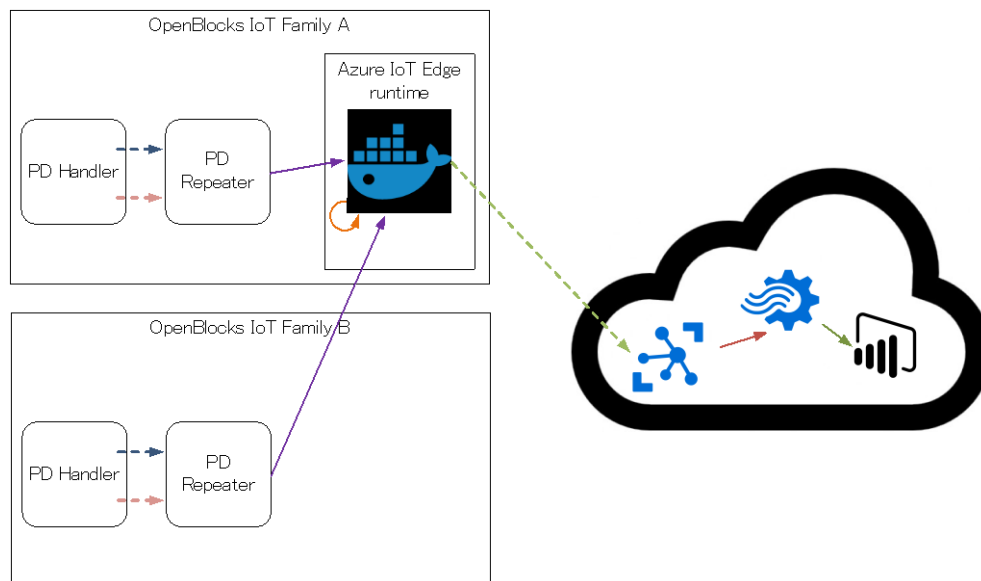

## 4-13. Relation of devices and applications in PD Exchange

PD Exchange has the function of providing data of each sensor device to multiple applications on the server side.

In this section, Describe the relativeization between the application registered in the PD Exchange server and the device registered in this unit.

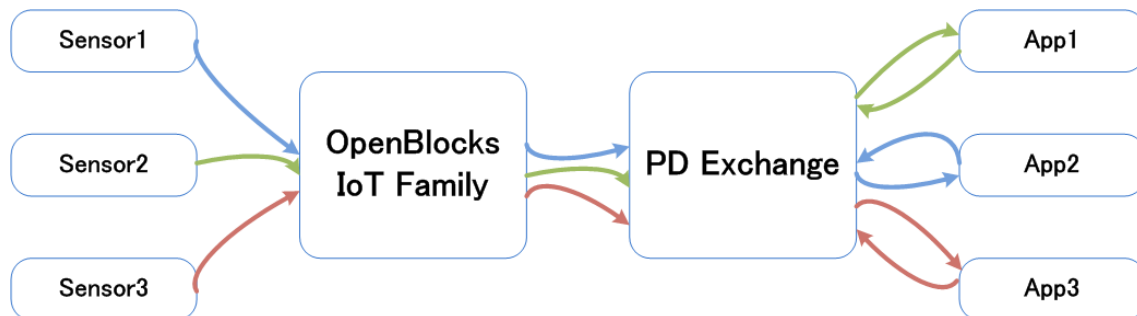

To relate devices and applications, use the **[IoT Data]-[PD Exchange]** tab.

**Device number:** Select the registered device to be related from the pull-down menu.

**Device ID:** The device ID of the selected device is displayed.

**Application Name:** Specify the application name registered in the PD Exchange server in advance and click the "Generate" button.

Specifying an unregistered application name in PD Exchange server results in an error.

**List of Channel ID:** Clicking the "Get" button displays the channel ID of the device and the application that have been made relative.

To delete the created channel ID, click the "Delete channel ID" button in list.

The screenshot shows the 'PD Exchange' tab in the OpenBlocks IoT Family interface. It includes a 'Device number' dropdown menu, a 'Device ID' field, an 'Application Name' input field with a 'Generate' button, and a 'List of Channel ID' section with a 'Get' button and a table of channel IDs.

Application Name	Channel ID	
kanoh0pdview_ite_0	9fe3f722e3ed45c3b72af520609e0e5b	Delete channel ID

## 4-14. About the connection protocol of each cloud

The connection protocol of each cloud is as follows.

Cloud	Protocol	Remarks
PD Exchange	REST	
MS Azure IoT Hub	MQTT	
MS Azure IoT Hub[WebSocket]	MQTT over WebSocket	
AWS IoT Core	MQTT	
AWS IoT Core[WebSocket]	MQTT over WebSocket	
Google IoT Core	MQTT	
Watson IoT for Gateway	MQTT	
MS Azure Event hubs	AMQP	
Amazon Kinesis	REST	
Watson IoT for Device	MQTT	
Toami for DOCOMO	REST	
KDDI IoT Cloud Standard	REST	
Web server of Plat'Home's original specifications	REST	
WEB server	REST	
MQTT server	MQTT	
TCP	TCP	
Domain Socket	Unix Domain Socket	

Note that HTTP proxy is supported for protocols using REST and WebSocket.

When using Proxy, please set it using the **HTTP proxy** menu in the **[Network]-[HTTP proxy]**tab.



Plat'Home Co., Ltd.  
NIHON BUILDING KUDANBEKKAN, 3F  
4-2-3, Kudankita, Chiyoda-ku, TOKYO 102-0073, JAPAN