



“UTAC Anywhere”

User Manual


Version 1.2

Updated : 17 March 2020

By Apinya K. / Customer Engineering Dept.



UTAC Anywhere : User Manual

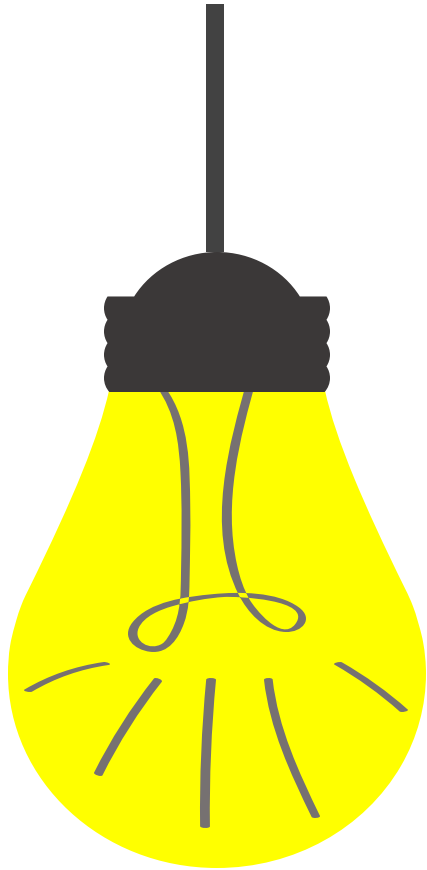

How to Install?

How to install Line application on your mobile devices.
You can skip this step if you already have the application.



How to Register UTAC AnyWhere?

Find 'UTAC Anywhere' official Line account and register yourself.



How to Use?

Find your build request..
Any where, Any time..

HOW TO INSTALL LINE APPLICATION?



Step 1

Select your device
Mobile or PC/Mac




Mobile




Step 2

Click Black box to access
download link*

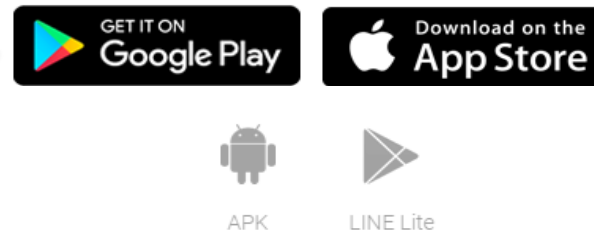


Step 3

Click 'Install' or 'Get'
button to download

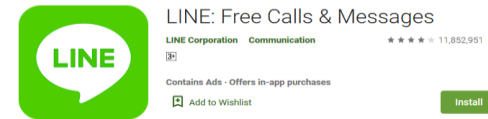


Step 4

Sign up and Login to
Line application

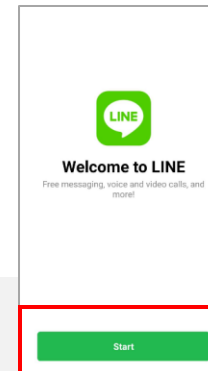

PC / Mac

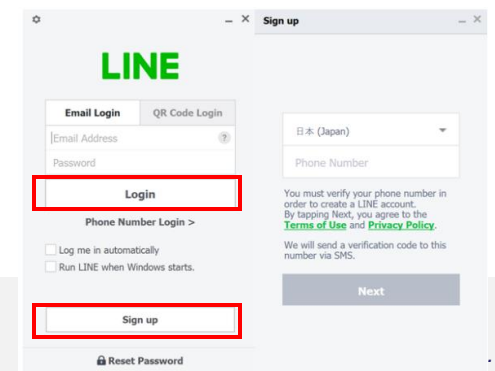


UTAC Anywhere : User Manual



How to Install?

How to install Line application on your mobile devices.
You can skip this step if you already have the application.

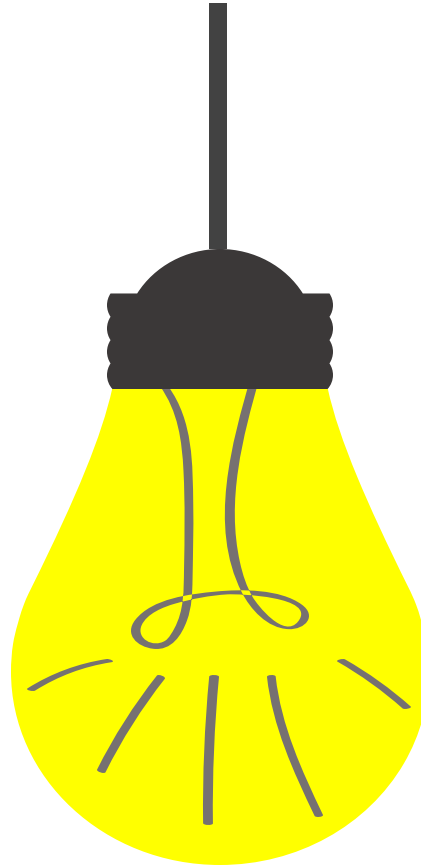

How to Register UTAC AnyWhere?

Find 'UTAC Anywhere' official Line account and register yourself.



How to Use?


Find your build request..
Any where, Any time..

HOW TO REGISTER UTAC ANYWHERE?

Step 1 : Add UTAC Anywhere as Line Friend, do step by step as below flow


1

Open app, go to Home, select Code reader*

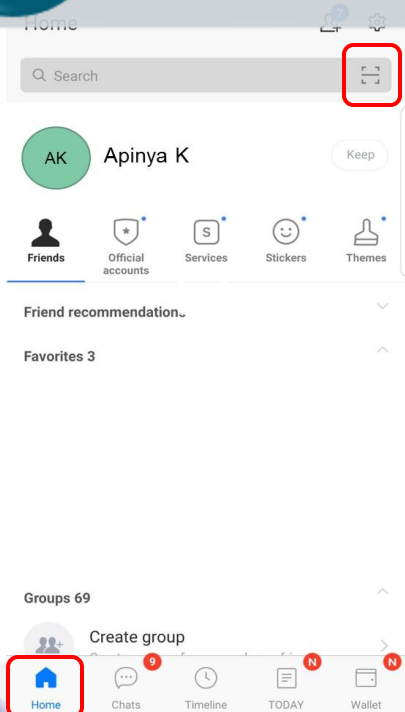

2

Scan QR Code

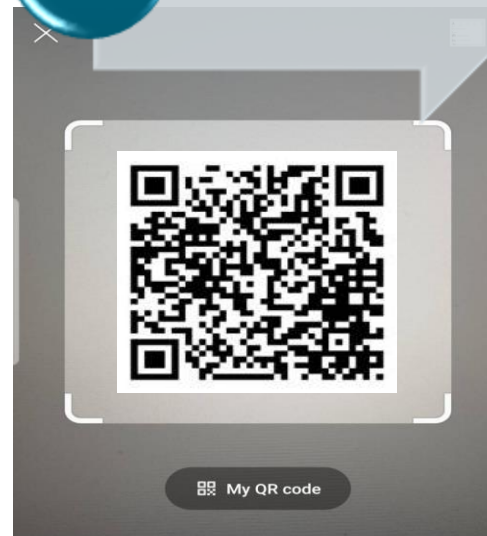


Just scan a QR code for a variety of LINE features, such as adding friends or using Rabbit LINE Pay.

Scan QR code

Scan text

3

- UTAC Anywhere account will automatically pop up
- Click 'Add'

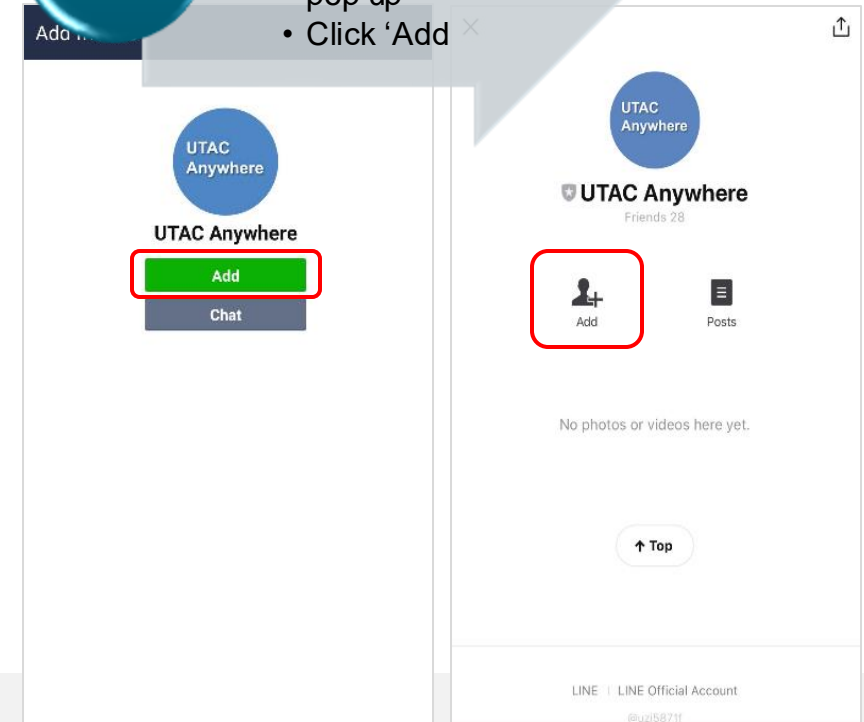

Remark* : Any QR scanner is acceptable

UTAC Confidential.


HOW TO REGISTER UTAC ANYWHERE?



Step 2 : Register, do step by step as below flow


1

Click Register

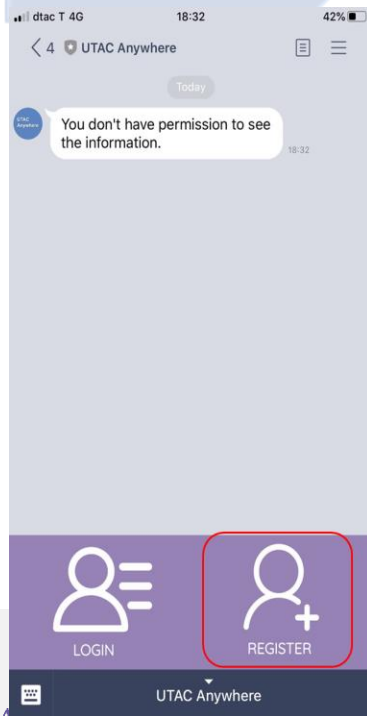


2

Click Allow

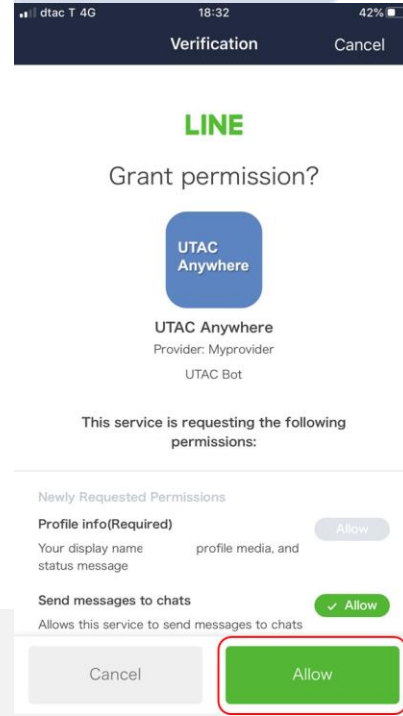

3

- 1.Insert your name
- 2.Insert your Last name
- 3.Insert your company email
- 4.Select your company
- 5.Create your password
- 6.Confirm your password
- 7.Click Register

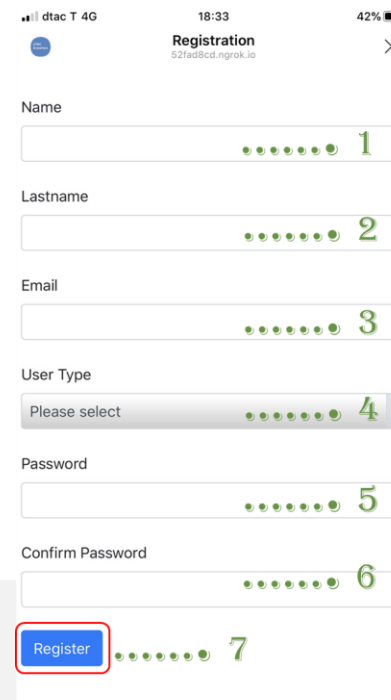

4


Completed Register



HOW TO REGISTER UTAC ANYWHERE?


Step 3 : Login, do step by step as below flow

1 Click Login

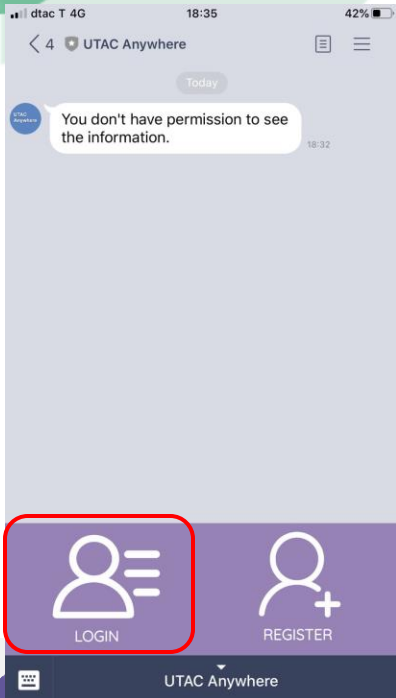


2

- Insert your **WORK** Email and Password
- Click login

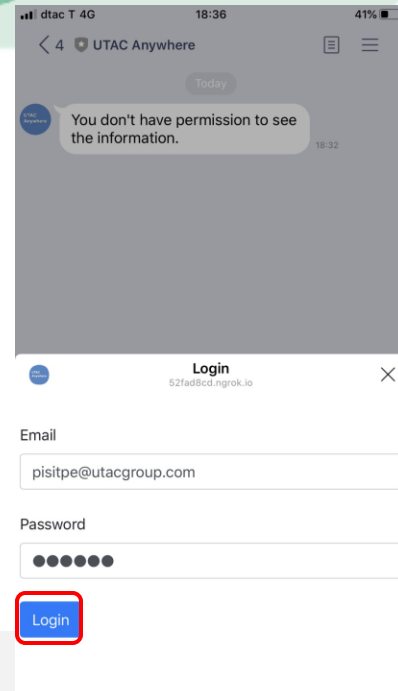


3

Notify your UTAC NPI counterpart to approve accessibility for your account

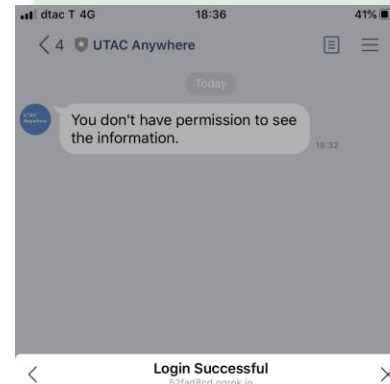

4

Once your account has been approved, you will see 'Login successful' show on screen.
Now, you can access to UTAC Anywhere.

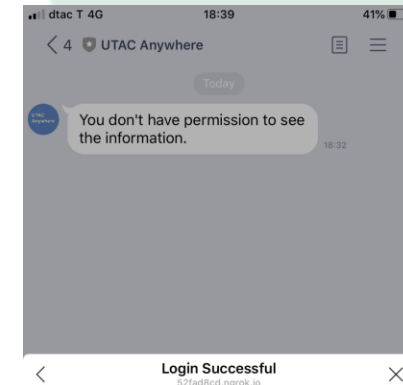

UTAC Anywhere : User Manual




How to Install?

How to install Line application on your mobile devices.
You can skip this step if you already have the application.



How to Register UTAC AnyWhere?

Find 'UTAC Anywhere' official Line account and register yourself.

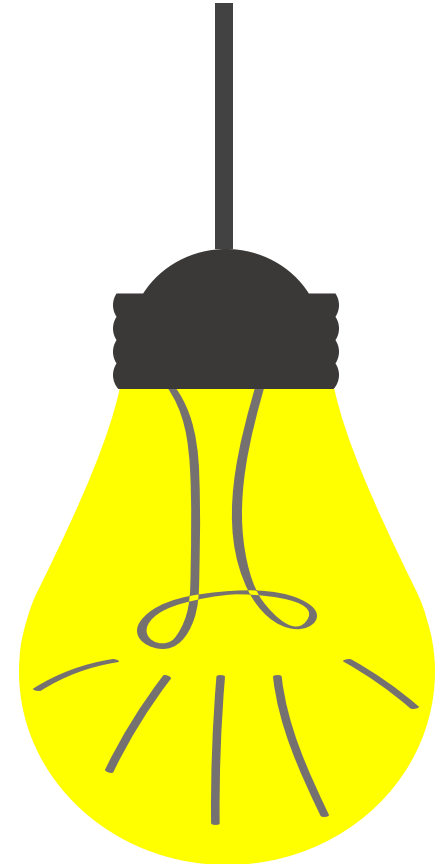


How to Use?

Find your build request..
Any where, Any time..

HOW TO USE UTAC ANYWHERE TO FIND YOUR BUILD REQUEST?


1

- Open app, Go 'Home' page, Search for 'UTAC Anywhere' and Click 'Chat'

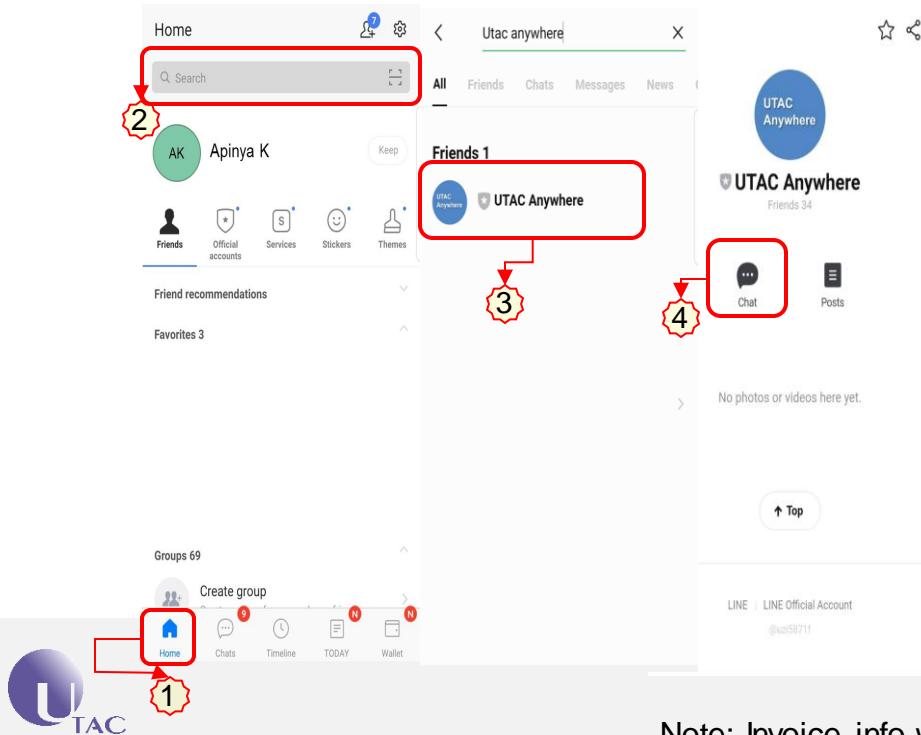


2

- Click UTAC Anywhere at the bottom to pop up the menu. 5
- Click SWR/BR/Trial/EBR menu 6 and you will be prompted with a request to put the request#.
- Put in your build request# (just numeric, e.g. 201912345)
- UTAC Anywhere will provide you the lot detail status and expected SOD.

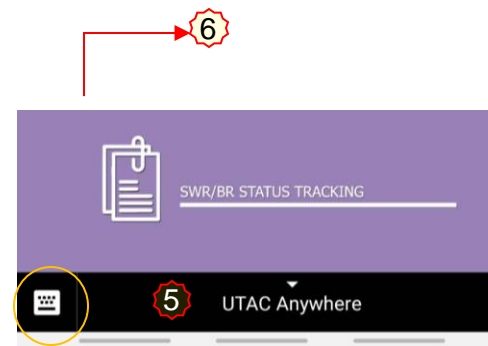

Click to Switch between menu and typing option

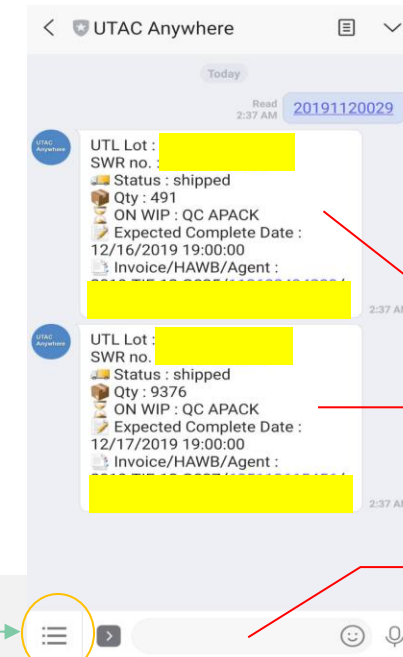

Lot detail and Status

Typing area

Note: Invoice info will show only when the lot has been shipped; else it will be blank.

THANK YOU