


MANUAL CONTROL FLOW CHART

Boxes are functions called and flags set true

Default true flags:
manual_control
control_wheels
use_uart

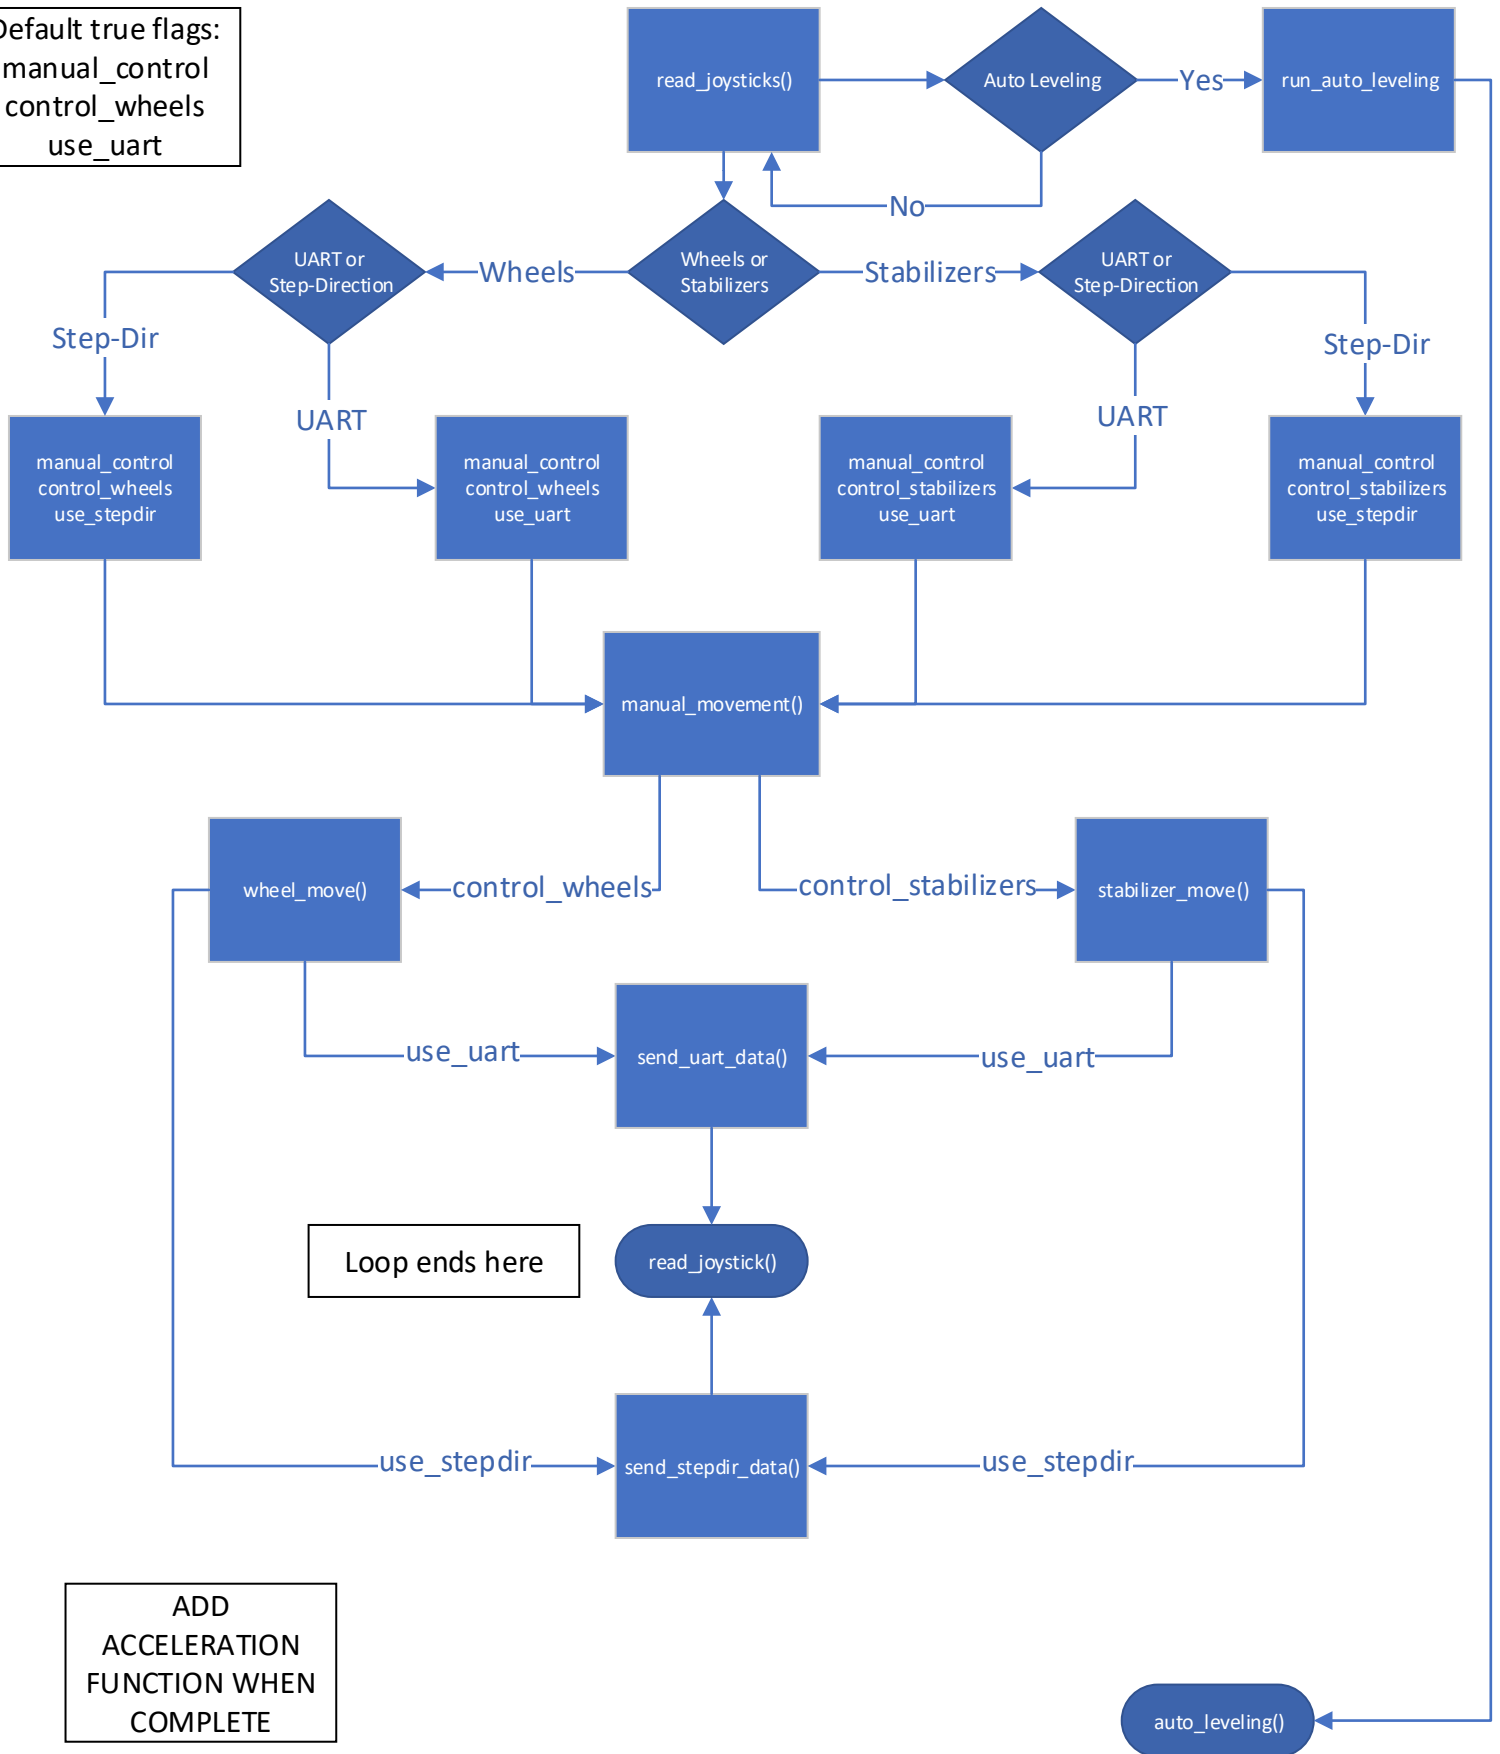

ADD
ACCELERATION
FUNCTION WHEN
COMPLETE

AUTOLEVELING FLOW CHART

Boxes are functions called and flags set true

Default true flags: none

