

ZC DRUM 2024 cheat sheet v 1.0

16 Pads

0	1	2	3	4	5	6	7
Wave	Envelope	Length	Pitch	Modulation	Volume	Pan	Filter

Sound parameters

SHIFT (Rotary switch)

8	9	10	11	12	13	14	15
BPM	Master Volume	Transport	Master Filter	Octave	Pattern (song mode)*	Sync Mode	

Misc parameters

SHIFT (Rotary switch)

Modes / Functions

16	17	18	19	20	21	22	23
Pad	Random pattern	Load patterns	Save patterns	Mute	Piano	Play	Song mode
Select	Random sound	Load sounds	Save sounds	Solo			
Write	Random notes	Load patterns & sounds	Save patterns & sounds	Melodic			
				Clear			
				First step			
				Last step			
				Cancel Mutes & Solos			
					Record	Select last pattern (song)	

SHIFT (Rotary switch)

- Pad

Play sound 0-15
- Select

Select sound
- Write

Write mode
- Random pattern

random steps with random pitch at melodic tracks
- Random sound

random parameters
- Random note

change pitch of steps marked ON at melodic tracks
- Load patterns (tracks)

Load only patterns
- Load sounds

Load only sounds
- Load pattern & sounds

Load both
- Save patterns (tracks)

Save all patterns into a slot 0-15
- Save sounds

Save all sounds into a slot 0-15
- Save patterns & sounds

Save both
- Mute

Mute track
- Solo

Solo track
- Melodic

melodic plays saved pitch on each step and no melodic plays parameter pitch
- Clear

Clear pattern
- Fist step

Select first step
- Last step

Select last step
- Piano

Sets pads as 16 piano keys
- Play

Set sequencer ON or OFF
- Song mode

Plays patterns asigned into a song
- * Pattern song mode

Rotary selects the pattern slot of a song. Press a pad to set the pattern into the slot

	OLED
Sound selected	S X
Selected sound parameter	XXX
Value	X
Pattern	P X
Sound palette	S X
Mode	Xxxxxx