

AVTM 672001
Rev. B
October 2001

Instruction Manual
for
DELTA-2000
10-kV Automated Insulation Test Set
Catalog No. 672001

High-Voltage Equipment
Read the entire manual before operating.

Aparato de Alto Voltaje
Antes de operar este producto lea este manual enteramente.

AVO International
PO Box 9007
Valley Forge, PA 19485-1007 U.S.A
610-676-8500

Shipping Address:
Valley Forge Corporate Center
2621 Van Buren Avenue
Norristown, PA 19403 U.S.A

DELTA-2000
10-kV Automated Insulation Test Set
Instruction Manual

Copyright© February 1997 by AVO International
All rights reserved. Reproduction without written permission is prohibited.
Specifications are subject to change without notice.

Table of Contents

Section	Page
1	Introduction..... 1
	Receiving Instructions..... 1
	General Information..... 1
2	Safety 3
	Precautions 3
	Warning and Caution Notices 5
3	Specifications..... 6
	Electrical 6
	Environmental..... 8
	Physical Data 9
	Safety Features..... 10
	Accessories Supplied 10
	Optional Accessories..... 11
4	Controls, Indicators, and Connectors 12
	Control Unit Front Panel..... 12
	Control Unit Connector Panels 15
	High-Voltage Unit Connector Panel..... 17
5	Setup and Operation..... 18
	Safety Precautions..... 18
	Setup..... 18
	Description of Main Menu and Test Screens 22
	Ac Insulation Test Procedure..... 33
	Transformer Excitation Current Test Procedure..... 36
6	Maintenance and Calibration 40
	Maintenance..... 40
	Calibration..... 40
	Troubleshooting..... 48
	Repair 49
7	Spare Parts List 50
	Glossary 51
	Warranty 53
Appendix A	Data-Key Data Downloader Program
Appendix B	Applications Guide
Appendix C	Test Data Forms
Appendix D	Temperature Correction Tables

List of Illustrations

Figure		Page
1	Control Panel.....	13
2	Connector Panel, Control Unit (Right).....	16
3	Connector Panel, Control Unit (Left).....	16
4	Connector Panel, Control Unit (Front).....	17
5	Connector Panel, High-Voltage Unit.....	17
6	Typical Test Setup for Ac Insulation Testing of a Three-Phase Power Transformer ..	19
7	Typical Test Setup for Transformer Excitation Current Measurements.....	20
8	Printer Dip Switch Settings	21
9	Opening Display Screen	22
10	Self-Diagnostic Results Screen.....	23
11	First Test Screen	23
12	First Menu Screen	25
13	Second Menu Screen	26
14	Recall Readings Submenu	28
15	Second Test Screen	29
16	Third Test Screen	30
17	Typical Test Results Screen	31
18	“New Test” Test Screen	32
19	First Test Screen if Resonating Inductor Is Connected	32
20	Second Test Screen if Resonating Inductor Is Connected.....	33
21	Sample Printout (Header and Test Results) Ac Insulation Test Measurement	35
22	Test Results, Transformer Excitation Test	38
23	Sample Printout of Excitation Current Measurement.....	39

List of Tables

Table		
1	Maximum Measurable Specimen Capacitance at 50/60 Hz.....	8
2	Definition of Status Blocks on Test Screens.....	24
3	Analog PCB Calibration Checks	42
4	Relay and Range/Mode PCB Calibration Checks.....	44
5	Function of Relays and CMOS Switches.....	47

Section 1

Introduction

Receiving Instructions

Check the equipment received against the packing list to ensure that all materials are present. Notify AVO International of any shortage. Telephone (610) 676-8500 and ask for the Customer Service Department.

Examine the instrument for damage received in transit. If damage is discovered, file a claim with the carrier at once and notify AVO International, giving a detailed description of the damage.

This instrument has been thoroughly tested and inspected to meet rigid specifications before being shipped. It is ready for use when set up as indicated in this manual.

General Information

The DELTA-2000 is used for shop and field testing of high-voltage electrical insulating systems at test voltages up to 12 kV. Test results can be used to evaluate the nature and quality of electrical insulating materials and manufacturing processes to reveal contamination, fractures, punctures, and other defects that accompany the aging of insulation. The test set comprises a control unit, a high-voltage unit, cables, and a canvas carrying bag. Refer to the Specifications section for a list of included accessories.

Tests are made by measuring the capacitance, power factor (dissipation factor) and dielectric losses of a specimen. The values measured will change when undesirable conditions exist, such as moisture on or in the insulation; shorts or opens in windings or insulation; the presence of conductive contaminants in insulating oil, gas or solids; and the presence of internal partial discharges.

The test set measures the capacitance, power factor (dissipation factor) and dielectric losses of electrical insulation on high-voltage power equipment such as cables, bushings, insulators, circuit breakers, transformers, rotating machines, capacitors, and surge (lightning) arresters.

The test set measures changes of capacitance and dielectric loss due to variations of voltage level and ambient conditions, for example, changes in temperature, humidity, pressure, mechanical shock, vibration, and stress. Dielectric constant and transformer excitation current can also be measured. The test set makes all standard UST and GST tests on high-voltage apparatus; seven front-panel test mode switches set up test configuration.

- Ungrounded specimen test (UST), three positions
- Grounded specimen test (GST), one position
- Grounded specimen test using guard connection (GST), three positions

Features include:

- Automatic balance control by high-performance microprocessor.
- User-friendly operation.
- Automatic self-checking of test set calibration and operation.
- Large, easy-to-read LCD shows alphanumeric and graphic data.
- Front-panel MENU switches select operating mode.
- Dual low-voltage input cables simplify measurements on multi-winding transformers and circuit breakers containing inboard and outboard bushings.
- Automatic interference suppression circuit ensures trouble-free operation in switchyards (up to 765 kV) under electrostatic and magnetic interference conditions. The interference suppressor circuit is turned on and off using MENU switches. When the interference suppressor circuit is turned on, the level of interference is shown on the display.
- Direct reading of the following quantities:
 - Voltage
 - Capacitance
 - Current at 2.5 kV or 10 kV
 - Percent power factor
 - Percent dissipation factor
 - Watts at 2.5 kV or 10 kV
- External printer records test data.
- External personal computer (PC) or laptop can be connected instead of a printer to transfer test results.
- Data key stores 127 tests for retrieval and analysis. Stored data can be transferred to a PC.
- Optional bar code wand records equipment identification and temperature.
- Two safety interlocks (hand switch or foot switch).
- Built-in interface to the optional Resonating Inductor provides extended range of capacitive measurements.
- Two-piece design makes the test set easy to transport.
- Meets the requirements of both the European EMC and Low Voltage Directives.

Section 2 Safety

Precautions

The test set and the specimen to which it is connected are a possible source of high-voltage electrical energy and all persons making or assisting in tests must use all practical safety precautions to prevent contact with energized parts of the test equipment and related circuits. Persons actually engaged in the test must stand clear of all parts of the complete high-voltage circuit, including all connections, unless the test set is de-energized and all parts of the test circuit are grounded. Persons not directly involved with the work must be kept away from test activities by suitable barriers, barricades, or warnings. An interlock circuit is provided on the control unit of the test set to enable the operator to enclose all parts of the complete high-voltage circuit within a secure area. The interlock circuit should be used to shut off input power automatically upon unauthorized entry into the high-voltage area or for any other safety reasons.

Treat all terminals of high-voltage power equipment as a potential electric shock hazard. There is always the potential of voltages being induced at these terminals because of proximity to energized high-voltage lines or equipment. Always use a safety ground stick to ground the high-voltage conductor. A safety ground jumper must then be installed between all terminals of apparatus under test and ground. Always disconnect test leads from power equipment before attempting to disconnect them at the test set. The ground connection must be the first made and the last removed. Any interruption of the grounding connection can create an electric shock hazard.

This instrument operates from a single-phase power source. It has a three-wire power cord and requires a two-pole, three-terminal, live, neutral, and ground type connector. The voltage to ground from the live and neutral poles of the power source must be within the following rated operating voltage:

For Cat. No. 672001	120 V \pm 10%, 60 \pm 2 Hz
For Cat. No. 672001-44	120 V \pm 10%, 50 \pm 2 Hz
For Cat. No. 672001-45	230 V \pm 10%, 60 \pm 2 Hz
For Cat. No. 672001-47	230 V \pm 10%, 50 \pm 2 Hz

Before making connection to the power source, determine that the instrument rating matches the voltage of the power source and has a suitable two-pole, three-terminal grounding connector.

The power input plug must be inserted only into a mating receptacle with a ground contact. Do not bypass the grounding connection. Any interruption of the grounding connection can create an electric shock hazard. Determine that the receptacle is properly wired before inserting the plug.