Instruction Manual for

DELTA-2000 10-kV Automated Insulation Test Set

Catalog No. 672001

High-Voltage Equipment Read the entire manual before operating.

Aparato de Alto Voltaje Antes de operar este producto lea este manual enteramente.

> AVO International PO Box 9007 Valley Forge, PA 19485-1007 U.S.A 610-676-8500

Shipping Address: Valley Forge Corporate Center 2621 Van Buren Avenue Norristown, PA 19403 U.S.A

DELTA-2000 10-kV Automated Insulation Test Set

Instruction Manual

Copyright© February 1997 by AVO International All rights reserved. Reproduction without written permission is prohibited. Specifications are subject to change without notice.

Table of Contents

Section	on	Page	
1	Introdu	action1	
		Receiving Instructions	
		General Information	
2	Sofoty	2	
2	Safety	Precautions 3	
		Warning and Caution Notices	
3	Specific	cations6	
3	Specific	Electrical 6	
		Environmental 8	
		Physical Data 9	
		Safety Features	
		Accessories Supplied 10	
		Optional Accessories 11	
4	Contro	ls, Indicators, and Connectors	
		Control Unit Front Panel	
		Control Unit Connector Panels	
		High-Voltage Unit Connector Panel 17	
5	Setup a	and Operation	
	1	Safety Precautions	
		Setup	
		Description of Main Menu and Test Screens	
		Ac Insulation Test Procedure	
		Transformer Excitation Current Test Procedure	
6	Mainte	nance and Calibration40	
O	TVICITICO	Maintenance 40	
		Calibration	
		Troubleshooting	
		Repair	
7	Spare F	Parts List50	
Glossa	ars/	51	
	=		
	•		
Appen		Data-Key Data Downloader Program	
Appen		Applications Guide	
Appen		Test Data Forms	
Appen	ıdix D	Temperature Correction Tables	

List of Illustrations

Figure		Page
1	Control Panel	13
2	Connector Panel, Control Unit (Right)	16
3	Connector Panel, Control Unit (Left)	16
4	Connector Panel, Control Unit (Front)	17
5	Connector Panel, High-Voltage Unit	17
6	Typical Test Setup for Ac Insulation Testing of a Three-Phase Power Transform	er 19
7	Typical Test Setup for Transformer Excitation Current Measurements	20
8	Printer Dip Switch Settings	21
9	Opening Display Screen	22
10	Self-Diagnostic Results Screen.	23
11	First Test Screen	23
12	First Menu Screen	25
13	Second Menu Screen	
14	Recall Readings Submenu	
15	Second Test Screen	29
16	Third Test Screen	30
17	Typical Test Results Screen	
18	"New Test" Test Screen	
19	First Test Screen if Resonating Inductor Is Connected	
20	Second Test Screen if Resonating Inductor Is Connected	
21	Sample Printout (Header and Test Results) Ac Insulation Test Measurement	
22	Test Results, Transformer Excitation Test	
23	Sample Printout of Excitation Current Measurement	39
	List of Tables	
Table		
1	Maximum Measurable Specimen Capacitance at 50/60 Hz	8
2	Definition of Status Blocks on Test Screens	
3	Analog PCB Calibration Checks	42
4	Relay and Range/Mode PCB Calibration Checks	44
5	Function of Relays and CMOS Switches.	47

Section 1 Introduction

Receiving Instructions

Check the equipment received against the packing list to ensure that all materials are present. Notify AVO International of any shortage. Telephone (610) 676-8500 and ask for the Customer Service Department.

Examine the instrument for damage received in transit. If damage is discovered, file a claim with the carrier at once and notify AVO International, giving a detailed description of the damage.

This instrument has been thoroughly tested and inspected to meet rigid specifications before being shipped. It is ready for use when set up as indicated in this manual.

General Information

The DELTA-2000 is used for shop and field testing of high-voltage electrical insulating systems at test voltages up to 12 kV. Test results can be used to evaluate the nature and quality of electrical insulating materials and manufacturing processes to reveal contamination, fractures, punctures, and other defects that accompany the aging of insulation. The test set comprises a control unit, a high-voltage unit, cables, and a canvas carrying bag. Refer to the Specifications section for a list of included accessories.

Tests are made by measuring the capacitance, power factor (dissipation factor) and dielectric losses of a specimen. The values measured will change when undesirable conditions exist, such as moisture on or in the insulation; shorts or opens in windings or insulation; the presence of conductive contaminants in insulating oil, gas or solids; and the presence of internal partial discharges.

The test set measures the capacitance, power factor (dissipation factor) and dielectric losses of electrical insulation on high-voltage power equipment such as cables, bushings, insulators, circuit breakers, transformers, rotating machines, capacitors, and surge (lightning) arresters.

The test set measures changes of capacitance and dielectric loss due to variations of voltage level and ambient conditions, for example, changes in temperature, humidity, pressure, mechanical shock, vibration, and stress. Dielectric constant and transformer excitation current can also be measured. The test set makes all standard UST and GST tests on high-voltage apparatus; seven front-panel test mode switches set up test configuration.

- Ungrounded specimen test (UST), three positions
- Grounded specimen test (GST), one position
- Grounded specimen test using guard connection (GST), three positions

Features include:

- Automatic balance control by high-performance microprocessor.
- User-friendly operation.
- Automatic self-checking of test set calibration and operation.
- Large, easy-to-read LCD shows alphanumeric and graphic data.
- Front-panel MENU switches select operating mode.
- Dual low-voltage input cables simplify measurements on multi-winding transformers and circuit breakers containing inboard and outboard bushings.
- Automatic interference suppression circuit ensures trouble-free operation in switchyards (up to 765 kV) under electrostatic and magnetic interference conditions. The interference suppressor circuit is turned on and off using MENU switches. When the interference suppressor circuit is turned on, the level of interference is shown on the display.
- Direct reading of the following quantities:

Voltage

Capacitance

Current at 2.5 kV or 10 kV

Percent power factor

Percent dissipation factor

Watts at 2.5 kV or 10 kV

- External printer records test data.
- External personal computer (PC) or laptop can be connected instead of a printer to transfer test results.
- Data key stores 127 tests for retrieval and analysis. Stored data can be transferred to a PC.
- Optional bar code wand records equipment identification and temperature.
- Two safety interlocks (hand switch or foot switch).
- Built-in interface to the optional Resonating Inductor provides extended range of capacitive measurements.
- Two-piece design makes the test set easy to transport.
- Meets the requirements of both the European EMC and Low Voltage Directives.

Section 2 Safety

Precautions

The test set and the specimen to which it is connected are a possible source of high-voltage electrical energy and all persons making or assisting in tests must use all practical safety precautions to prevent contact with energized parts of the test equipment and related circuits. Persons actually engaged in the test must stand clear of all parts of the complete high-voltage circuit, including all connections, unless the test set is de-energized and all parts of the test circuit are grounded. Persons not directly involved with the work must be kept away from test activities by suitable barriers, barricades, or warnings. An interlock circuit is provided on the control unit of the test set to enable the operator to enclose all parts of the complete high-voltage circuit within a secure area. The interlock circuit should be used to shut off input power automatically upon unauthorized entry into the high-voltage area or for any other safety reasons.

Treat all terminals of high-voltage power equipment as a potential electric shock hazard. There is always the potential of voltages being induced at these terminals because of proximity to energized high-voltage lines or equipment. Always use a safety ground stick to ground the high-voltage conductor. A safety ground jumper must then be installed between all terminals of apparatus under test and ground. Always disconnect test leads from power equipment before attempting to disconnect them at the test set. The ground connection must be the first made and the last removed. Any interruption of the grounding connection can create an electric shock hazard.

This instrument operates from a single-phase power source. It has a three-wire power cord and requires a two-pole, three-terminal, live, neutral, and ground type connector. The voltage to ground from the live and neutral poles of the power source must be within the following rated operating voltage:

For Cat. No. 672001	$120 \text{ V} \pm 10\%$, $60 \pm 2 \text{ Hz}$
For Cat. No. 672001-44	$120 \text{ V} \pm 10\%$, $50 \pm 2 \text{ Hz}$
For Cat. No. 672001-45	$230 \text{ V} \pm 10\%$, $60 \pm 2 \text{ Hz}$
For Cat. No. 672001-47	$230 \text{ V} \pm 10\%$, $50 \pm 2 \text{ Hz}$

Before making connection to the power source, determine that the instrument rating matches the voltage of the power source and has a suitable two-pole, three-terminal grounding connector.

The power input plug must be inserted only into a mating receptacle with a ground contact. Do not bypass the grounding connection. Any interruption of the grounding connection can create an electric shock hazard. Determine that the receptacle is properly wired before inserting the plug.