


Controller

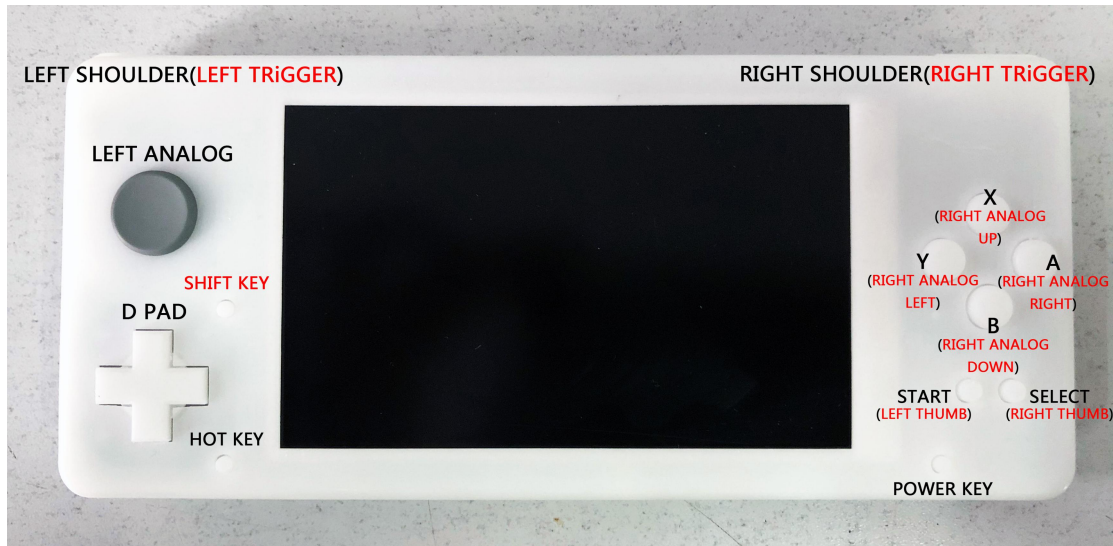

The combination of buttons is mainly divided into three categories: Hotkeys Combination, Hardware Combination, and Special Combination.

Hotkeys Combination:

Hotkeys enable you to press a combination of buttons to access functions such as saving, loading, and exiting emulators. The following chart shows the default hotkey combinations. By default, the hotkey is select so that means you hold down select while pressing another button to execute a command. Note that hotkeys are only specific to the retroarch/libretro based emulators.

Combination Tpye	Action
HOT KEY + START	Exit Emulators
HOT KEY + RIGHT SHOULDER	Save State
HOT KEY + LEFT SHOULDER	Load State
HOT KEY + D-PAD RIGHT	Input State Slot Increase
HOT KEY + D-PAD LEFT	Input State Slot Decrease
HOT KEY + X	RGUI Menu
HOT KEY + B	Reset Game
HOT KEY + A	Emulators Volume ++
HOT KEY + Y	Emulators Volume --
HOT KEY + SELECT	Fast Forward Toggle

Hardware Combination:

Combination Tpye	Action
SHIFT KEY + LEFT SHOULDER	LEFT TRIGGER
SHIFT KEY + RIGHT SHOULDER	RIGHT TRIGGER
SHIFT KEY + A	RIGHT ANALOG RIGHT
SHIFT KEY + B	RIGHT ANALOG DOWN
SHIFT KEY + X	RIGHT ANALOG UP
SHIFT KEY + Y	RIGHT ANALOG LEFT
SHIFT KEY + START	LEFT THUMB
SHIFT KEY + SELECT	RIGHT THUMB
SHIFT KEY + D-PAD UP (press)	Screen Backlight ++
SHIFT KEY + D-PAD DOWN (press)	Screen Backlight --
SHIFT KEY + D-PAD RIGHT (click)	System Volume ++
SHIFT KEY + D-PAD LEFT (click)	System Volume --

Special Combination:

Combination Tpye	Action
L1 + R1 + START + SELECT	Open/Close System Power
POWER KEY(click)	Open Battery Power
POWER KEY(double click)	Close Battery Power