



PROGRAM WITH JTAGICE3 OR ATMEL-ICE  
USE FIRST SIX PINS OF 10-PIN JTAG CONNECTOR  
(FOR ATMEL-ICE, PLUG INTO AVR, NOT ARM SIDE)  
NOTE SQUARE VIA ON PIN 1 (JP3)  
SET PROGRAMMER TO "SWD" INTERFACE

Sheet: 1/1