




See https://www.cpcwiki.eu/index.php?title=Guide_on_how_to_connect_a_3.5%22_drive_to_a_CPC6128/664 for more information on the AB Switch.

Note the Wiki page identifies pins 11 and 12. These are the Shugart pin numbers and not the Amstrad Disc Drive 2 Socket numbers which are pins 23 and 24. Pin 24 being GND.

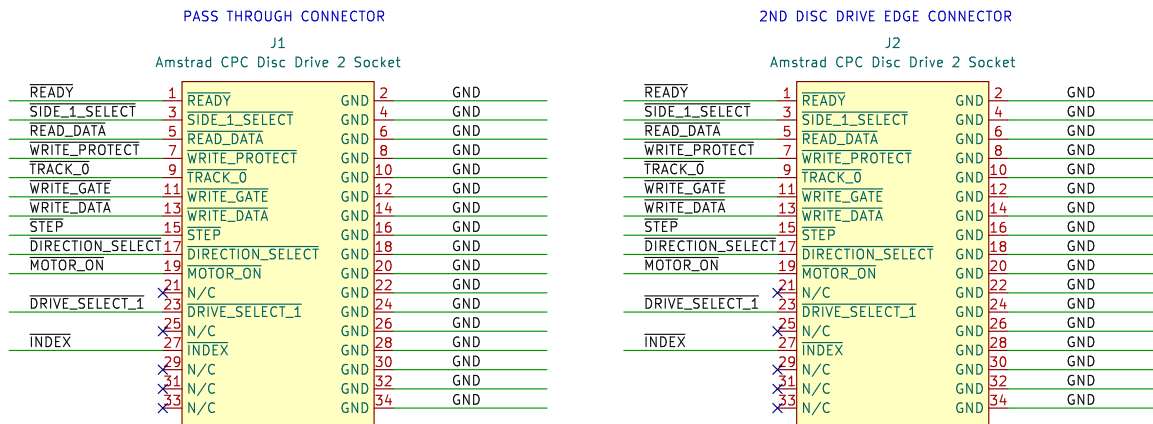

Disc Drive 2 Socket Definition From Amstrad 6128 User Manual

 Disc Drive 2 Socket

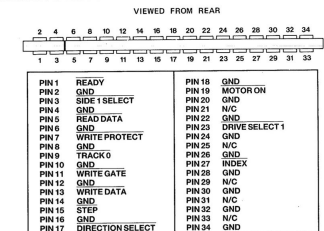

For information on the 2nd disc drive connector see [https://www.cpcwiki.eu/index.php/Connector:2nd_disc_drive_\(CPC664,_CPC6128,_CPC6128%2B\)](https://www.cpcwiki.eu/index.php/Connector:2nd_disc_drive_(CPC664,_CPC6128,_CPC6128%2B))

This includes pin mapping between the Shugart standard and the Amstrad pins.

Simple adaptor to enable Drive Select 1 (connect pin 11 to 12)
and allow Drive B to act as Drive A

Sheet: /

File: Amstrad CPC Drive AB Selector.kicad_sch

Title: RABS Amstrad CPC Drive AB Selector

Size: A4

Date: 2025-05-22

Rev: 1.0

KiCad E.D.A. kicad 7.0.5

Id: 1/1