

 
PHILIPS  
Kompur Induksi  
HD4902  
2000W  
220-240V ~ 50-60Hz  
Negara Pembuat: Cina  
Diimpor oleh:  
PT Versuni HomeLife Indonesia  
Gedung Cibis Nine, lantai 10, Jl. TB Simatupang No. 2, RT 001/  
RW 005 Kelurahan Cilandak Timur, Kec. Pasar Minggu, Kota  
Adm. Jakarta Selatan, - DKI Jakarta, 12560 - INDONESIA  
No. Reg.: IMKG.1232.07.2023

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.  
This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.  
2023 © Versuni Holding B.V.


6608.000.0817.3 (11/07/2023)




## Overview Ikhtisar

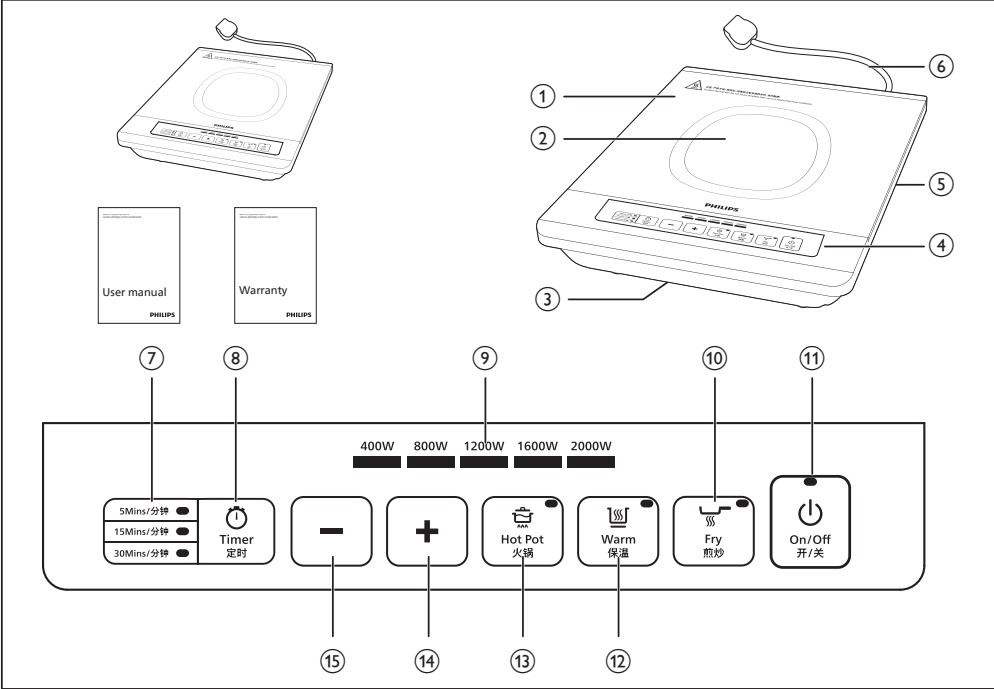

## Preparing for use Menyiapkan penggunaan

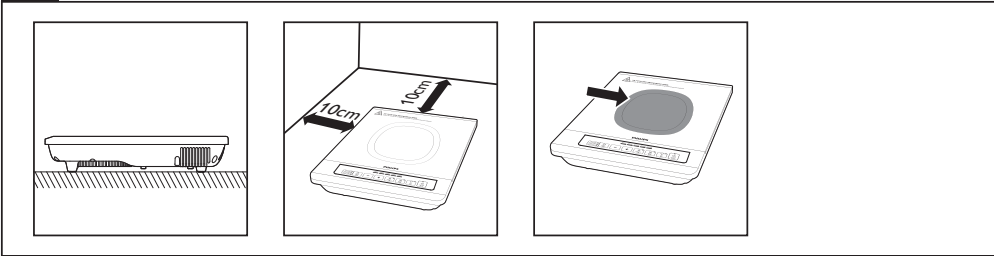 

## Recommended types and sizes of cookware Tipe dan ukuran peralatan memasak yang disarankan

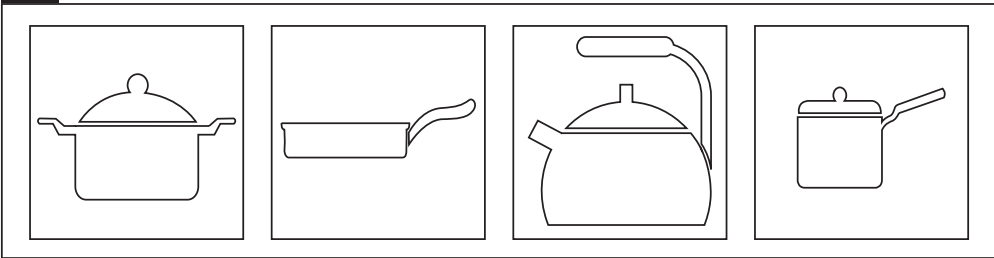 

## English

### 1 Safety

Read this important information leaflet carefully before you use the appliance and save it for future reference.

#### Danger

 
- The appliance must not be immersed.

#### Warning


- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- WARNING: Always follow the instructions and use the appliance properly to avoid potential injury.
- WARNING: If the surface of the cooking plate is cracked, switch off the appliance and do not use it anymore to avoid the possibility of electric shock.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



## Using the induction cooker Menggunakan Kompur Induksi

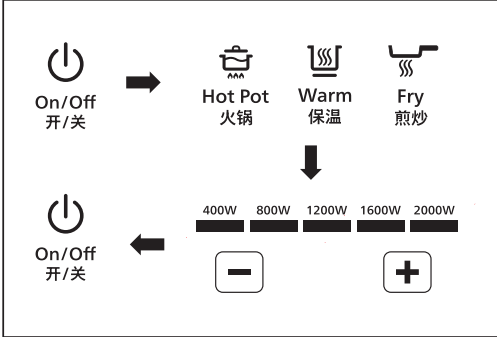

## Using the timer Menggunakan timer

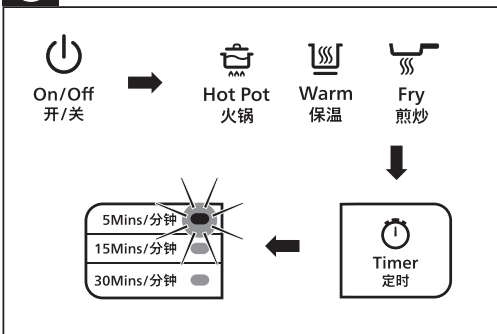 

## Cleaning Membersihkan



- Do not expose the induction cooker to high temperatures, hot gas, steam or damp heat. Do not place the induction cooker on or near an operating or still hot stove or cooker.
- Always switch off the appliance before you unplug it.
- Always unplug the appliance and let it cool down before you clean it.
- If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and Philips refuses any liability for damage caused.
- Place the induction cooker on a stable, horizontal and level surface and make sure there is at least 10cm free space around it to prevent overheating.
- Do not use the induction cooker on a gas cooker or metal plate.
- For better ventilation, do not block the air inlet and outlets while the appliance is operating, e.g. do not operate the appliance on a plastic tablecloth.
- Do not place anything between the cookware and the cooking plate.
- The maximum weight that can be put on the induction cooker is 15kg.
- Beware of hot steam that comes out of the cookware during cooking or when you remove the lid.
- Do not lift and move the induction cooker while it is operating.
- Never put empty cookware on the switched-on induction cooker, as this could cause the cookware to become distorted or the heating coil to become damaged.
- Do not store flammable materials and liquids near or on the induction cooker.
- Avoid hard contact between the cookware or other objects and the crystallite cooking plate.
- Always place the cookware on the cooking zone during cooking.

### Automatic shut-off

The appliance is equipped with automatic shut-off. It switches off automatically in the following situations:

- If cookware with a bottom diameter less than 6cm, or small objects like knives, forks, or spoons are placed on the plate during cooking.
- If the voltage is lower than 120V or higher than 280V.
- If no cookware is put on the cooking zone when the induction cooker is working for 1 minute.
- If the induction cooker has been idle for 2 hours.
- If the temperature of the central plate is higher than 300°C, or if the internal temperature of the induction cooker is too high.

### Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

## 2 Your induction cooker

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## 3 What's in the box

Induction cooker main unit      User manual  
Important information leaflet      Warranty card

### Overview

①	Cooking plate	④	Control panel
②	Cooking zone	⑤	Air outlets
③	Air inlet	⑥	Power cord

### Controls overview

⑦	Timer indicator	⑫	Warm mode
⑧	Timer button	⑬	Hot pot mode
⑨	Cooking power	⑭	Increase button
⑩	Fry mode	⑮	Decrease button
⑪	On/Off button		

## 4 Before first use

Remove all packaging materials from the induction cooker.

### Preparing for use

- Place the appliance on a dry, stable and level surface.
- Make sure there is at least 10cm free space around the appliance to prevent overheating.
- Always place the cookware on the cooking zone during cooking.
- Make sure you use cookware of the correct types and sizes (see the table below).

### Recommended types and sizes of cookware

Material	Cookware with a bottom made of iron or magnetic stainless steel
Shape	Cookware with a flat bottom

## 5 Using the induction cooker

There are three cooking modes: Hot pot ( 火锅 ), Warm ( 保温 ), and Fry ( 煎炒 ).

- Follow the steps in "Preparing for use".
- Press the On/Off button ( 开/关 ) to switch on the appliance, and the On/Off indicator lights up.
- Press the desired cooking mode button, the corresponding indicator lights up and the induction cooker starts working in the selected mode.
- When the cooking is finished, press the On/Off button ( 开/关 ) to switch off the appliance.
- Unplug the induction cooker after the fan stops working.

### Note

- During cooking, you can change the power level by pressing the Increase ( + ) or Decrease ( - ) button.



- Metallic objects such as knives, forks, spoons and lids should not be placed on the induction cooker since they can get hot.
- The temperature of accessible surfaces may be high when the appliance operates.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Only connect the appliance to an earthed wall socket. Always make sure the plug is inserted firmly into the socket.
- Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- Keep the mains cord out of the reach of children. Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.
- Never connect this appliance to an external timer switch in order to avoid a hazardous situation.
- Make sure the cooking plate is clean and dry before you switch on the appliance.
- Do not cover the air outlets while the induction cooker is operating.
- Do not plug in the appliance or operate the control panel with wet hands.
- Don't clean the appliance while hot.
- Do not touch the cooking plate after cooking, as it retains heat from the cookware.
- Do not insert external objects such as iron wires and bolts into the appliance.
- Do not cover any part of the cooking plate with aluminium to prevent the risk of electric shock, short circuiting or fire.

#### Caution

- The symbol marked on the appliance means "Caution, Hot surfaces", do not touch the hot surface in order to avoid scald.
- Always let the appliance cool down before you clean or move it.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

