



Position of Parts in Engine Compartment (LHD 1GR-FE)

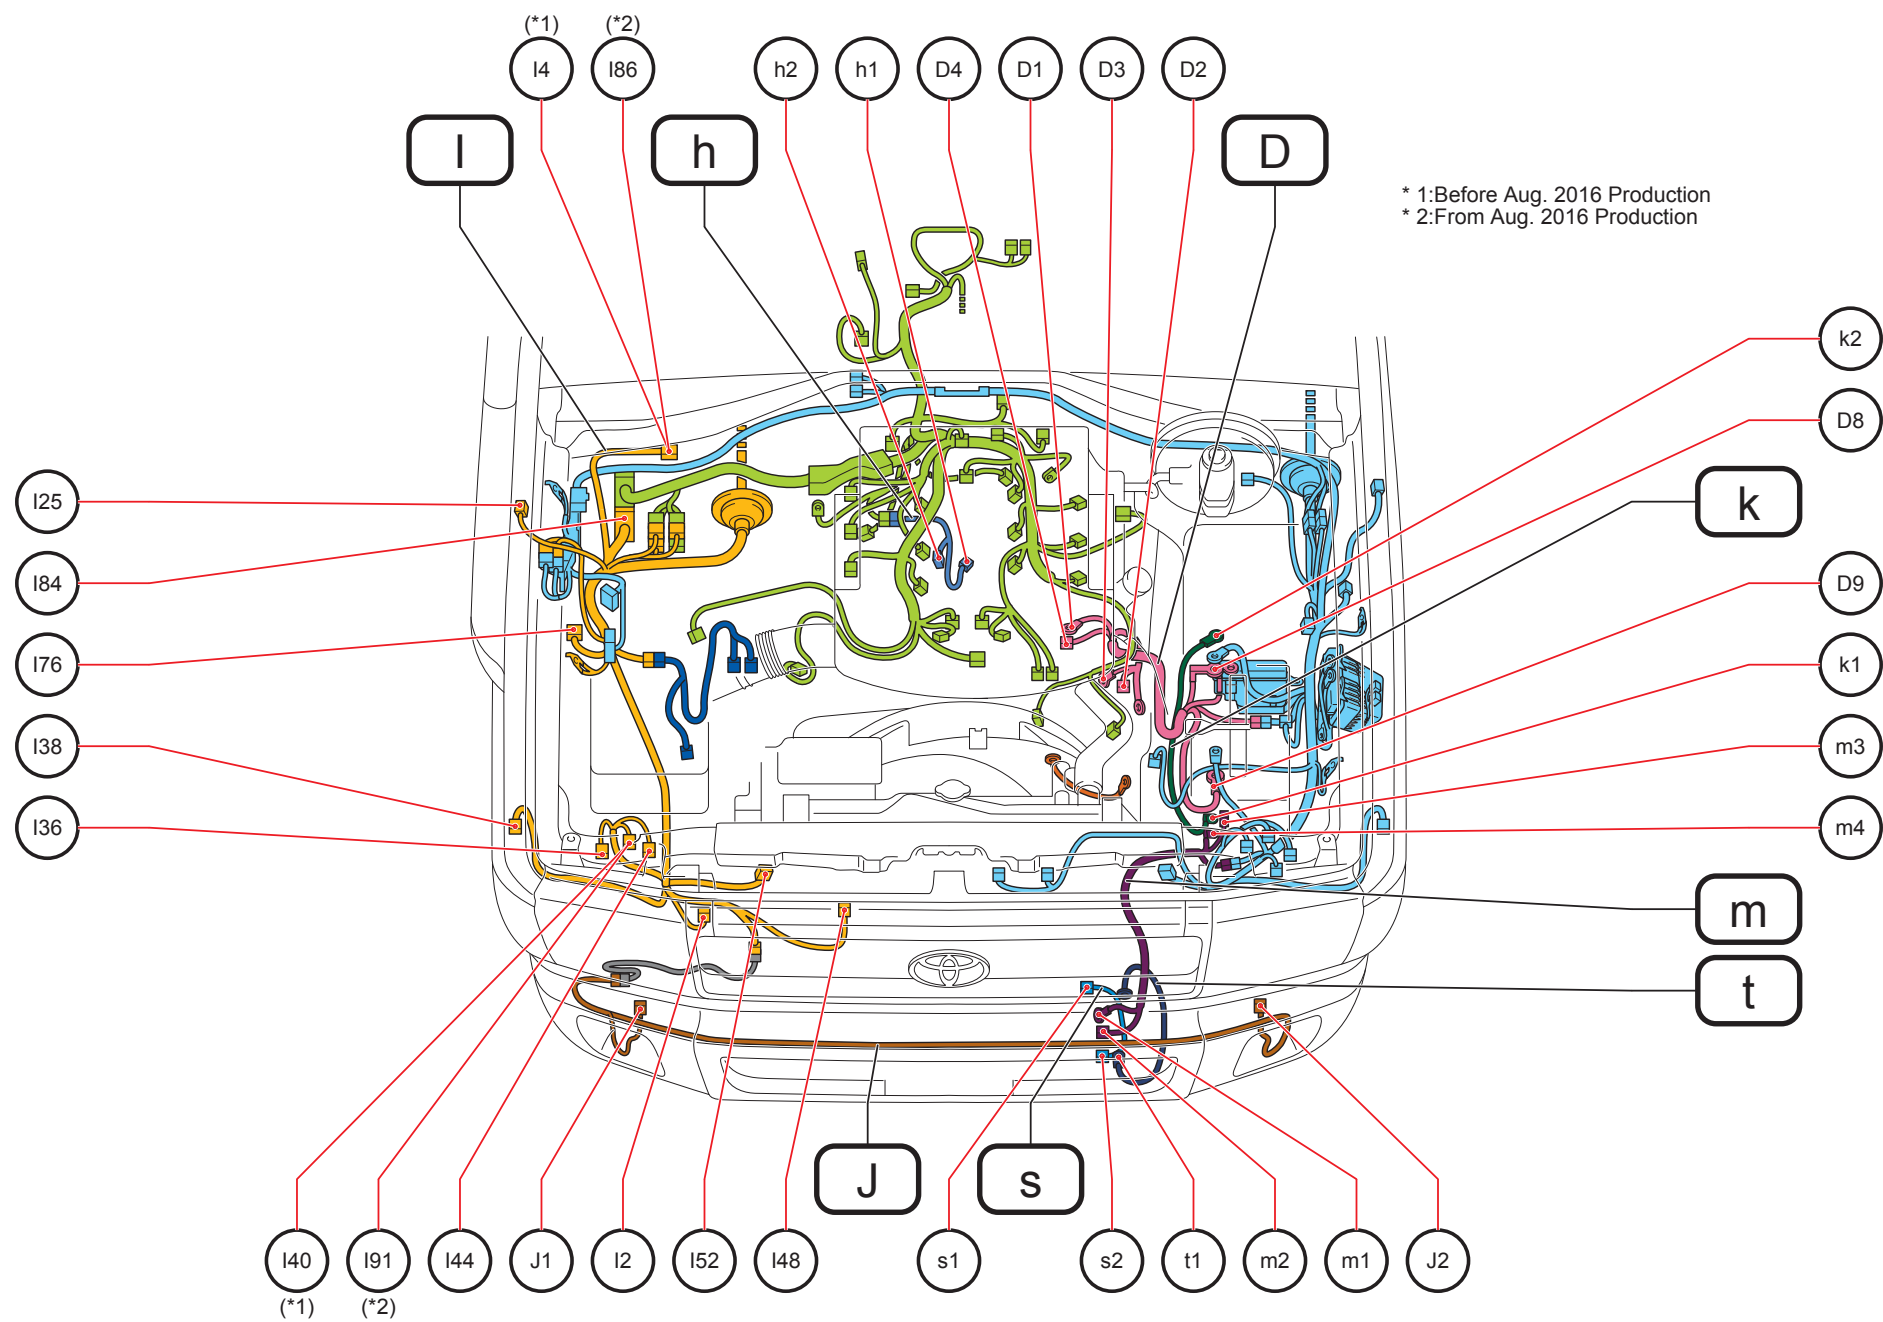

D1	Generator Assembly
D2	Starter Assembly
D3	Starter Assembly
D4	Generator Assembly
D8	Battery (Main)
D9	Battery (Main)
I2	A/C Pressure Switch (Cooler Refrigerant Liquid Pipe B)
I4	Windshield Wiper Motor Assembly
I25	Side Turn Signal Light Assembly RH
I36	Headlight Assembly RH
I38	Headlight Assembly RH
I40	Headlight Assembly RH
I44	Headlight Assembly RH
I48	Thermistor Assembly
I52	Front Airbag Sensor RH
I76	Fuse Block Assembly
I84	ECM
I86	Windshield Wiper Motor Assembly
I91	Headlight Assembly RH
J1	Fog Light Assembly RH
J2	Fog Light Assembly LH
h1	Knock Control Sensor (Bank 2)
h2	Knock Control Sensor (Bank 1)
k1	No. 1 Magnet Switch Assembly
k2	Battery (Main)
m1	Winch Motor with Magnet Switch Assembly
m2	Winch Motor with Magnet Switch Assembly
m3	No. 1 Magnet Switch Assembly
m4	No. 1 Magnet Switch Assembly
s1	Winch Assembly
s2	Winch Motor with Magnet Switch Assembly
t1	Winch Motor with Magnet Switch Assembly


Position of Parts in Engine Compartment (LHD 1GR-FE)

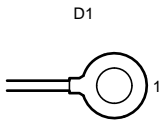


D1




90980-11400

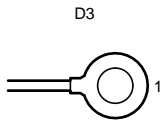


D3

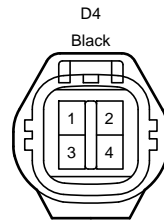


90980-11964

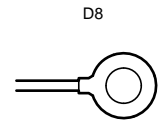


D8

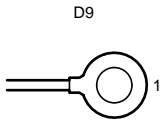

D9

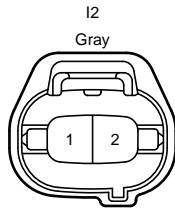


90980-11149

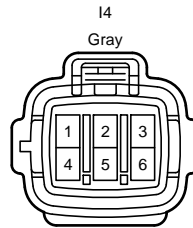


90980-12635




90980-11162

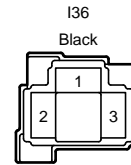


90980-11314
(High, Low)

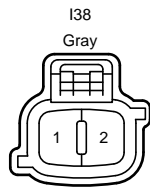

90980-11019
(Front Turn Signal Light)

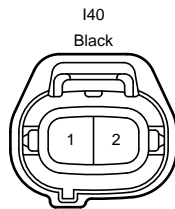


90980-12634
(Front Clearance Light)

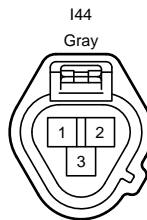

90980-11016
(Headlight Beam Level Control Actuator)




90980-11070

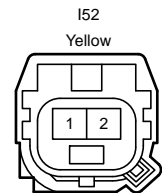


90980-12490




90980-10989

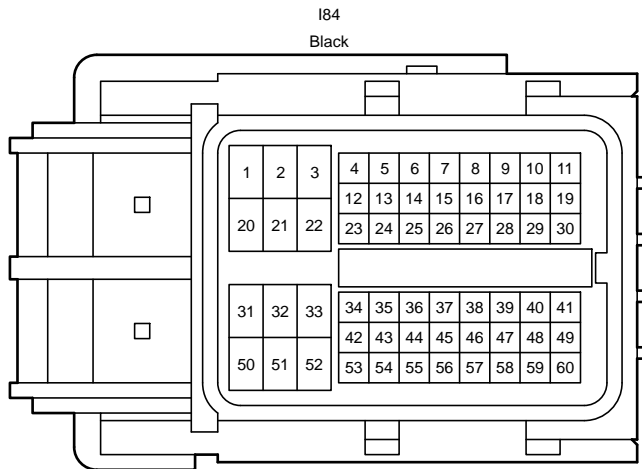


90980-12462

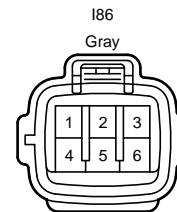


90980-11194

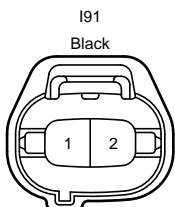


90980-11156
(Clearance Light)

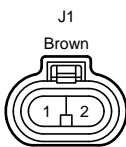


90980-11096

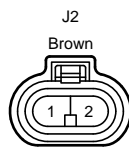

90980-11096

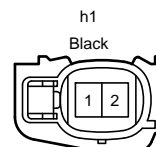

90980-11875

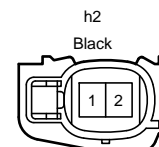

90980-11875

Position of Parts in Engine Compartment (LHD 1GR-FE)

