


- * 1 : 4-Door
- * 8 : Except Pick-Up Body Type
- *10 : 1GR-FE
- *11 : 1HZ
- *12 : 1VD-FTV
- *13 : Pick-Up Body Type
- *14 : 2-Door Pick-Up Body Type
- *15 : 4-Door Pick-Up Body Type, Except Pick-Up Body Type

Door Lock Control (RHD w/ Wireless Door Lock Control) (Before Aug. 2016 Production), Wireless Door Lock Control (RHD) (Before Aug. 2016 Production)

L31
Door Control ECU with Receiver Assembly

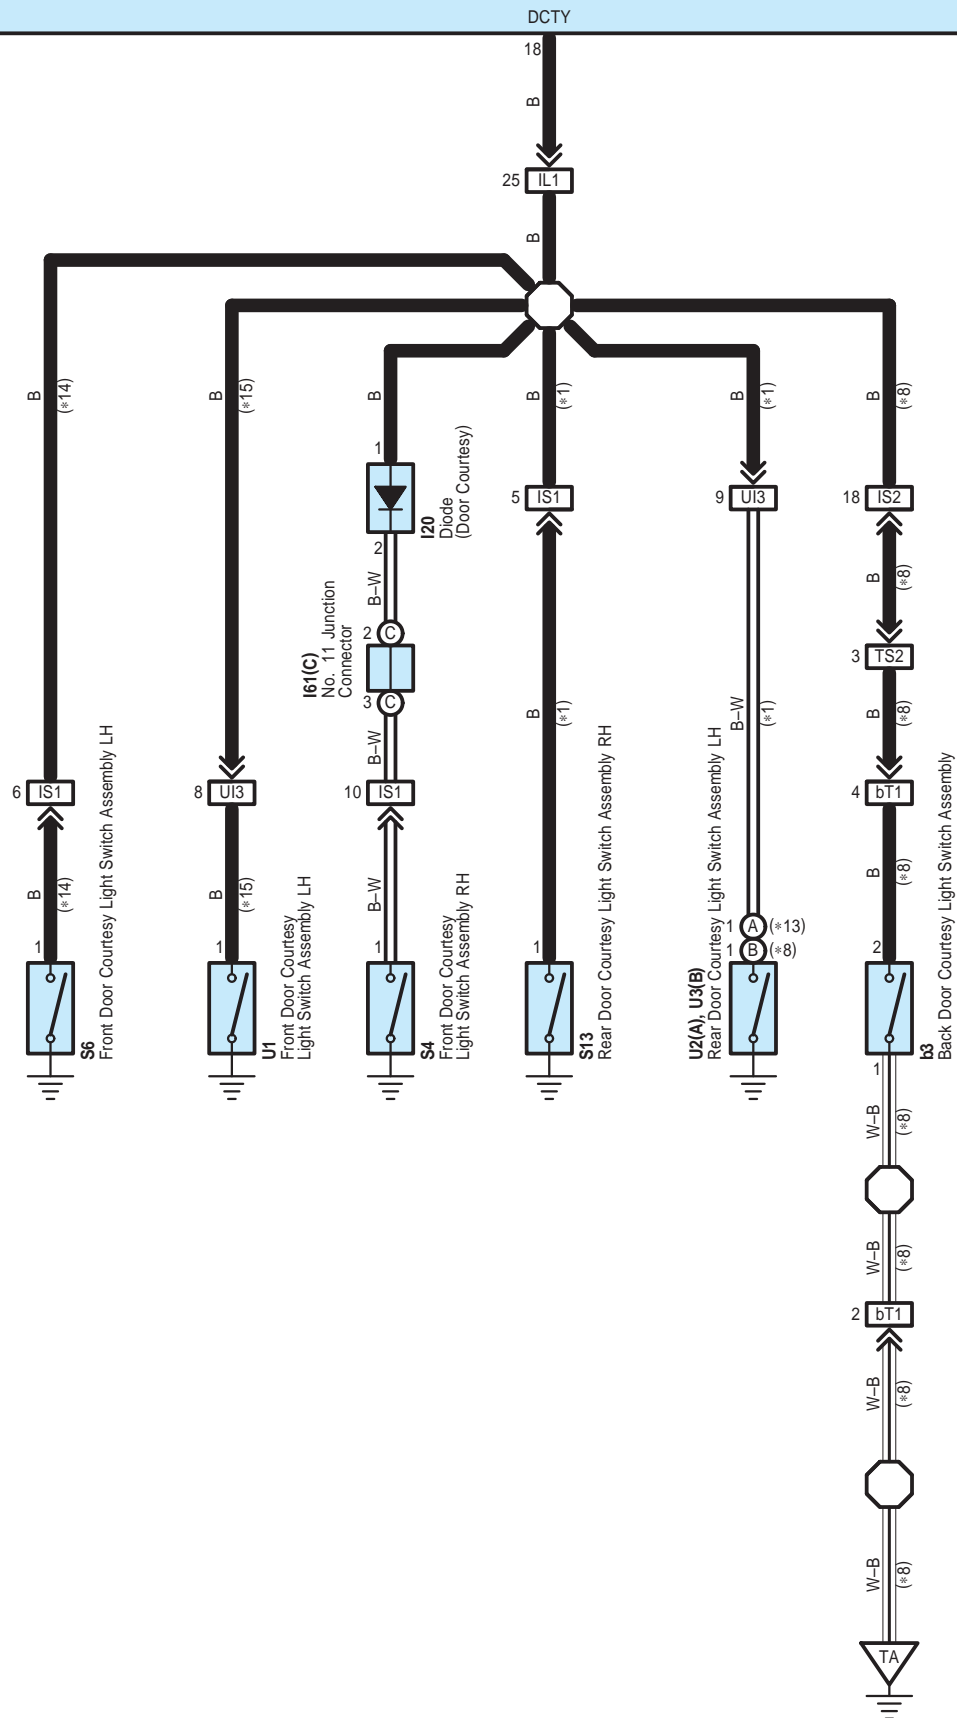

The diagram illustrates the electrical connections for the front door control switch assembly (L18) and the turn signal flasher assembly (I28(A)).

Turn Signal Flasher Assembly (I28(A)):

- Terminal 8 (A) is connected to the HAZ (Hazard) line.
- Terminal 37 (IL1) is connected to the G-R (Ground-Right) line.
- Terminal 16 (B) is connected to the G (Ground) line.
- Terminal 18 (B) is connected to the L32(B) No. 24 Junction Connector.


Door Control Switch Assembly (L18):

- Terminal 3 (L) is connected to the R-G (Right-Ground) line.
- Terminal 5 (UL) is connected to the R-W (Right-White) line.
- Terminal 6 (E) is connected to the W-B (White-Black) line.

Wiring Details:


- The R-W and R-G lines are connected to the door control switch assembly (L18) and the turn signal flasher assembly (I28(A)).
- The W-B line is connected to the door control switch assembly (L18) and the turn signal flasher assembly (I28(A)).
- The G and G-R lines are connected to the turn signal flasher assembly (I28(A)).
- The L32(B) No. 24 Junction Connector is connected to the G and G-R lines.
- The L39 No. 31 Junction Connector is connected to the W-B line.
- The door control switch assembly (L18) is connected to the W-B line.
- The turn signal flasher assembly (I28(A)) is connected to the W-B line.

Door Lock Control (RHD w/ Wireless Door Lock Control) (Before Aug. 2016 Production), Wireless Door Lock Control (RHD) (Before Aug. 2016 Production)

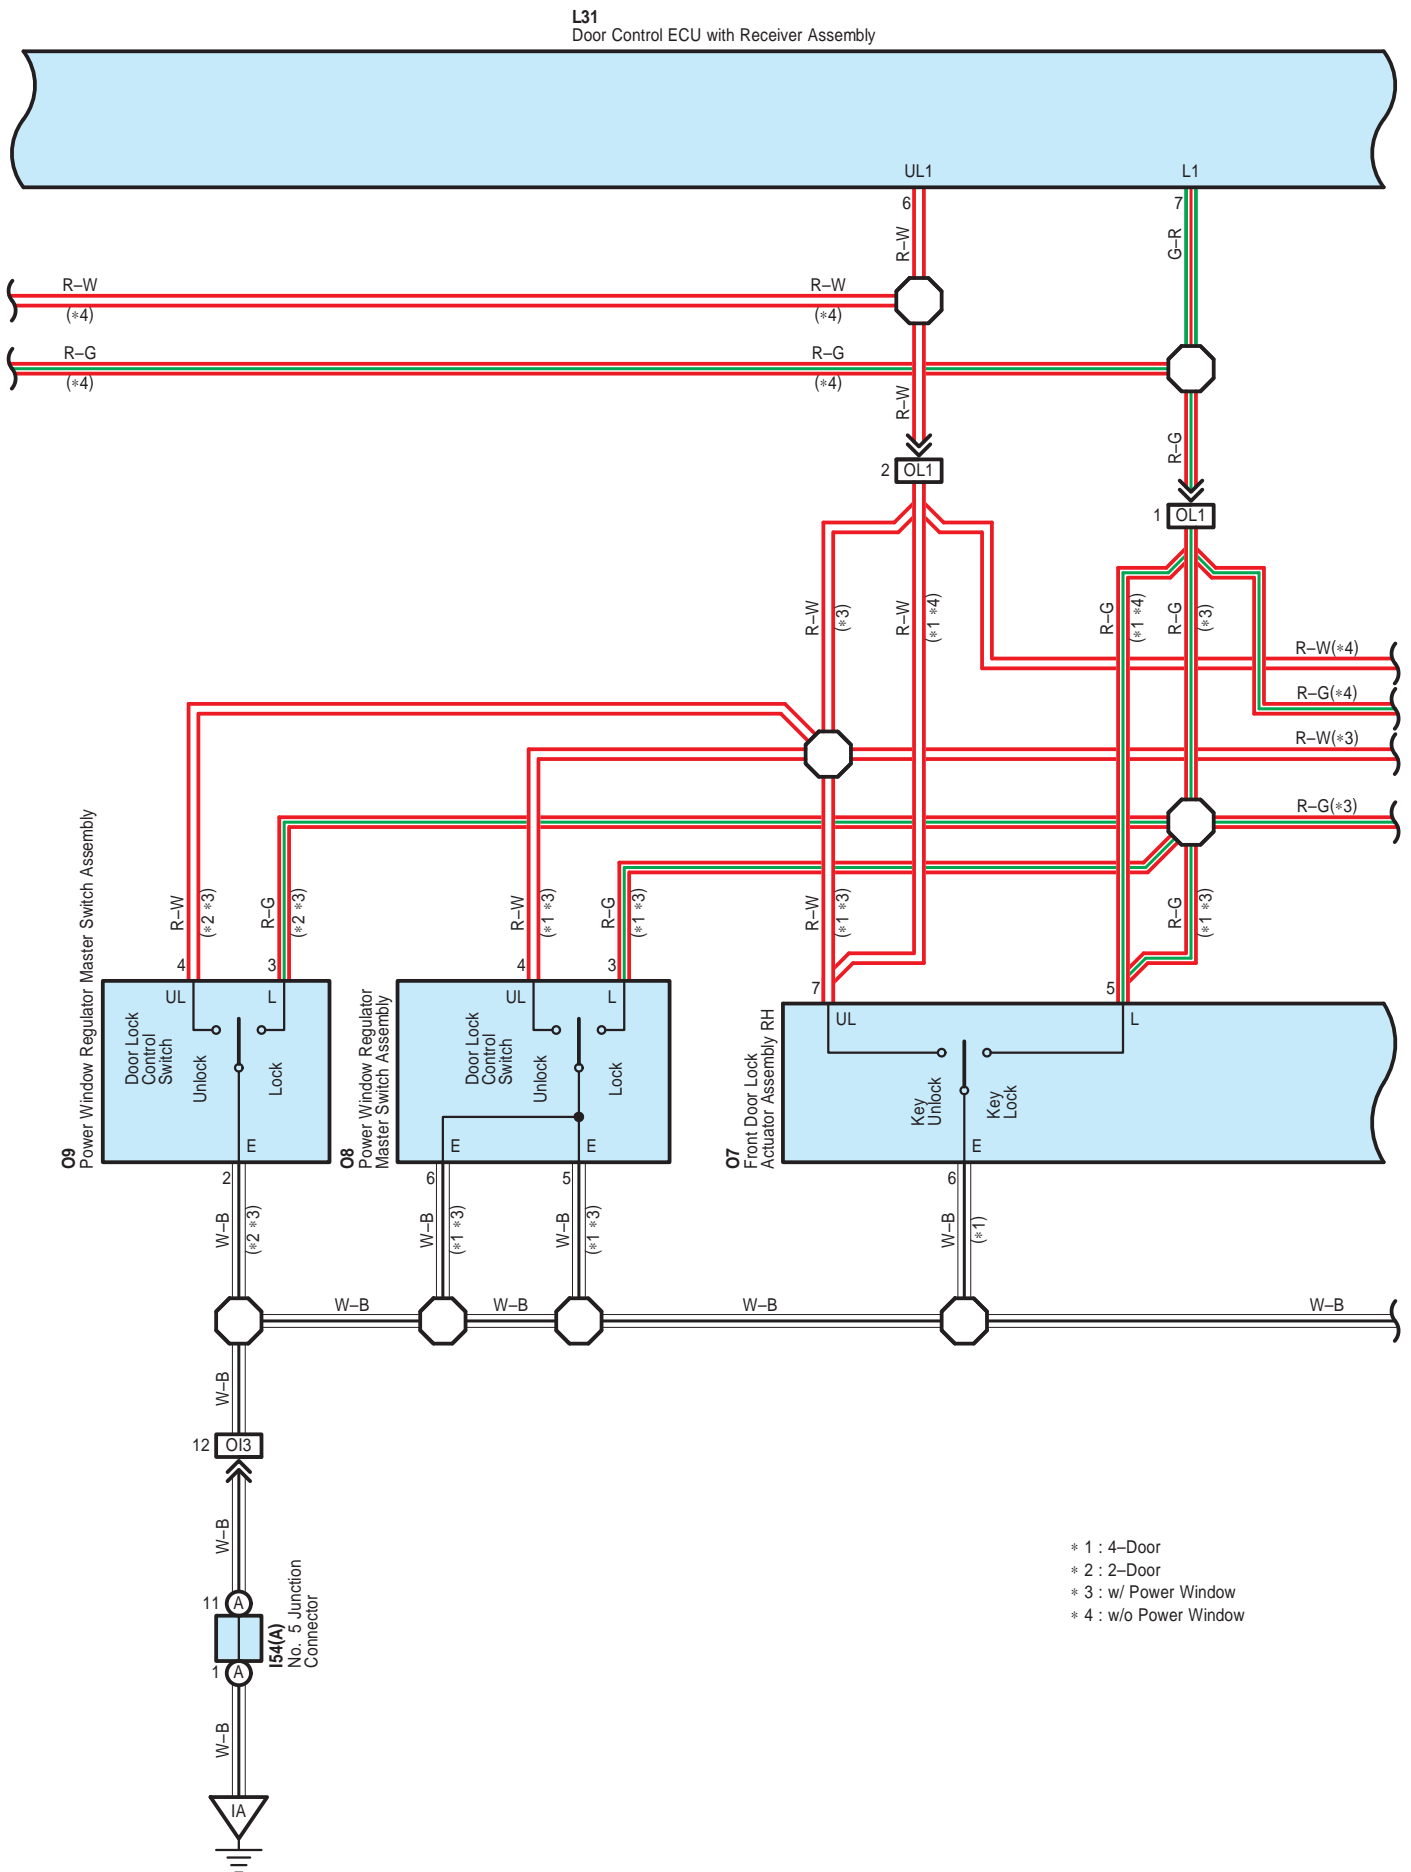


Door Lock Control (RHD w/ Wireless Door Lock Control) (Before Aug. 2016 Production), Wireless Door Lock Control (RHD) (Before Aug. 2016 Production)

L31
Door Control ECU with Receiver Assembly












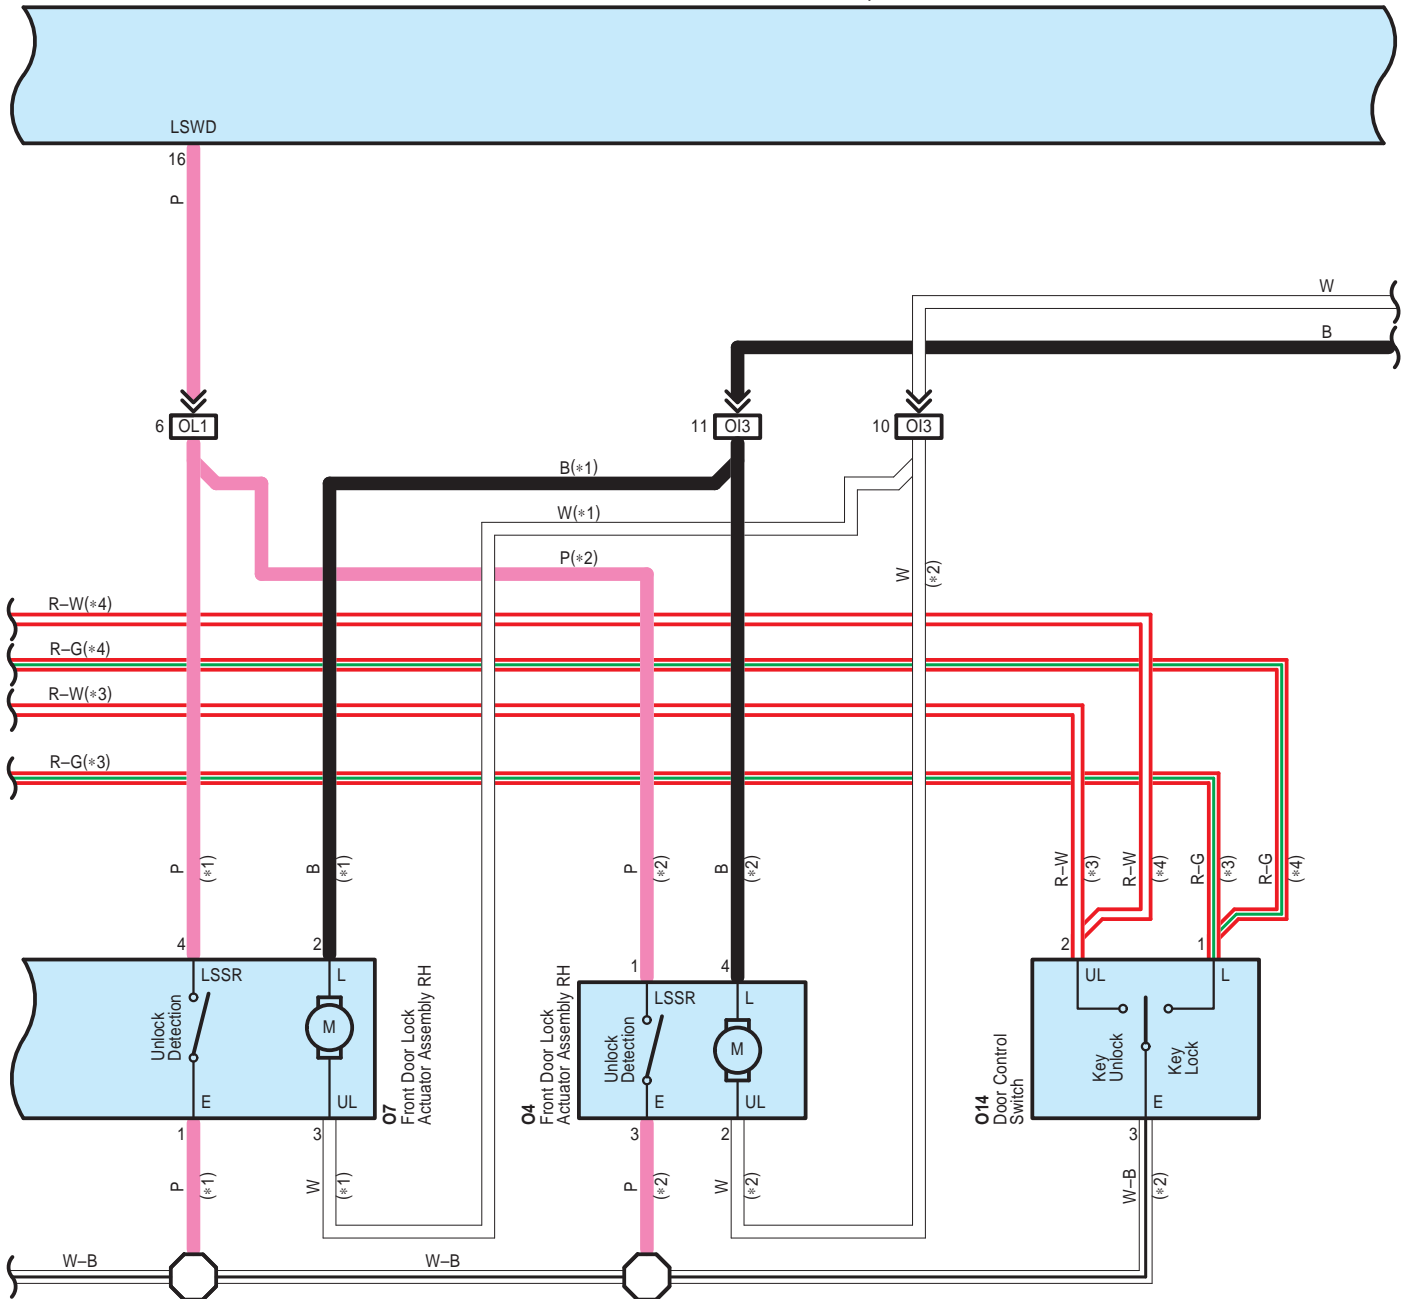


Door Lock Control (RHD w/ Wireless Door Lock Control) (Before Aug. 2016 Production), Wireless Door Lock Control (RHD) (Before Aug. 2016 Production)

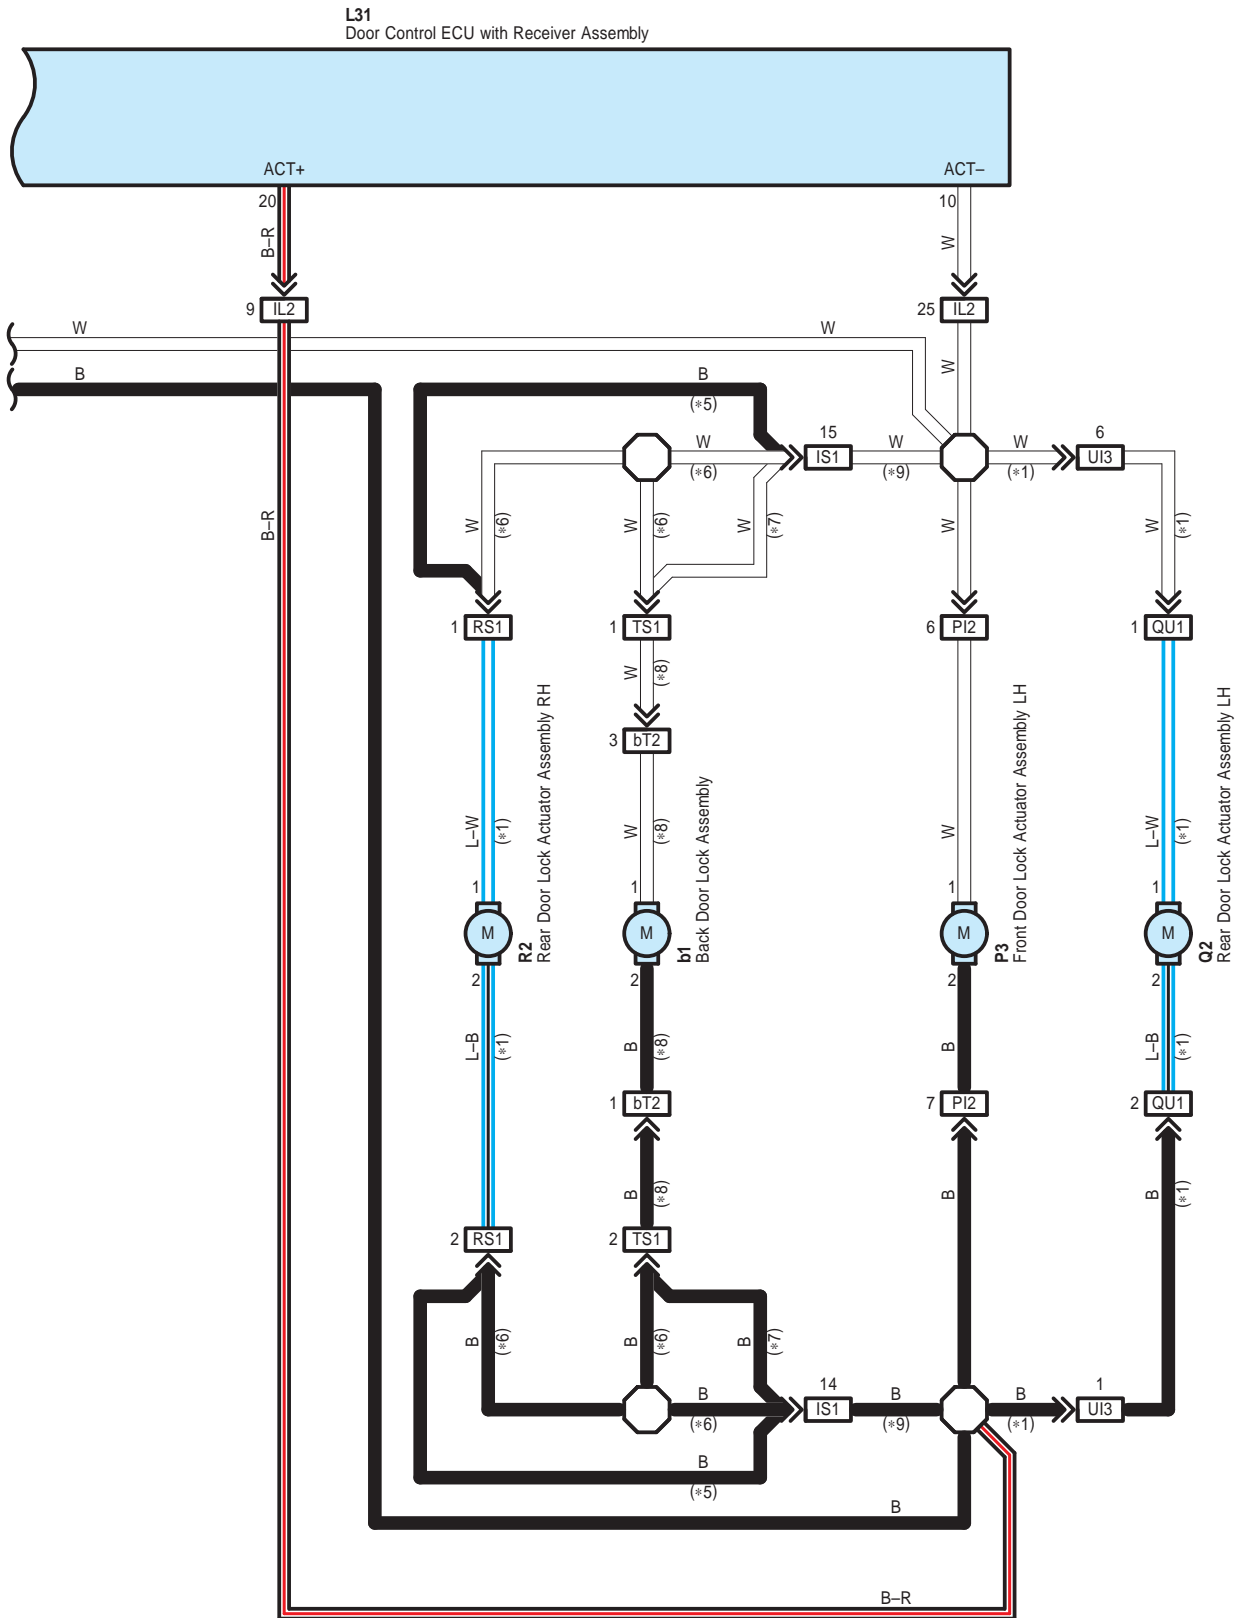


- * 1 : 4-Door
- * 2 : 2-Door
- * 3 : w/ Power Window
- * 4 : w/o Power Window
- * 5 : 4-Door Pick-Up Body Type
- * 6 : 4-Door Except Pick-Up Body Type
- * 7 : 2-Door Except Pick-Up Body Type
- * 8 : Except Pick-Up Body Type
- * 9 : Except 2-Door Pick-Up Body Type

 
Door Lock Control (RHD w/ Wireless Door Lock Control) (Before Aug. 2016 Production), Wireless Door Lock Control (RHD) (Before Aug. 2016 Production)

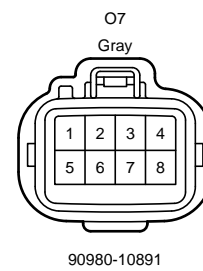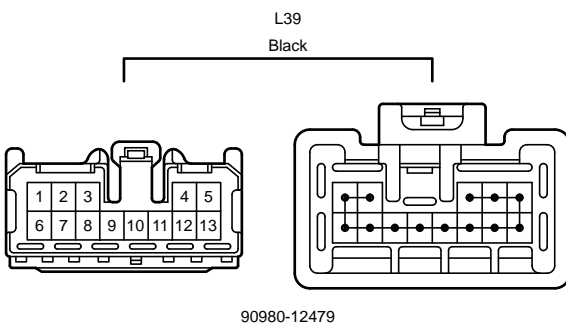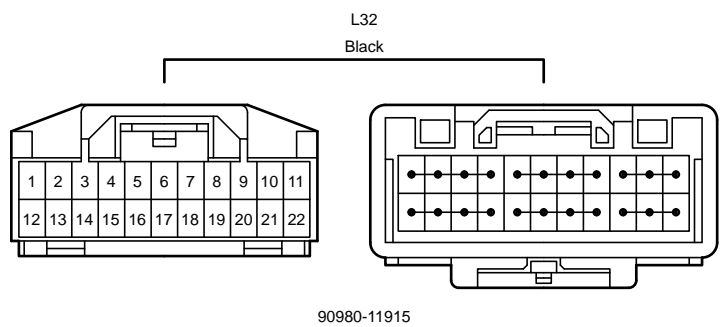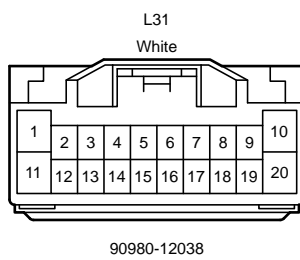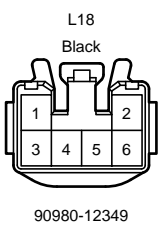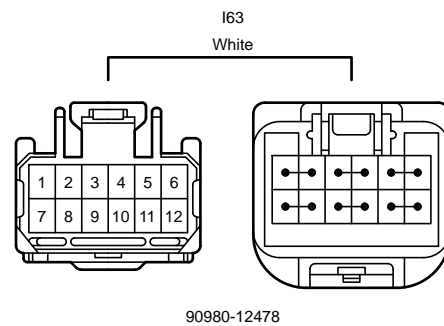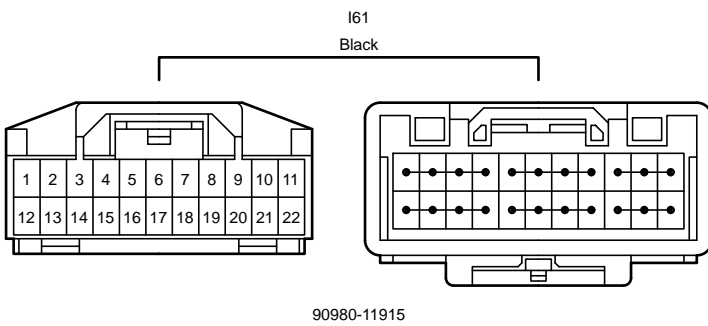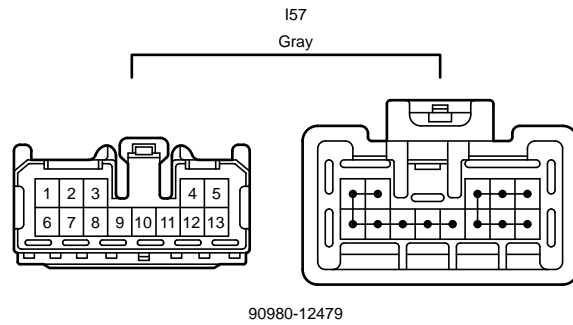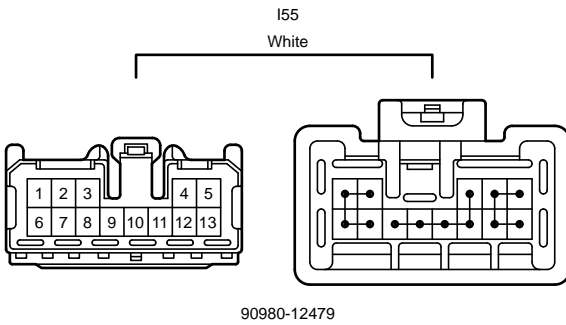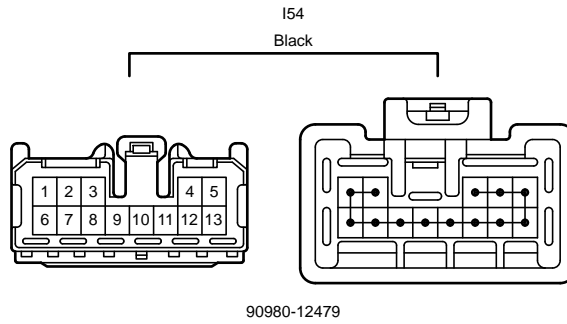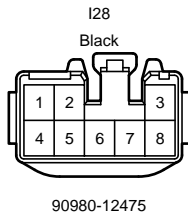


Door Lock Control (RHD w/ Wireless Door Lock Control) (Before Aug. 2016 Production), Wireless Door Lock Control (RHD) (Before Aug. 2016 Production)

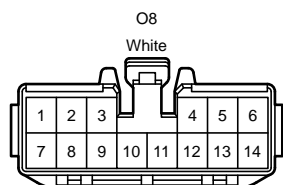


90980-11805

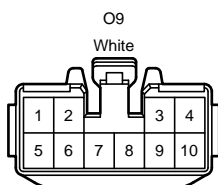


90980-10801

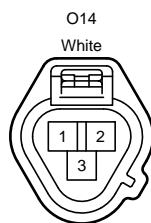


90980-11016

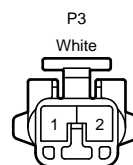

90980-11248

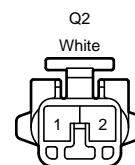

90980-11248

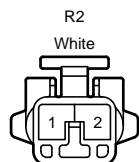

90980-11248



90980-10433



90980-10433



90980-10433




90980-10433




90980-10433




90980-10433

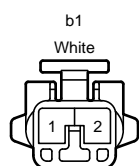


90980-11248

 


90980-10444

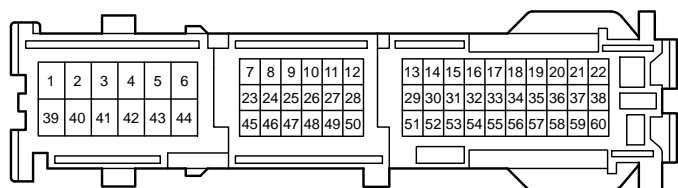


90980-12501

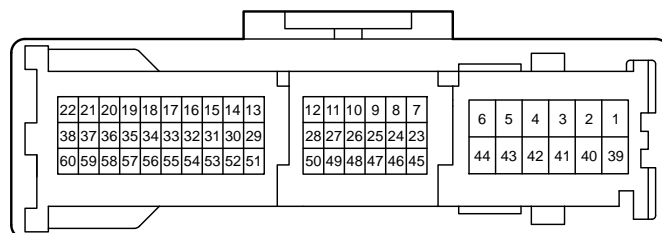

90980-12514

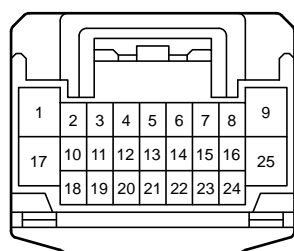


90980-12414

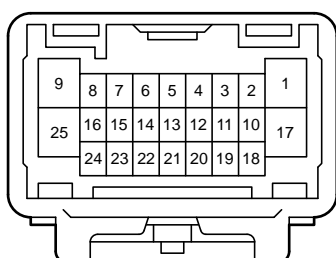

90980-12413

Door Lock Control (RHD w/ Wireless Door Lock Control) (Before Aug. 2016 Production), Wireless Door Lock Control (RHD) (Before Aug. 2016 Production)

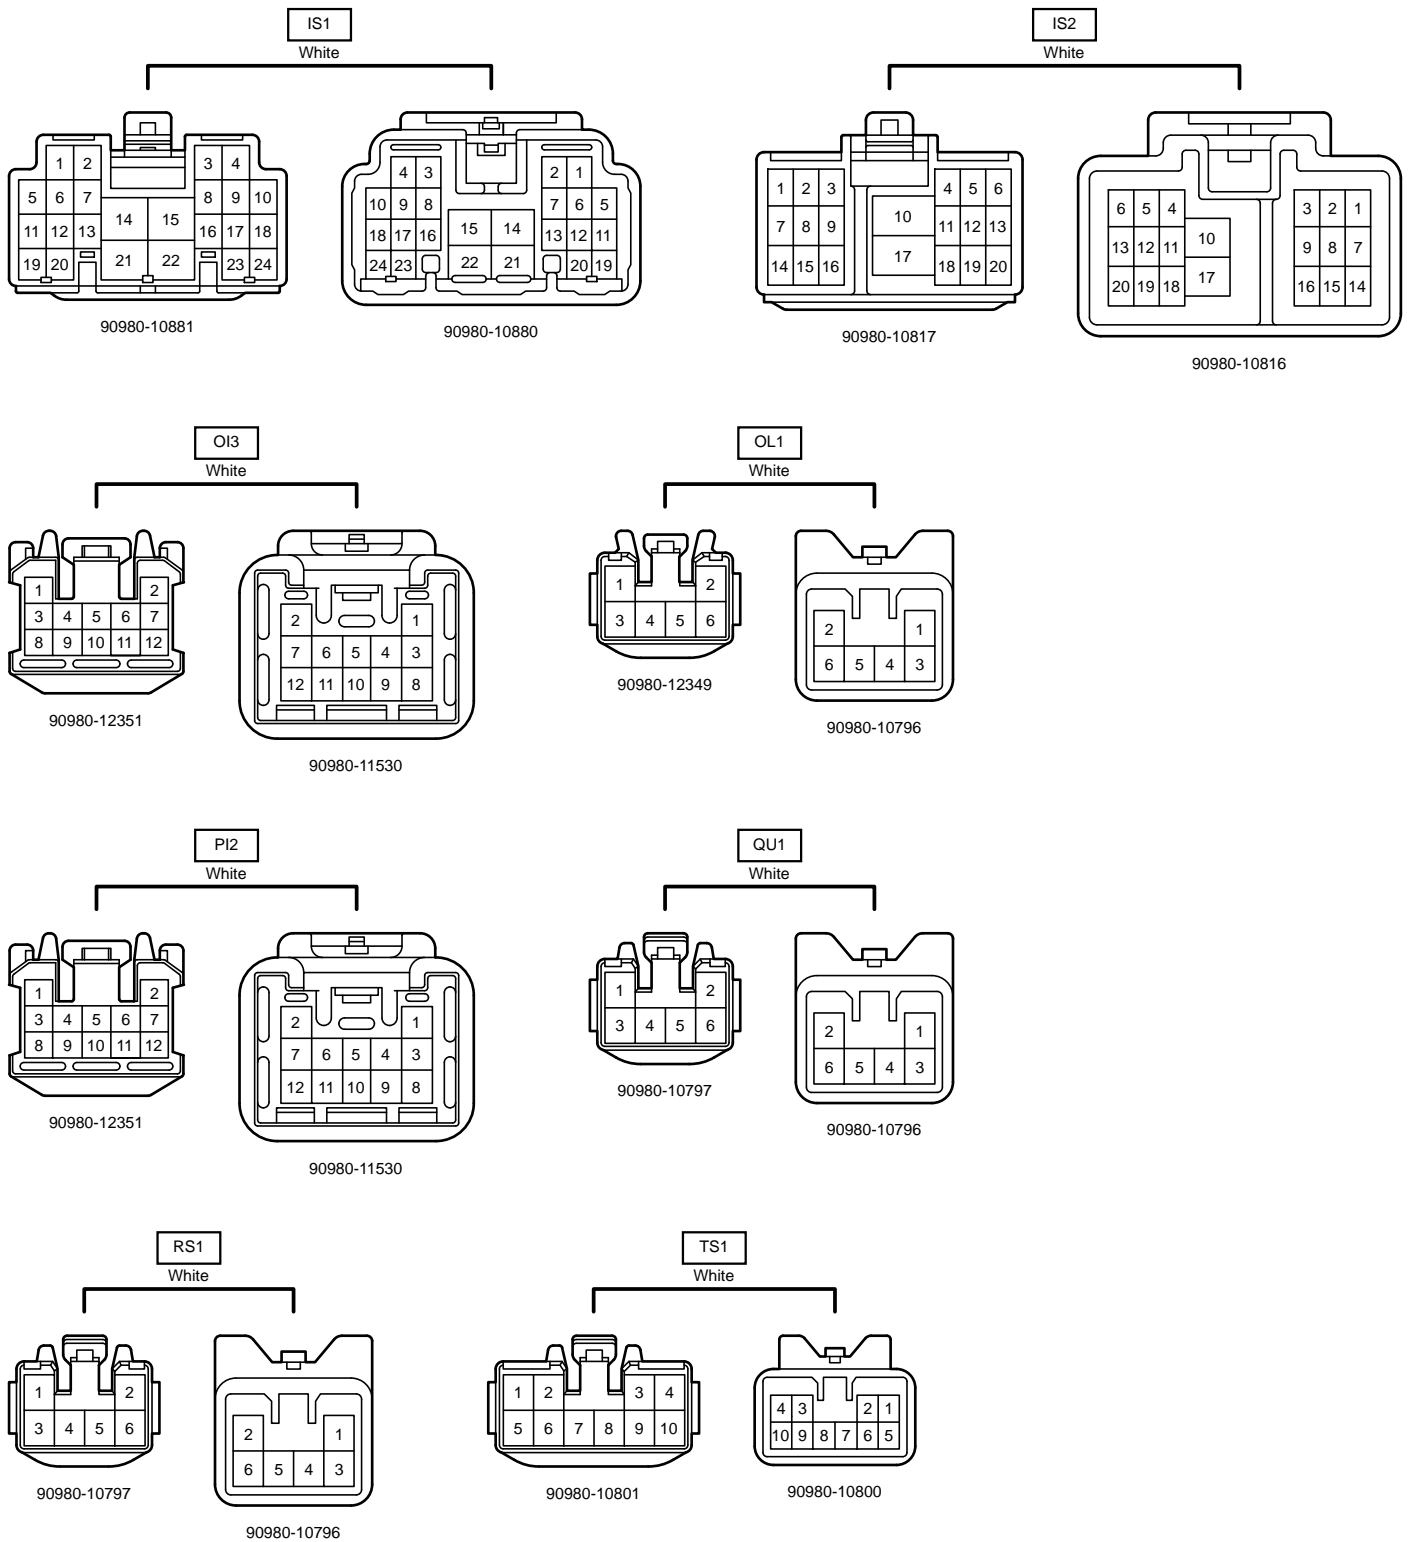

Door Lock Control (RHD w/ Wireless Door Lock Control) (Before Aug. 2016 Production), Wireless Door Lock Control (RHD) (Before Aug. 2016 Production)

