


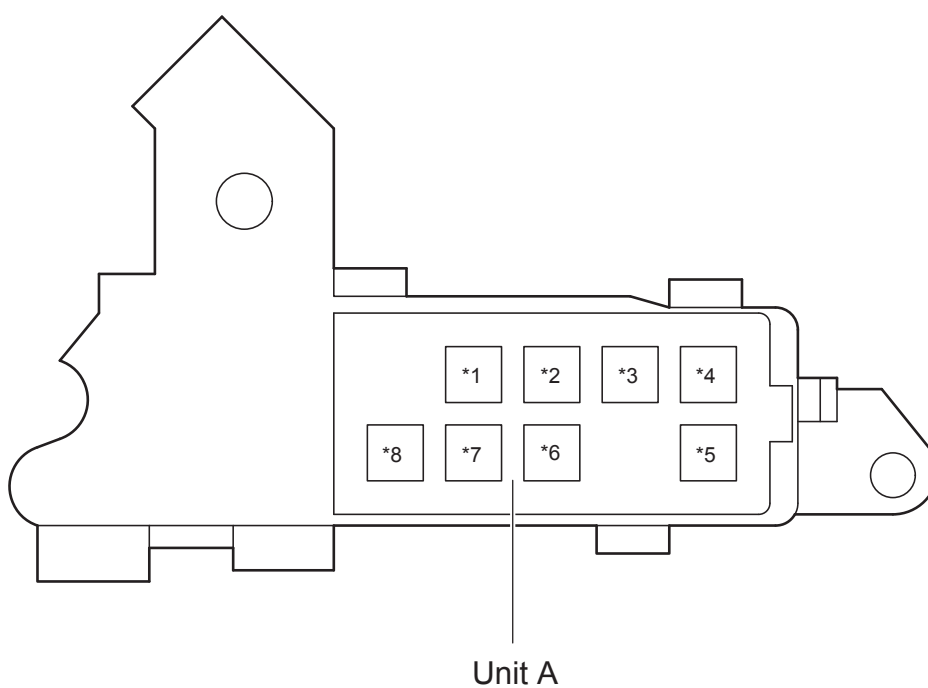

: Fusible Link Block Assembly


Left Engine Compartment

- * 1:80A GLOW2
- * 2:80A GLOW1
- * 3:140A ALT (1GR-FE, 1VD-FTV)
100A ALT (1HZ)
- * 4:50A HTR
- * 5:50A AM1 NO.2
- * 6:30A AM1
- * 7:50A AM1 NO.3
- * 8:50A ALT MAIN



Unit A

Back View

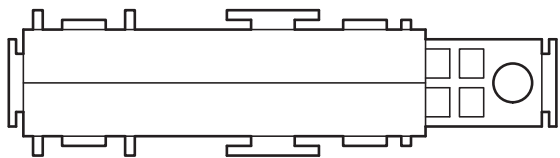


* 1:from Engine Room
Main Wire (1HZ),
from Engine Wire (1VD-FTV),
from No. 2 Engine Wire
(1GR-FE)

Side View



Top View

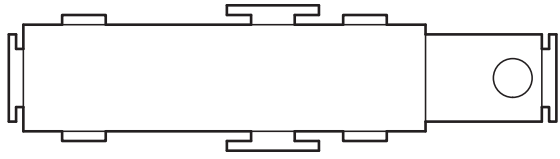

Side View

