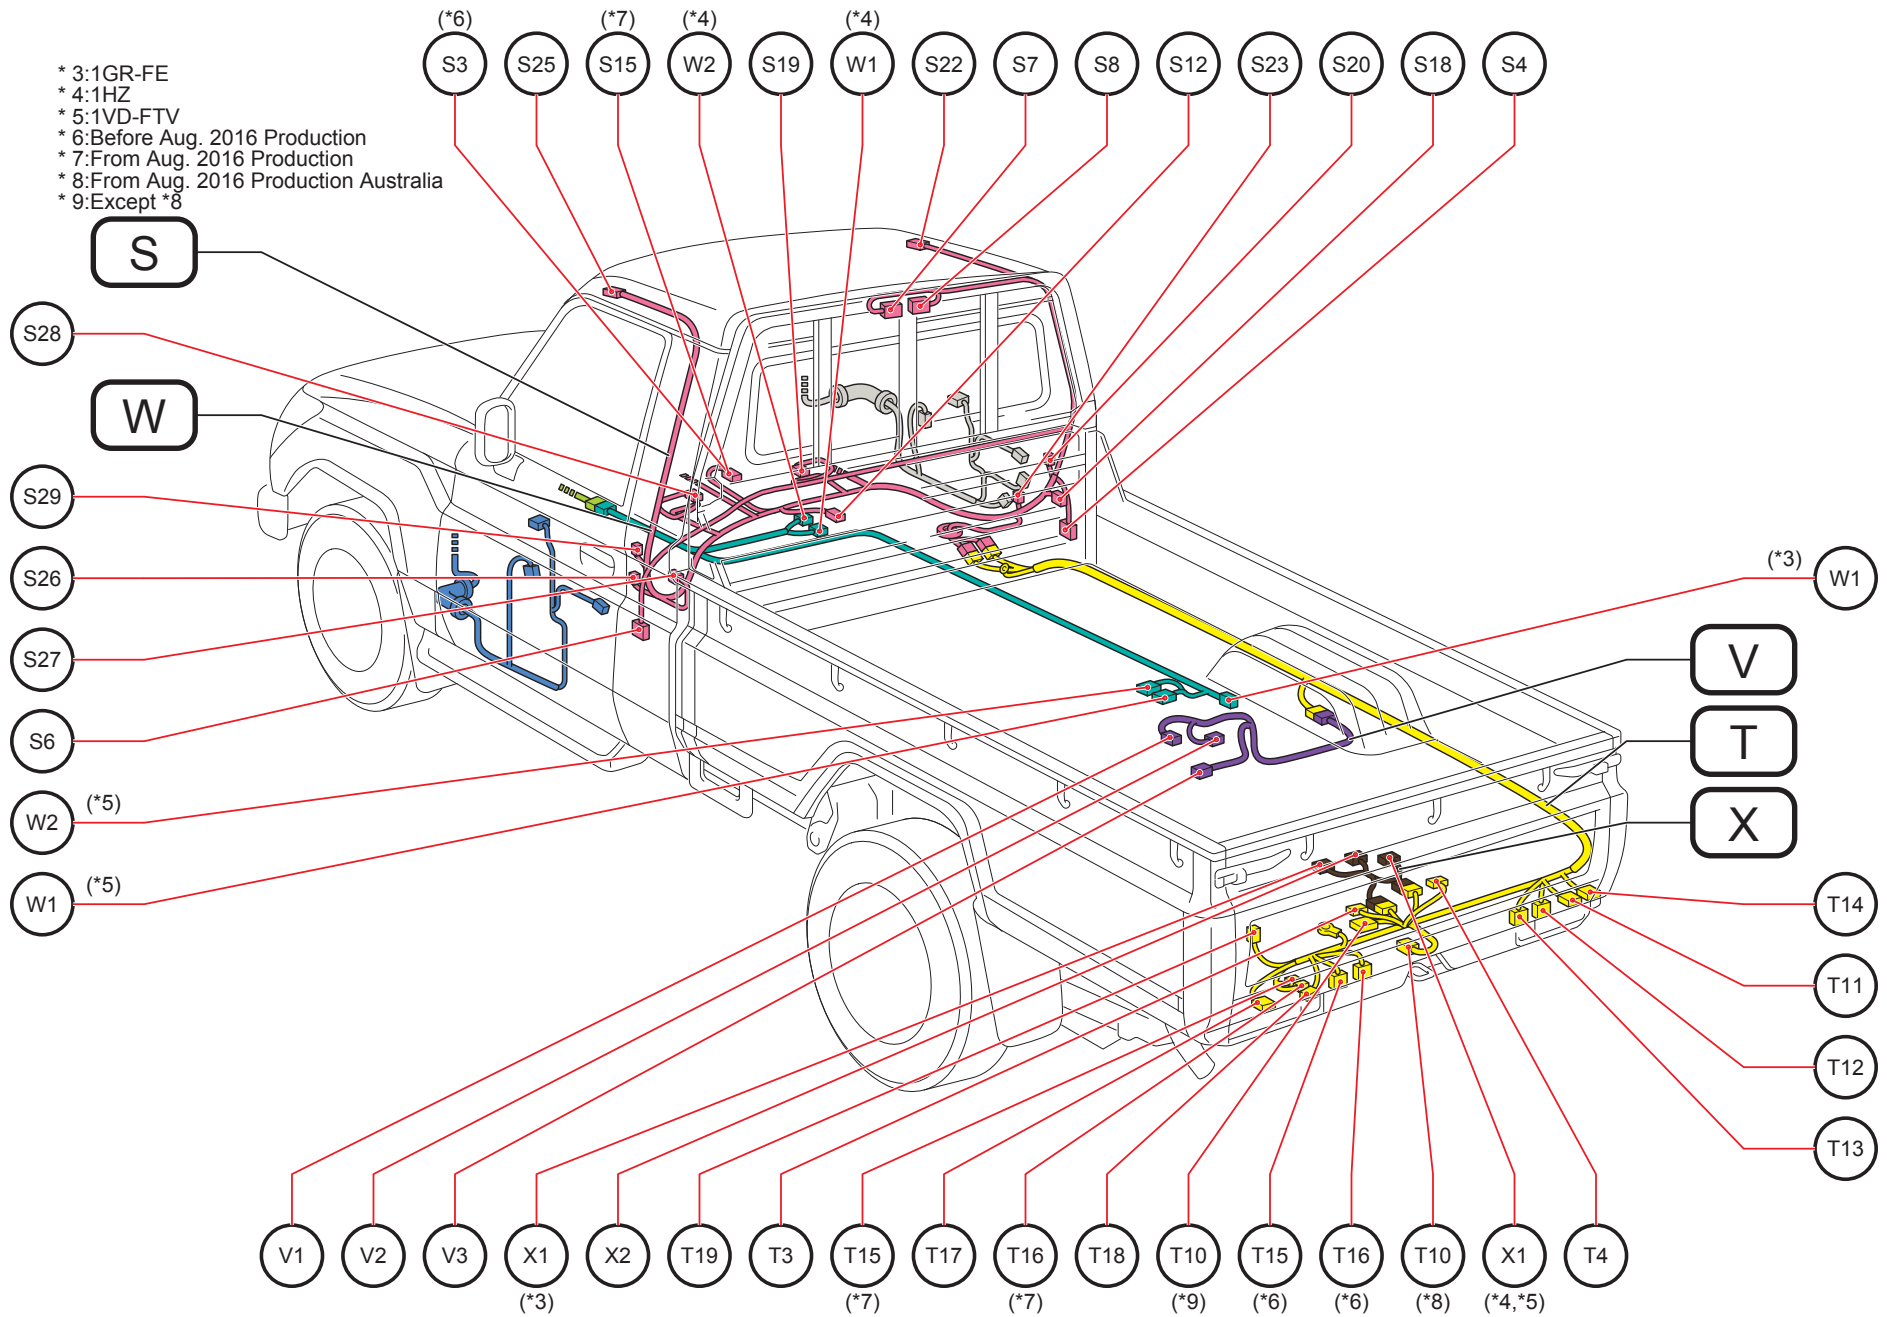







 

 
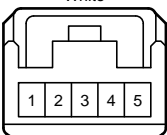
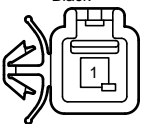
 
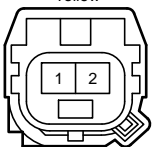
 
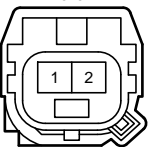
 
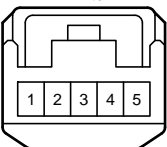
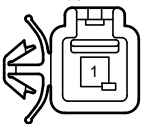


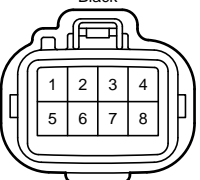

 
 






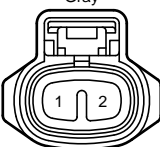
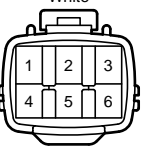
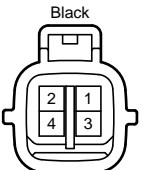




Position of Parts in Body (RHD 2-Door Pick-Up)



Position of Parts in Body (RHD 2-Door Pick-Up)

| | |
|-----|--|
| S3 | Parking Brake Switch Assembly |
| S4 | Front Door Courtesy Light Switch Assembly RH |
| S6 | Front Door Courtesy Light Switch Assembly LH |
| S7 | No. 3 Room Light Assembly |
| S8 | No. 3 Room Light Assembly |
| S12 | Front Seat Inner Belt Assembly RH |
| S15 | Parking Brake Switch Assembly |
| S18 | Front Seat Outer Belt Assembly RH |
| S19 | Front Seat Inner Belt Assembly RH |
| S20 | Front Door Courtesy Light Switch Assembly RH |
| S22 | Curtain Shield Airbag Assembly RH |
| S23 | Door Side Airbag Sensor RH |
| S25 | Curtain Shield Airbag Assembly LH |
| S26 | Door Side Airbag Sensor LH |
| S27 | Front Seat Outer Belt Assembly LH |
| S28 | Front Seat Inner Belt Assembly LH |
| S29 | Front Door Courtesy Light Switch Assembly LH |
| | |
| T3 | Fuel Pump |
| T4 | Fuel Sender Gage Assembly (Rear) |
| T10 | Trailer Socket |
| T11 | Back Buzzer Assembly |
| T12 | License Plate Light Assembly RH |
| T13 | License Plate Light Assembly RH |
| T14 | Rear Combination Light Assembly RH |
| T15 | License Plate Light Assembly LH |
| T16 | License Plate Light Assembly LH |
| T17 | Rear Combination Light Assembly LH |
| T18 | Rear Fog Light Socket & Wire |
| T19 | Fuel Sender Gage Assembly (Rear) |
| | |
| V1 | Rear Differential Lock Position Switch |
| V2 | Differential Lock Shift Actuator |
| V3 | Rear Speed Sensor (Skid Control Sensor Wire) |
| | |
| W1 | Fuel Tank Solenoid Return Valve Assembly |
| W2 | Fuel Tank Solenoid Main Valve Assembly |
| | |
| X1 | Fuel Sender Gage Assembly (Rear) |
| X2 | Fuel Pump (Sub) |

Position of Parts in Body (RHD 2-Door Pick-Up)

| | | | | | | |
|---|---|--|---|--|--|---|
| <p>S3 White</p>  <p>90980-12470</p> | <p>S4 White</p>  <p>90980-10433</p> | <p>S6 White</p>  <p>90980-10433</p> | <p>S7 White</p>  <p>90980-10183</p> | <p>S8 White</p>  <p>90980-10182</p> | <p>S12 Black</p>  <p>90980-10906</p> | <p>S15 White</p>  <p>90980-10871</p> |
| <p>S18 Black</p>  <p>90980-12452</p> | <p>S19 White</p>  <p>90980-12366</p> | <p>S20 Black</p>  <p>90980-11097</p> | <p>S22 Black</p>  <p>90980-12219</p> | <p>S23 Yellow</p>  <p>90980-12490</p> | <p>S25 Black</p>  <p>90980-12219</p> | |
| <p>S26 Yellow</p>  <p>90980-12490</p> | <p>S27 Black</p>  <p>90980-12452</p> | <p>S28 White</p>  <p>90980-12366</p> | <p>S29 Black</p>  <p>90980-11097</p> | <p>T3 Gray</p>  <p>90980-11142</p> | <p>T4 Black</p>  <p>90980-11293</p> | |
| <p>T10 Black</p>  <p>90980-10891</p> | <p>T11 Gray</p>  <p>90980-10887</p> | <p>T12 Gray</p>  <p>90980-11142</p> | <p>T13 Gray</p>  <p>90980-11142</p> | <p>T14 Gray</p>  <p>90980-10988</p> | <p>T15 Gray</p>  <p>90980-11142</p> | |
| <p>T16 Gray</p>  <p>90980-11142</p> | <p>T17 Gray</p>  <p>90980-10988</p> | <p>T18 Gray</p>  <p>90980-11168</p> | <p>T19 Black</p>  <p>90980-10868</p> | <p>V1 Gray</p>  <p>90980-11250</p> | <p>V2 White</p>  <p>90980-11290</p> | |
| <p>V3 Black</p>  <p>90980-11929 (Before Aug. 2016 Production)</p> | <p>V3 Gray</p>  <p>90980-11929 (From Aug. 2016 Production)</p> | <p>W1 Dark Gray</p>  <p>90980-10901</p> | <p>W2 Gray</p>  <p>90980-10901</p> | <p>X1 Black</p>  <p>90980-11293</p> | | |

