

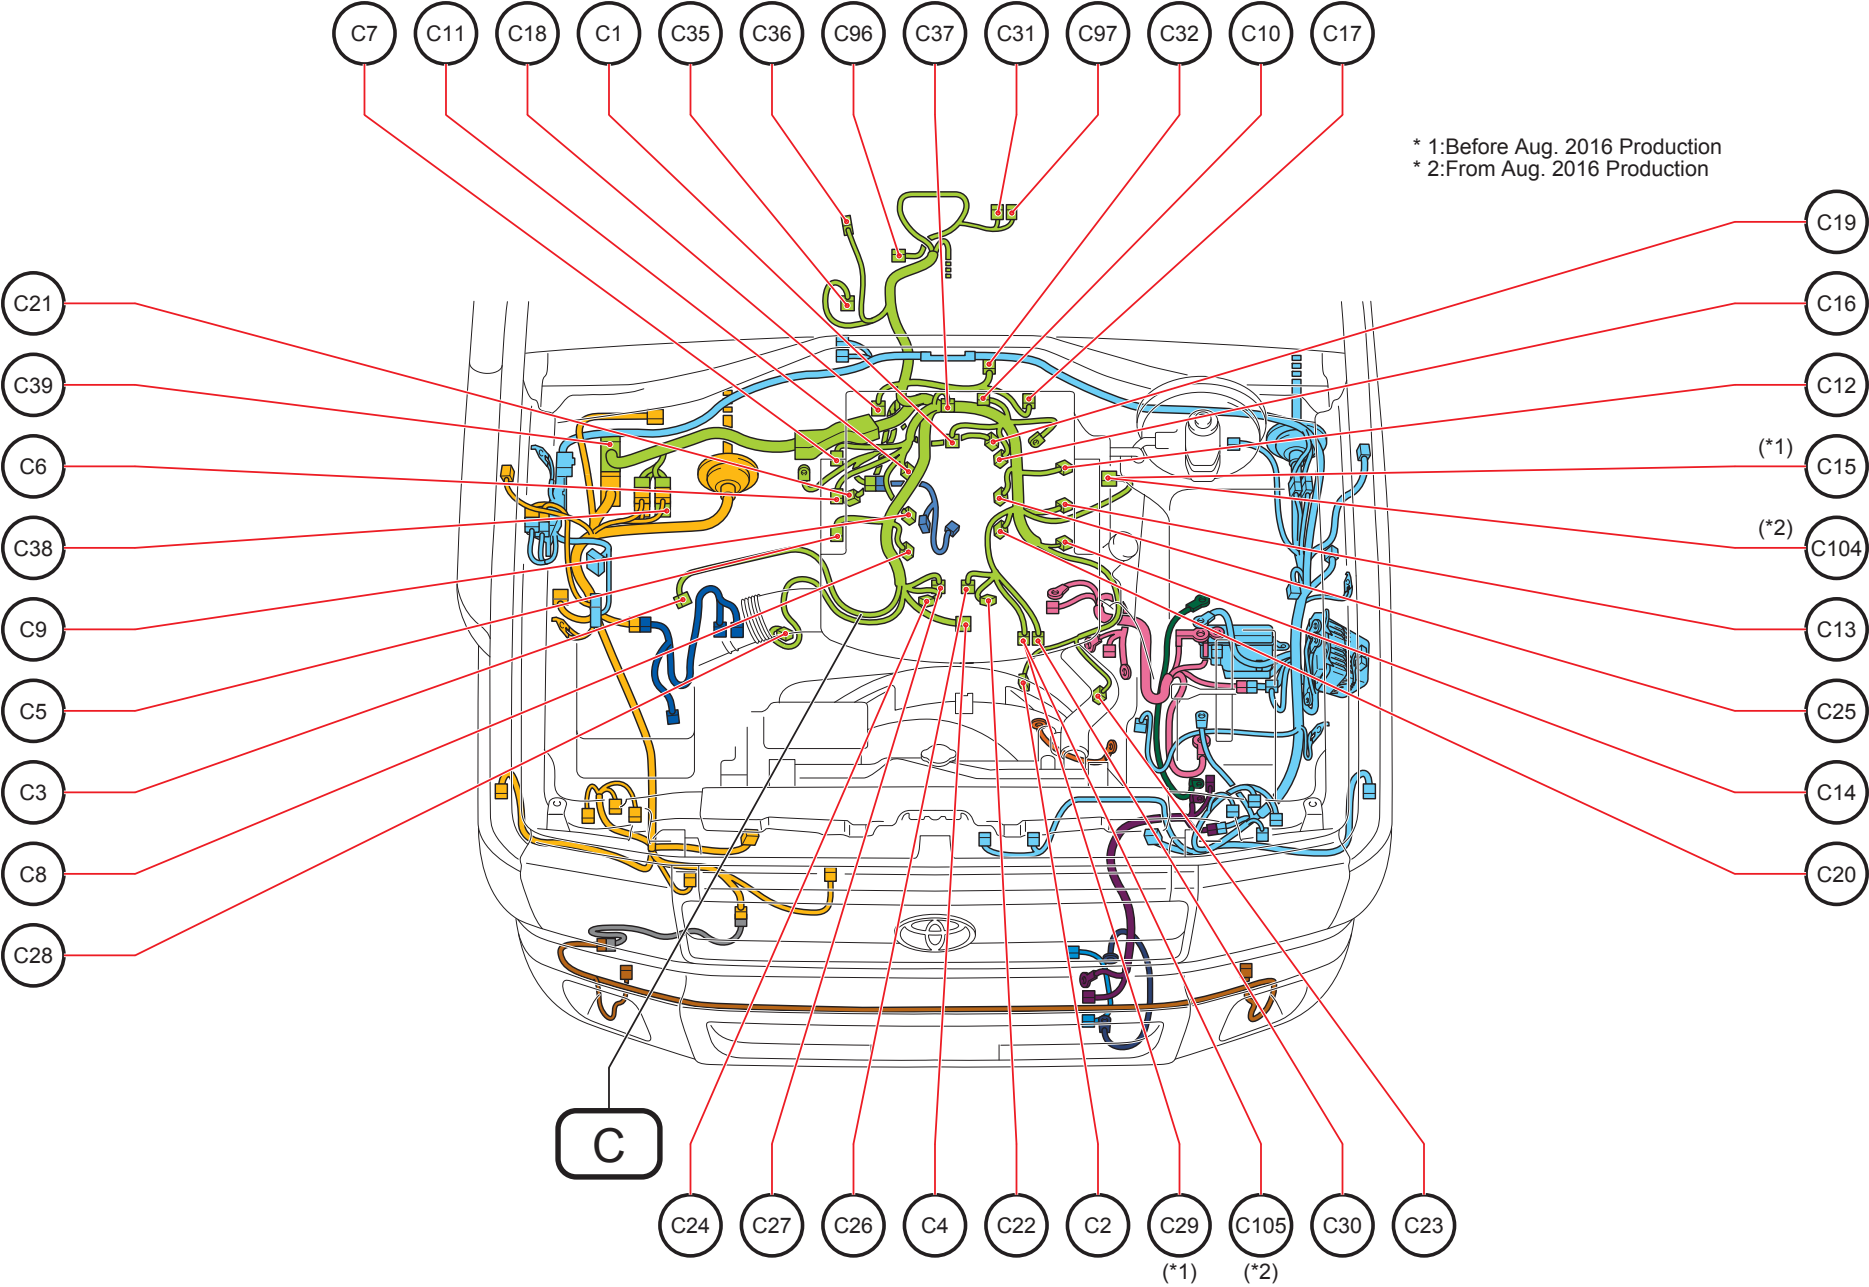
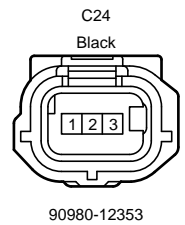
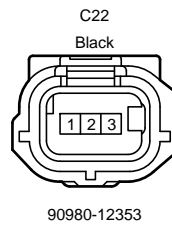
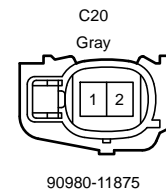
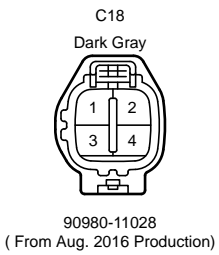
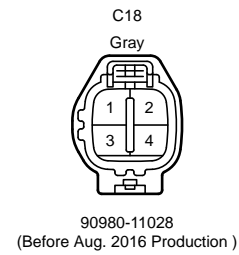
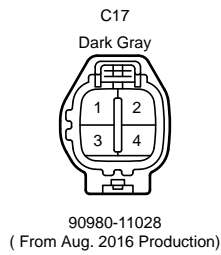
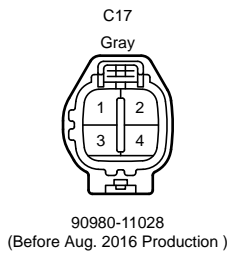
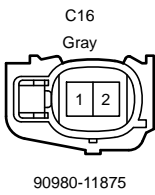
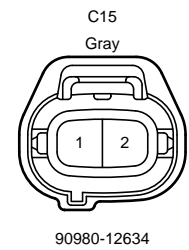
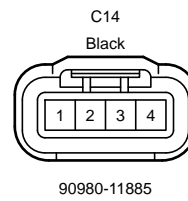
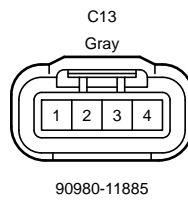
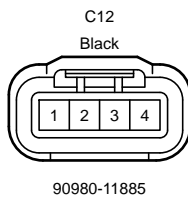
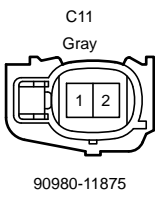
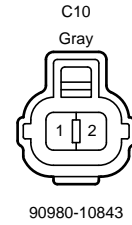
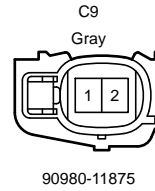
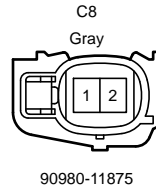
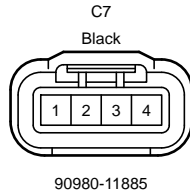
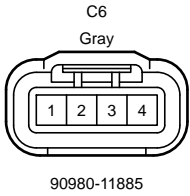
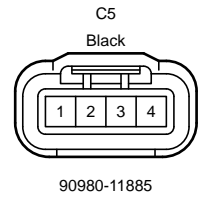
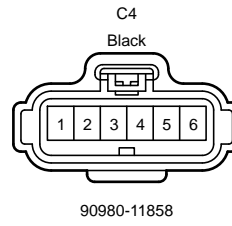


Position of Parts in Engine Compartment (LHD 1GR-FE)

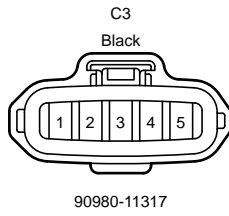


C1	E.F.I. Engine Coolant Temperature Sensor
C2	Crank Position Sensor
C3	Intake Mass Air Flow Meter Sub-Assembly
C4	Throttle Body with Motor Assembly
C5	Ignition Coil Assembly No. 1
C6	Ignition Coil Assembly No. 3
C7	Ignition Coil Assembly No. 5
C8	Fuel Injector Assembly No. 1
C9	Fuel Injector Assembly No. 3
C10	Radio Setting Condenser (Ignition)
C11	Fuel Injector Assembly No. 5
C12	Ignition Coil Assembly No. 6
C13	Ignition Coil Assembly No. 4
C14	Ignition Coil Assembly No. 2
C15	Purge VSV
C16	Fuel Injector Assembly No. 6
C17	No. 2 Oxygen Sensor (Bank 2 Sensor 2)
C18	Oxygen Sensor (Bank 1 Sensor 2)
C19	No. 2 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C20	Fuel Injector Assembly No. 2
C21	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C22	VVT Sensor (Bank 2)
C23	Magnet Clutch Assembly
C24	VVT Sensor (Bank 1)
C25	Fuel Injector Assembly No. 4
C26	Cam Timing Oil Control Valve Assembly LH (Bank 2)
C27	Cam Timing Oil Control Valve Assembly RH (Bank 1)
C28	Power Steering Oil Pressure Switch
C29	Oil Pressure Sender Gage Assembly
C30	Engine Oil Pressure Switch Assembly
C31	Fuel Pump
C32	Back-Up Light Switch Assembly
C35	Center Differential Lock Indicator Switch (No. 1 Transfer Indicator Switch)
C36	Transfer L4 Position Switch (No. 1 Transfer Indicator Switch)
C37	No. 1 Vacuum Switching Valve (ACIS)
C38	No. 4 Junction Connector
C39	ECM
C96	Speedometer Sensor
C97	Fuel Sender Gage Assembly (Front)
C104	Purge VSV
C105	Oil Pressure Sender Gage Assembly

Position of Parts in Engine Compartment (LHD 1GR-FE)

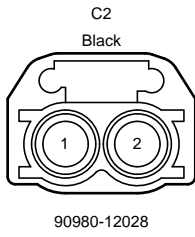


Position of Parts in Engine Compartment (LHD 1GR-FE)

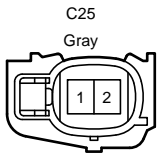

90980-11875




90980-11162

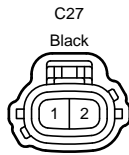


90980-11162




90980-11428

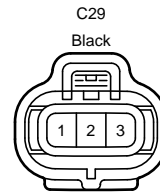


90980-12636

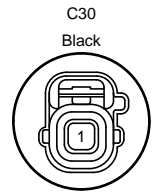


90980-11363

 


90980-11142

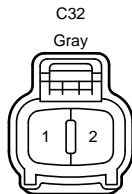


90980-11051

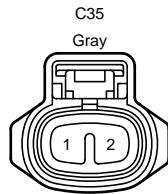


90980-11250

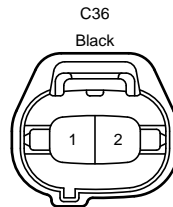


90980-11156

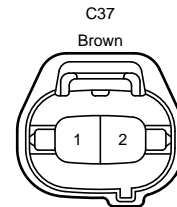


90980-11149

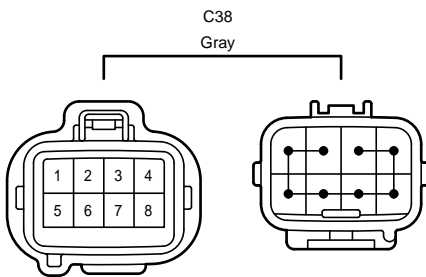


90980-10897

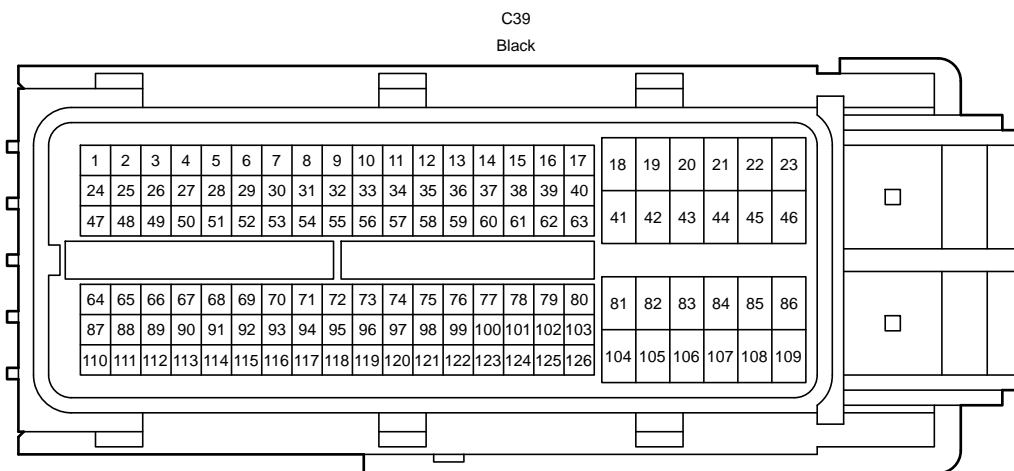


90980-12396

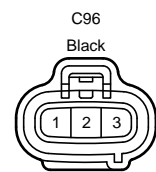


90980-11143

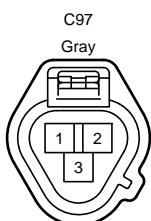

90980-11016

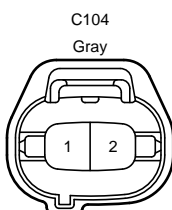

90980-11156

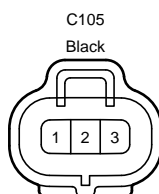

90980-10845