



Position of Parts in Engine Compartment (RHD 1HZ)

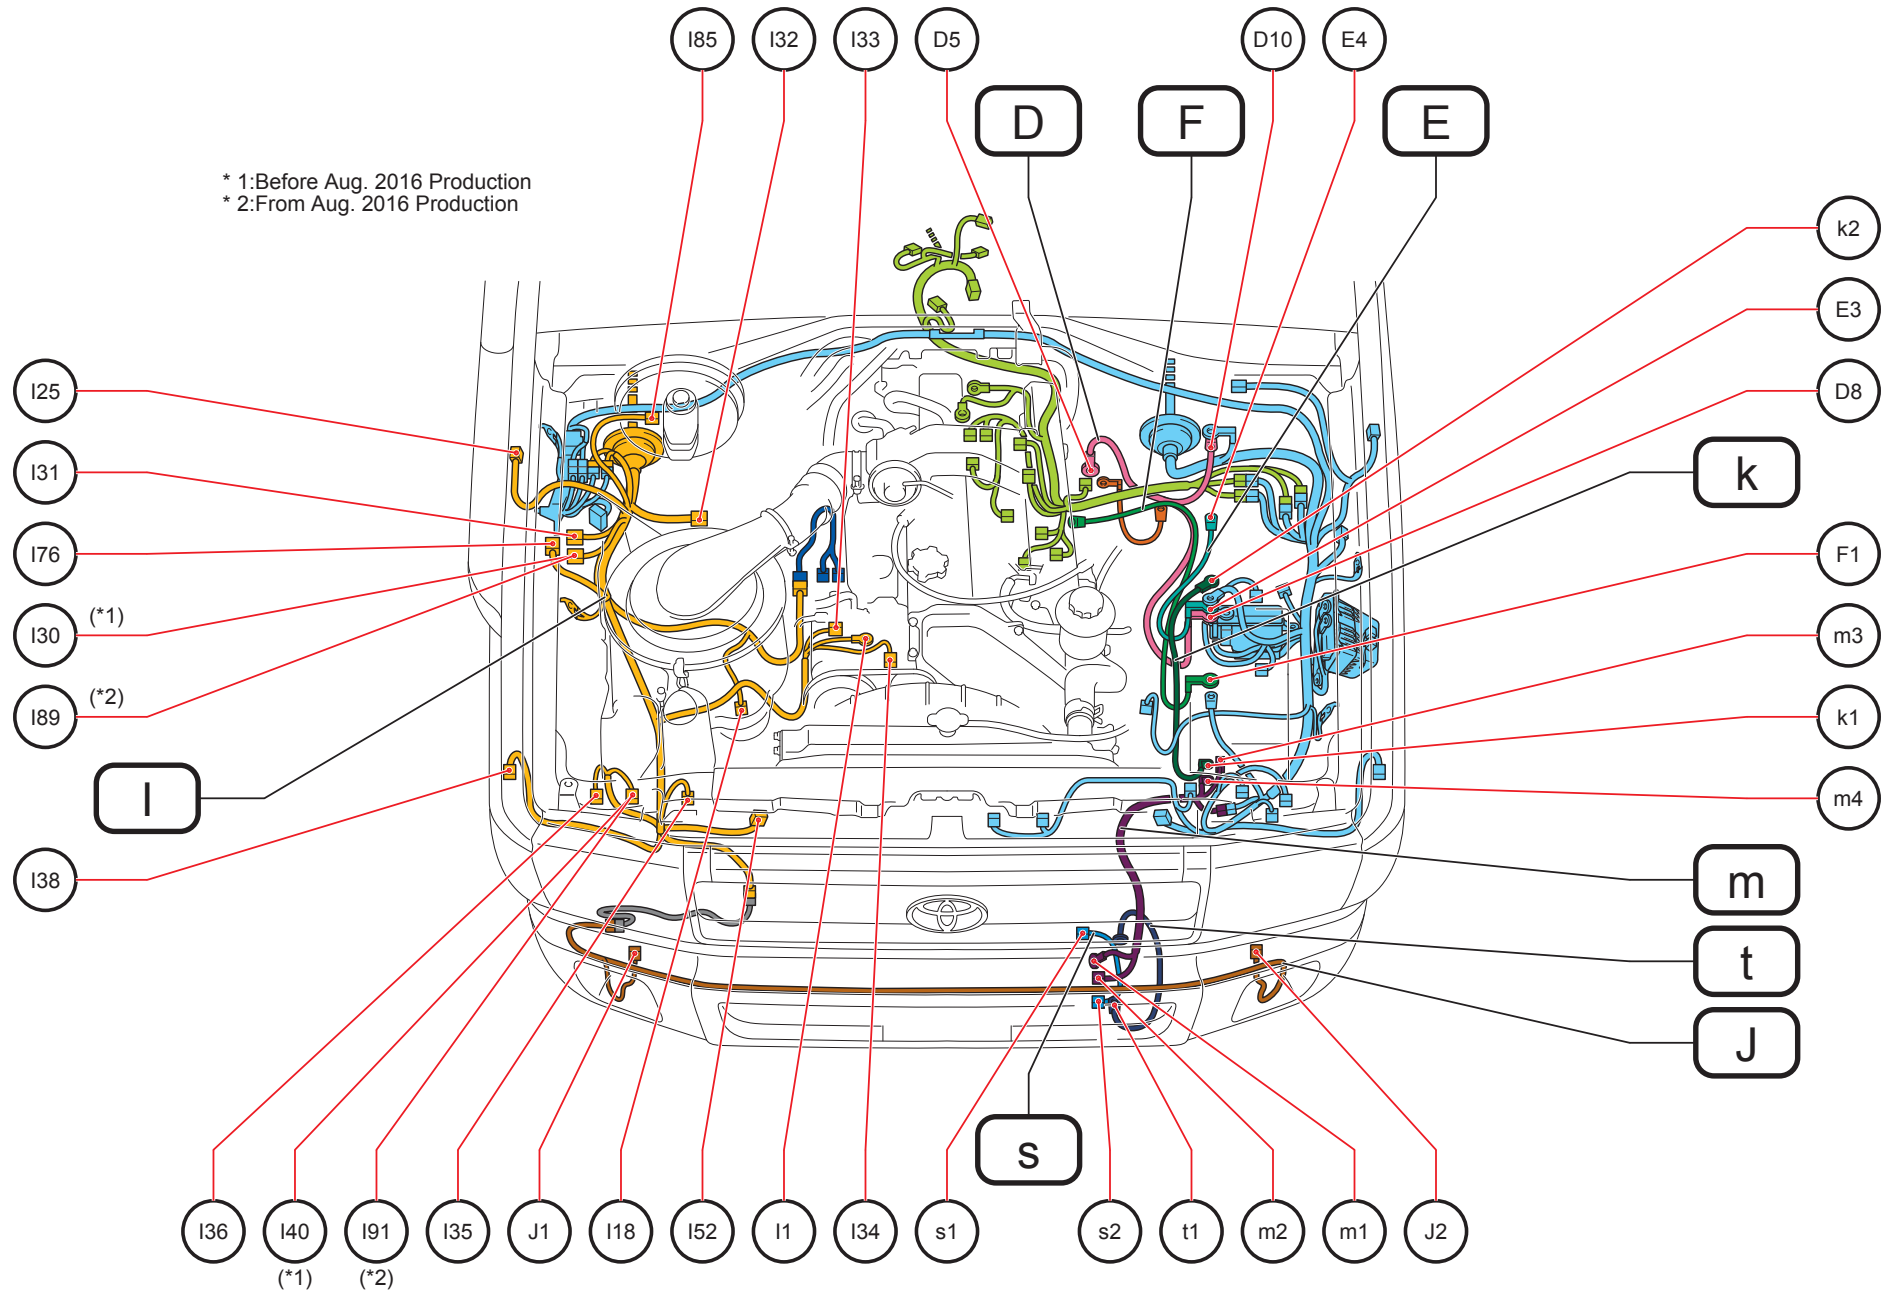

D5	Starter Assembly
D8	Battery (Main)
D10	Battery (Sub)
E3	Battery (Sub)
E4	Battery (Main)
F1	Battery (Main)
I1	Generator Assembly
I18	Front Speed Sensor RH (Skid Control Sensor Wire RH)
I25	Side Turn Signal Light Assembly RH
I30	Four Wheel Drive Control Solenoid Assembly
I31	Four Wheel Drive Control Solenoid Assembly
I32	Vacuum Warning Switch Assembly
I33	Magnet Clutch Assembly
I34	Generator Assembly
I35	Windshield Washer Motor and Pump Assembly
I36	Headlight Assembly RH
I38	Headlight Assembly RH
I40	Headlight Assembly RH
I52	Front Airbag Sensor RH
I76	Fuse Block Assembly
I85	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
I89	Four Wheel Drive Control Solenoid Assembly
I91	Headlight Assembly RH
J1	Fog Light Assembly RH
J2	Fog Light Assembly LH
k1	No. 1 Magnet Switch Assembly
k2	Battery (Main)
m1	Winch Motor with Magnet Switch Assembly
m2	Winch Motor with Magnet Switch Assembly
m3	No. 1 Magnet Switch Assembly
m4	No. 1 Magnet Switch Assembly
s1	Winch Assembly
s2	Winch Motor with Magnet Switch Assembly
t1	Winch Motor with Magnet Switch Assembly

Position of Parts in Engine Compartment (RHD 1HZ)

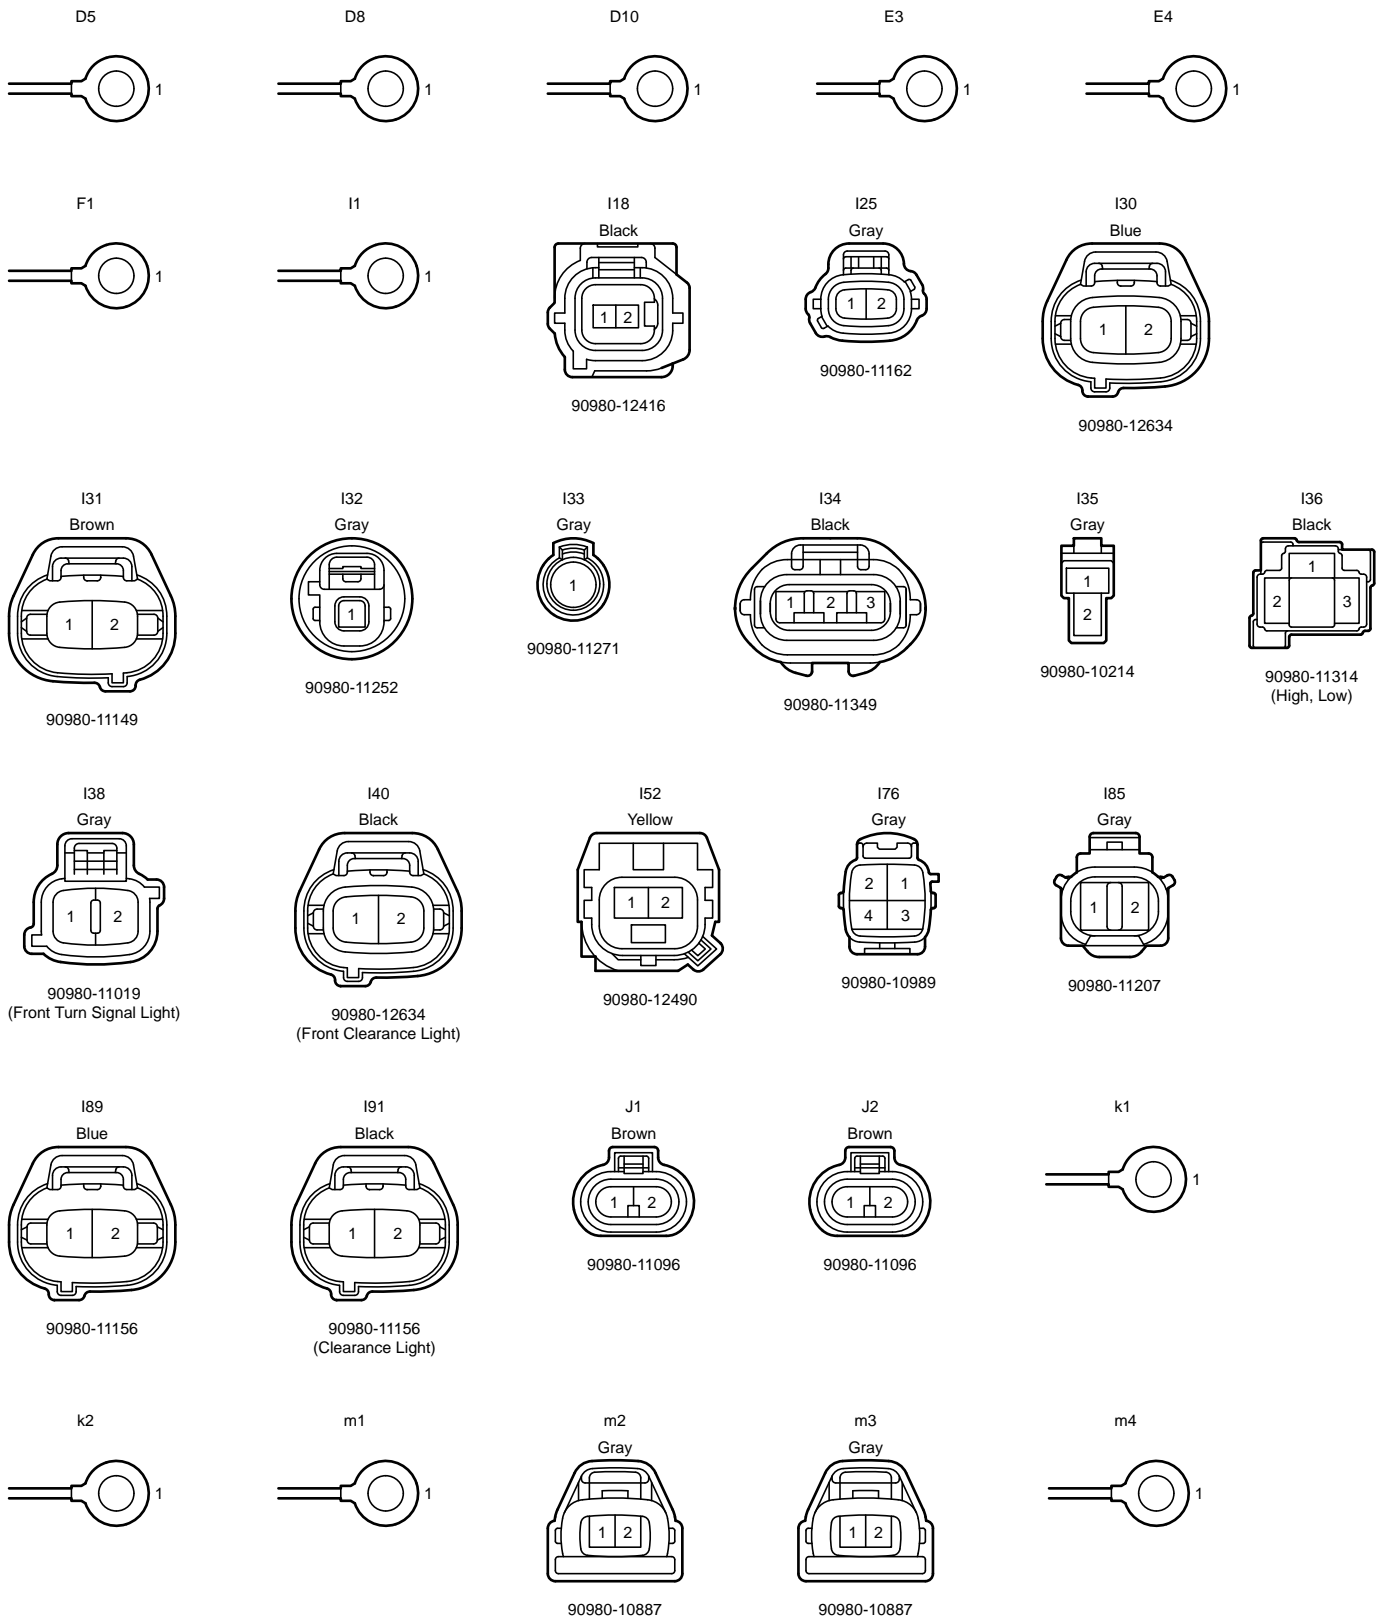

Position of Parts in Engine Compartment (RHD 1HZ)

