



Position of Parts in Engine Compartment (RHD 1VD-FTV)

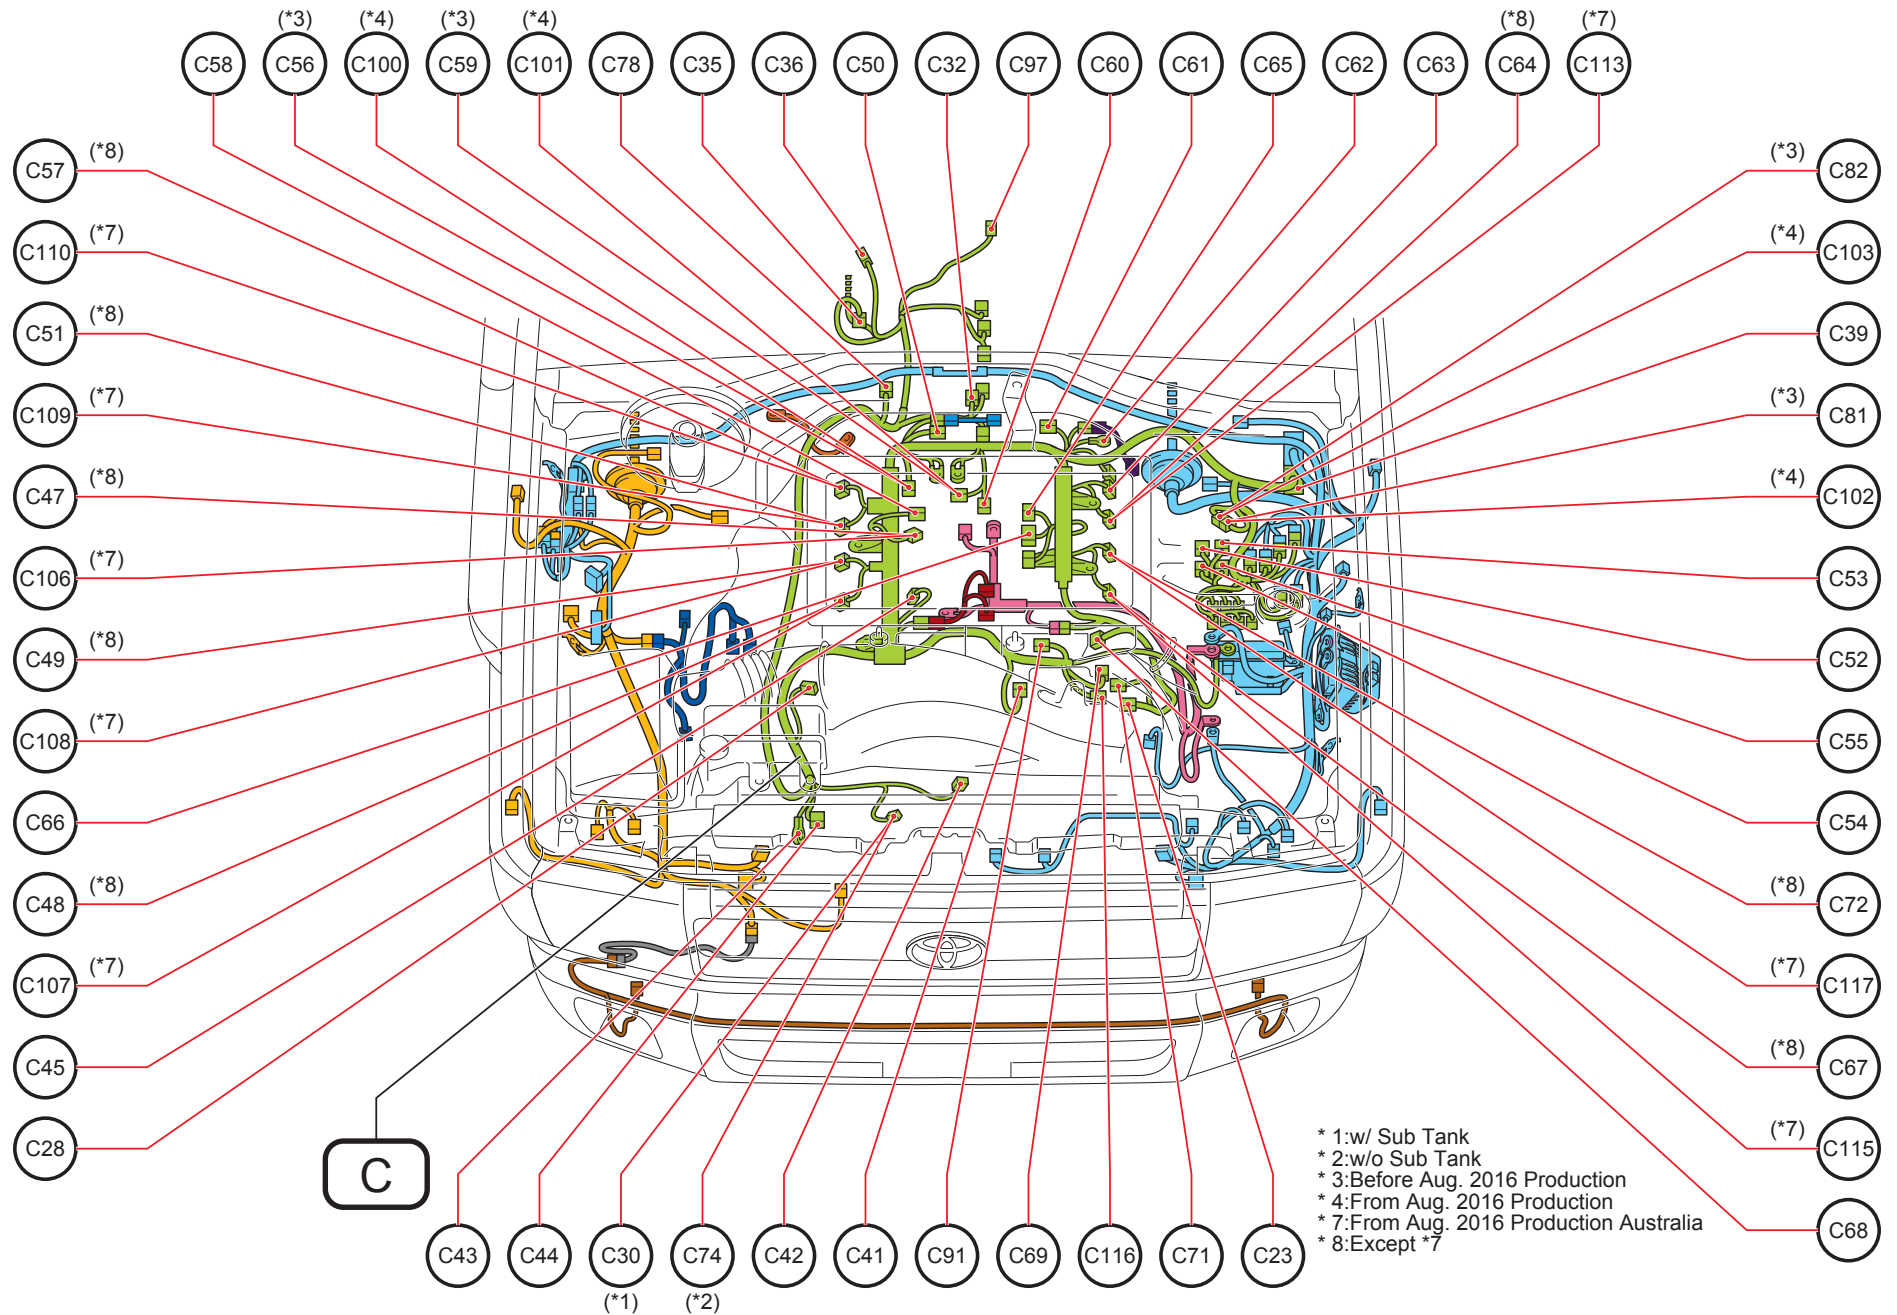


C23	Magnet Clutch Assembly
C28	Power Steering Oil Pressure Switch
C30	Engine Oil Pressure Switch Assembly
C32	Back-Up Light Switch Assembly
C35	Center Differential Lock Indicator Switch (No. 1 Transfer Indicator Switch)
C36	Transfer L4 Position Switch (No. 1 Transfer Indicator Switch)
C39	ECM
C41	Intake Mass Air Flow Meter Sub-Assembly
C42	Crank Position Sensor
C43	Generator Assembly
C44	Generator Assembly
C45	Glow Plug Assembly No. 1
C47	EGR Valve Assembly (Bank 1)
C48	Injector Assembly No. 1
C49	Injector Assembly No. 3
C50	Diesel Throttle Body Assembly (Bank 1)
C51	Injector Assembly No. 5
C52	Injector Driver (EDU) (No. 2)
C53	Injector Driver (EDU) (No. 2)
C54	Injector Driver (EDU) (No. 1)
C55	Injector Driver (EDU) (No. 1)
C56	Fuel Pressure Sensor
C57	Injector Assembly No. 7
C58	Diesel Throttle Body Assembly (Bank 1)
C59	Diesel Turbo Pressure Sensor
C60	Intake Air Temperature Sensor
C61	Diesel Throttle Body Assembly (Bank 2)
C62	Glow Plug Assembly No. 2
C63	Injector Assembly No. 8
C64	Injector Assembly No. 6
C65	Diesel Throttle Body Assembly (Bank 2)
C66	No. 2 EGR Valve Assembly (Bank 2)
C67	Injector Assembly No. 2
C68	Cam Position Sensor
C69	Diesel Engine Coolant Temperature Sensor
C71	Engine Oil Level Sensor
C72	Injector Assembly No. 4
C74	Oil Pressure Sender Gage Assembly
C78	Shift Position Switch
C81	Short Connector
C82	Short Connector
C91	Electric Vacuum Regulating Valve Assembly (EGR)
C97	Fuel Sender Gage Assembly (Front)
C100	Fuel Pressure Sensor
C101	Diesel Turbo Pressure Sensor
C102	Short Connector
C103	Short Connector
C106	EGR Valve Assembly (Bank 1)
C107	Injector Assembly No. 1
C108	Injector Assembly No. 3
C109	Injector Assembly No. 5
C110	Injector Assembly No. 7
C113	Injector Assembly No. 6
C115	Injector Assembly No. 2
C116	Diesel Engine Coolant Temperature Sensor
C117	Injector Assembly No. 4


Position of Parts in Engine Compartment (RHD 1VD-FTV)

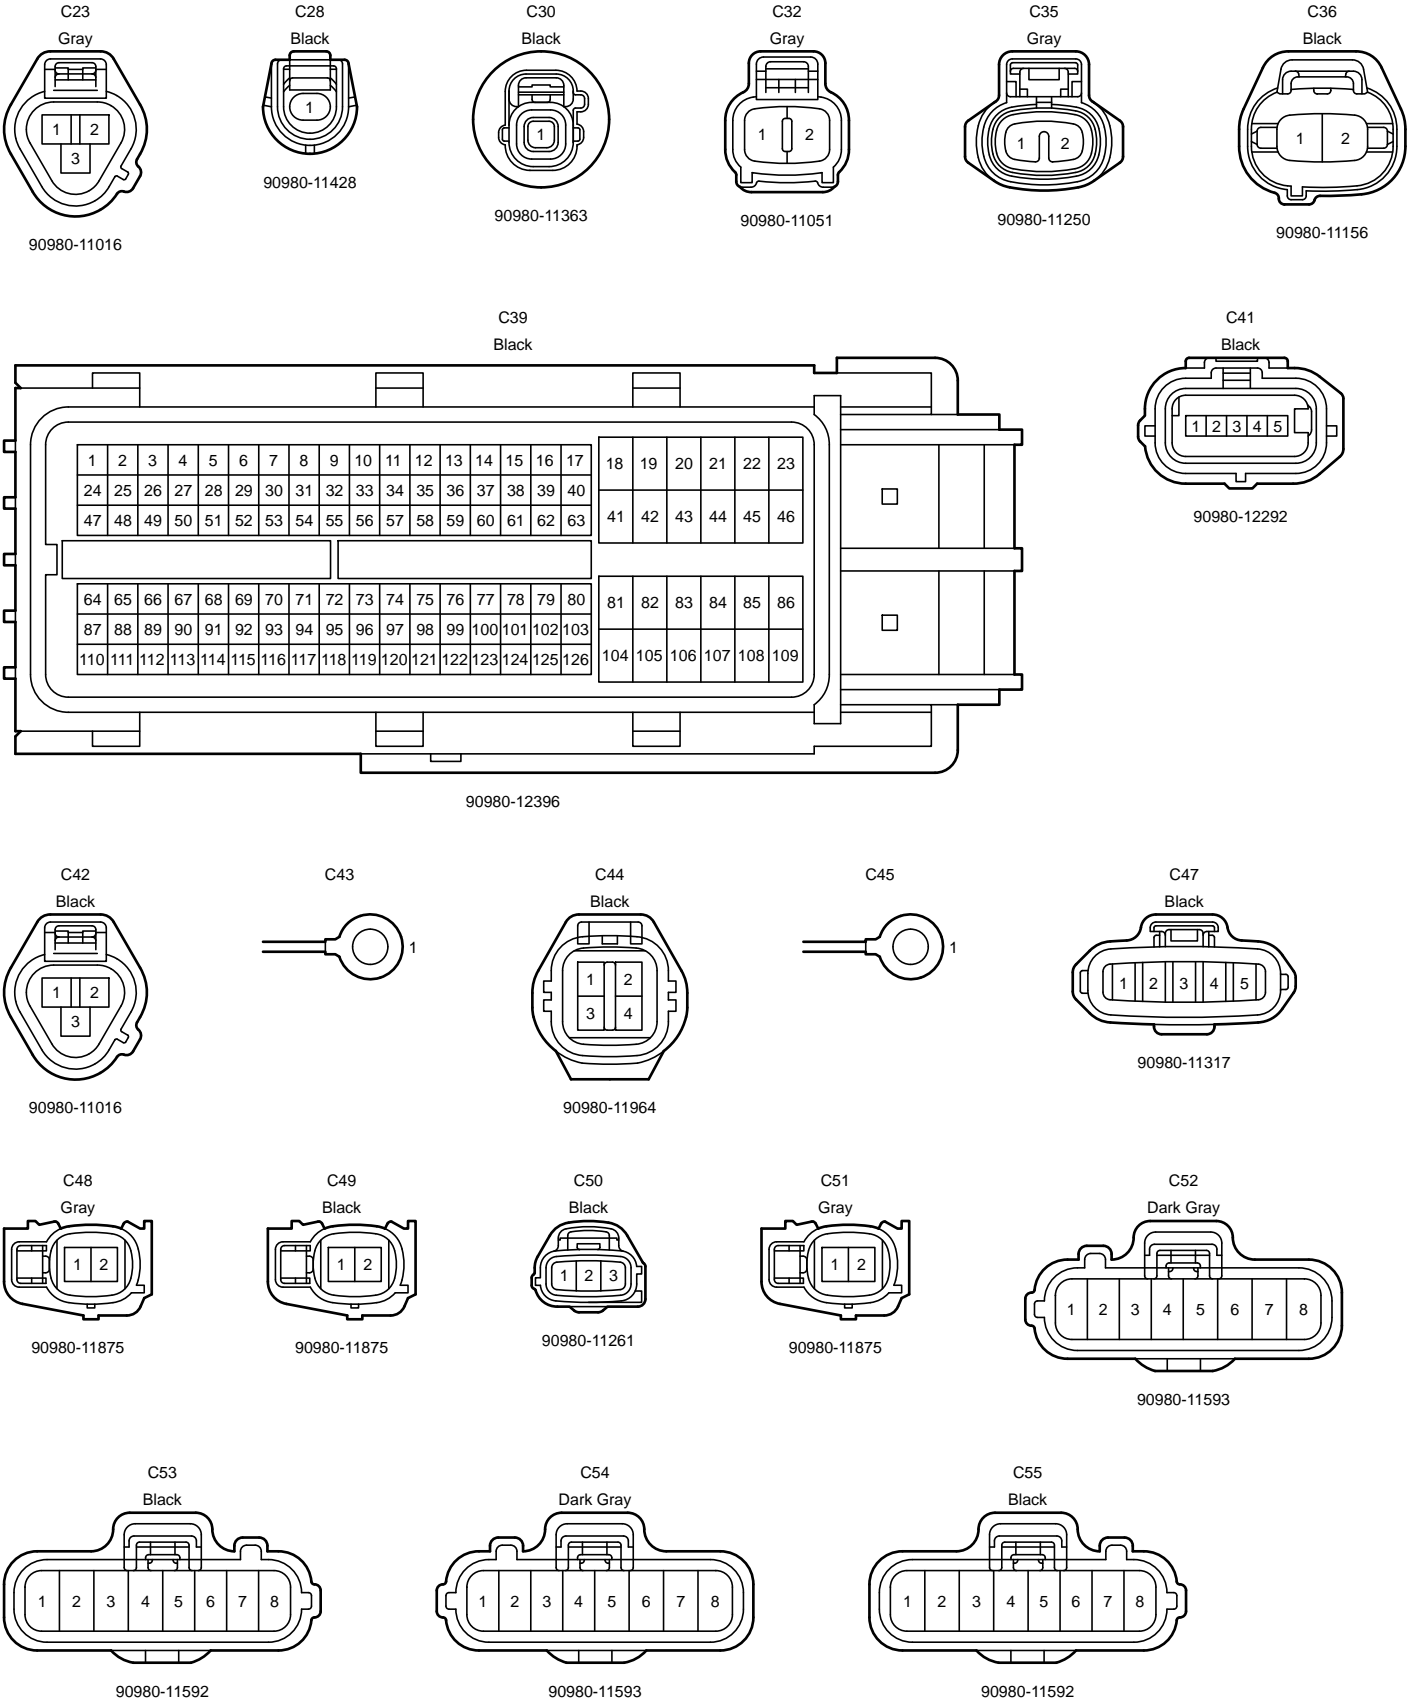


Position of Parts in Engine Compartment (RHD 1VD-FTV)

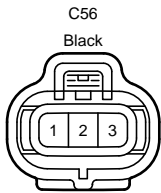


90980-12636

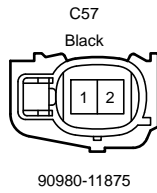


90980-11875

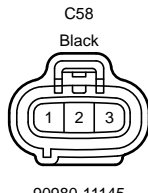


90980-11145

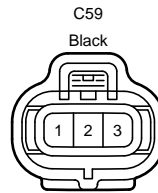



90980-12636

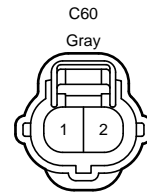


90980-11025

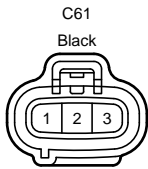


90980-11145

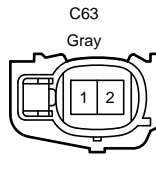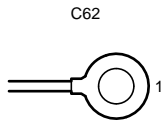


90980-11875

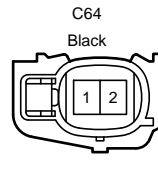


90980-11875

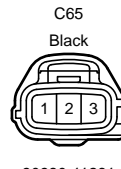


90980-11261

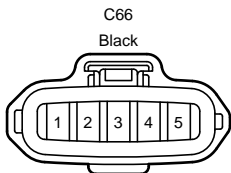

90980-11317

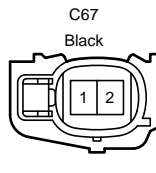


90980-11875

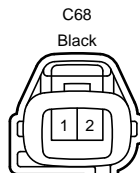


90980-10947




90980-11451

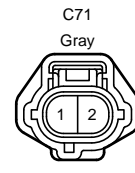


90980-11235

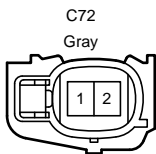


90980-11875

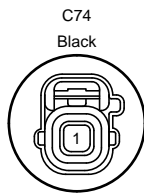


90980-11363

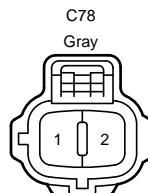


90980-10923

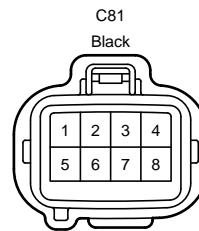


90980-10897

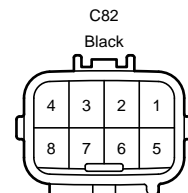


90980-10896

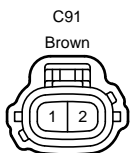


90980-11162
(1HZ)

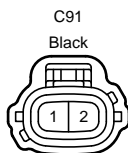


90980-11162
(1VD-FTV)

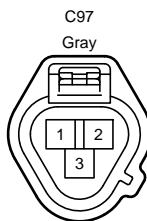

90980-11016

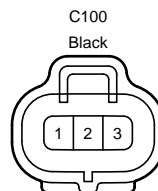

90980-10845

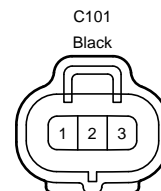


90980-10845




90980-11178




90980-11177

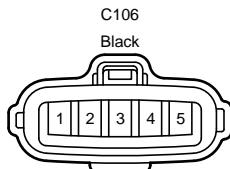

90980-11024

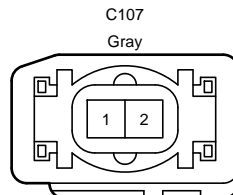

90980-12747

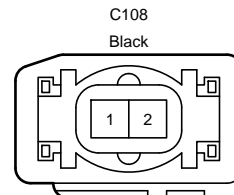

90980-12747

Position of Parts in Engine Compartment (RHD 1VD-FTV)

