


# Position of Parts in Engine Compartment (RHD 1GR-FE)

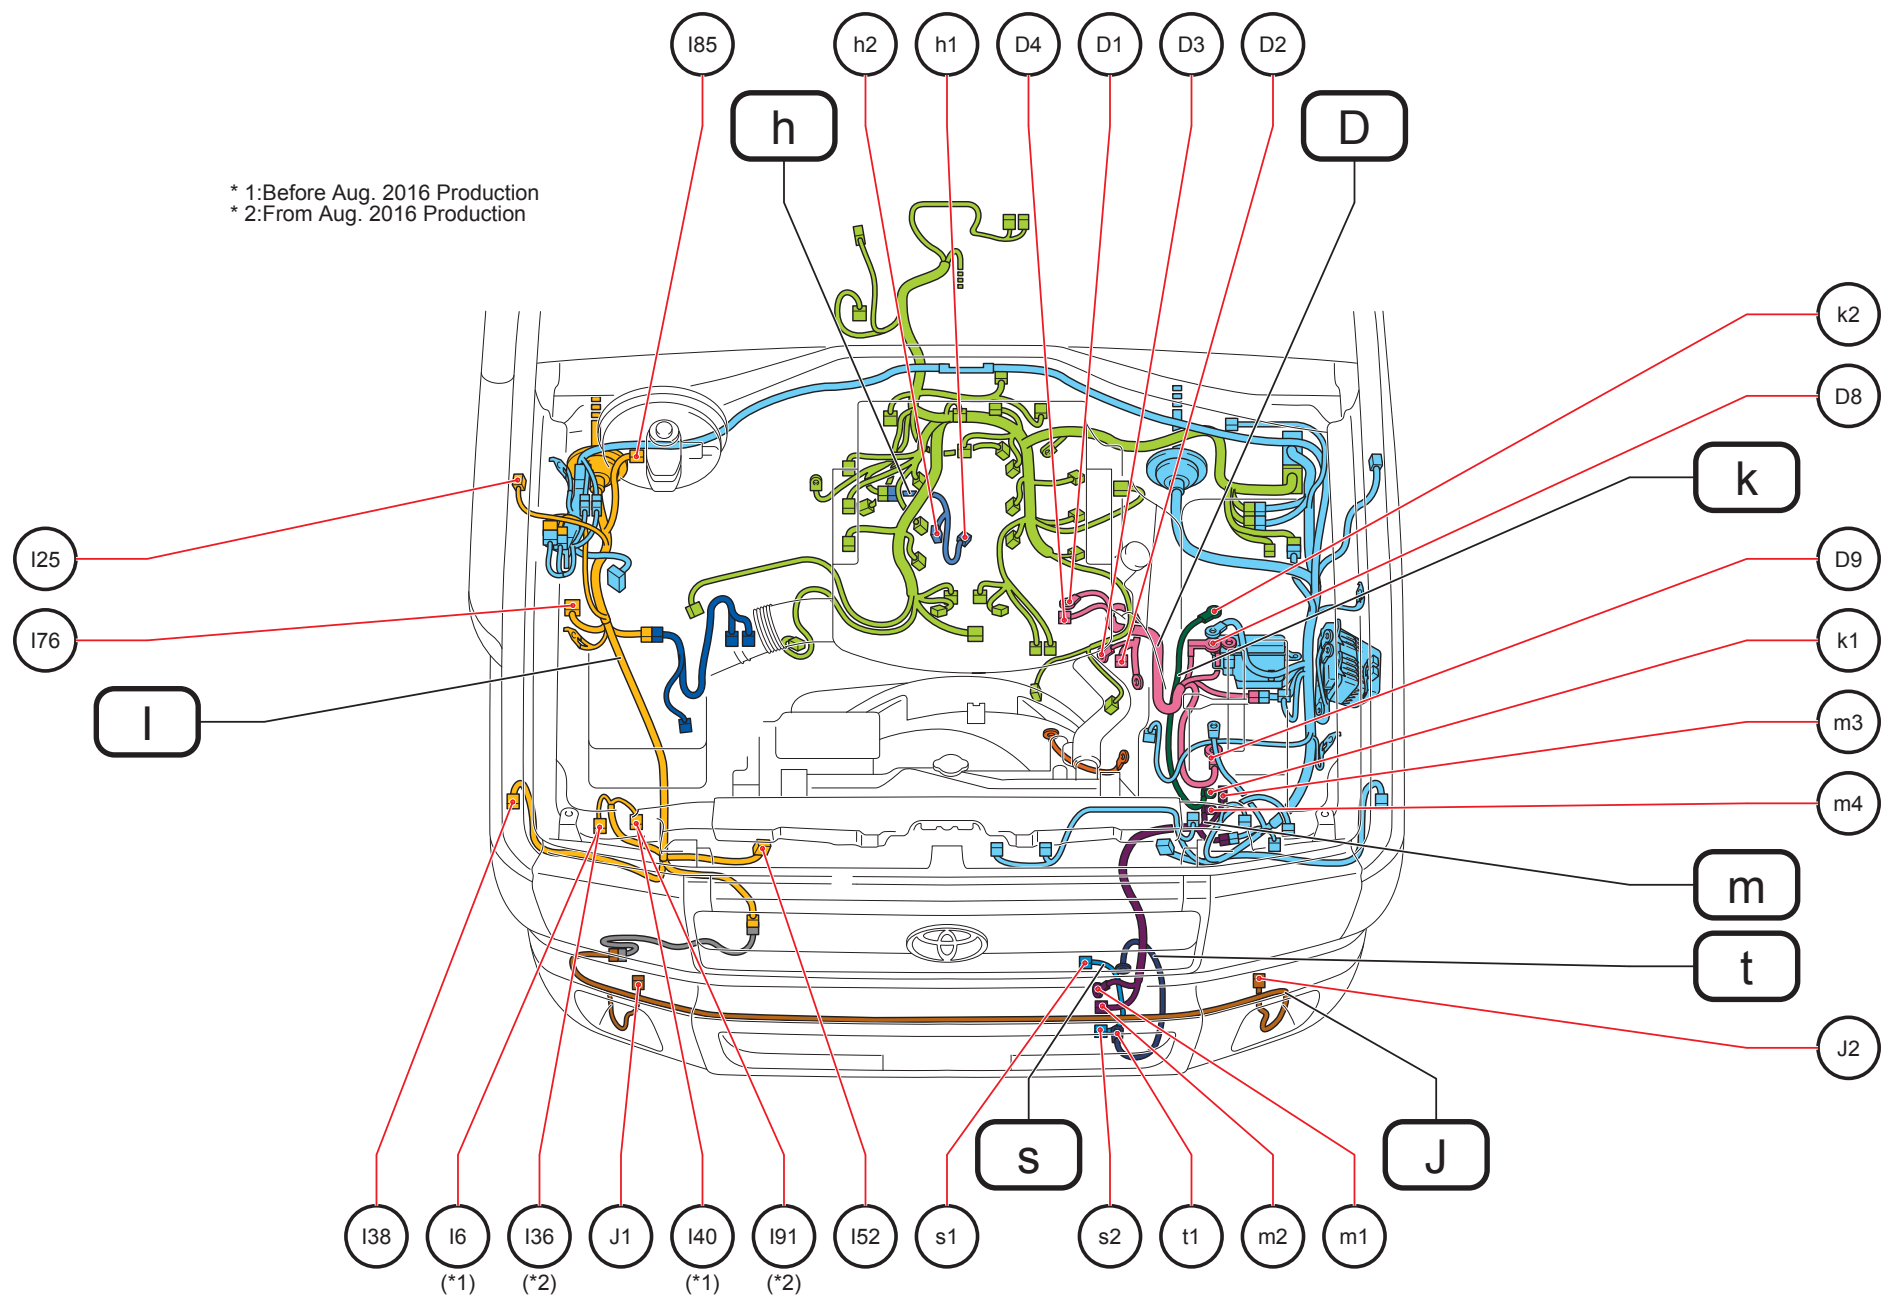

D1	Generator Assembly
D2	Starter Assembly
D3	Starter Assembly
D4	Generator Assembly
D8	Battery (Main)
D9	Battery (Main)
I6	Front Blower Motor (Heater Blower Case)
I25	Side Turn Signal Light Assembly RH
I36	Headlight Assembly RH
I38	Headlight Assembly RH
I40	Headlight Assembly RH
I52	Front Airbag Sensor RH
I76	Fuse Block Assembly
I85	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Sub-Assembly)
I91	Headlight Assembly RH
J1	Fog Light Assembly RH
J2	Fog Light Assembly LH
h1	Knock Control Sensor (Bank 2)
h2	Knock Control Sensor (Bank 1)
k1	No. 1 Magnet Switch Assembly
k2	Battery (Main)
m1	Winch Motor with Magnet Switch Assembly
m2	Winch Motor with Magnet Switch Assembly
m3	No. 1 Magnet Switch Assembly
m4	No. 1 Magnet Switch Assembly
s1	Winch Assembly
s2	Winch Motor with Magnet Switch Assembly
t1	Winch Motor with Magnet Switch Assembly

Position of Parts in Engine Compartment (RHD 1GR-FE)

