


Position of Parts in Engine Compartment (LHD 1VD-FTV)




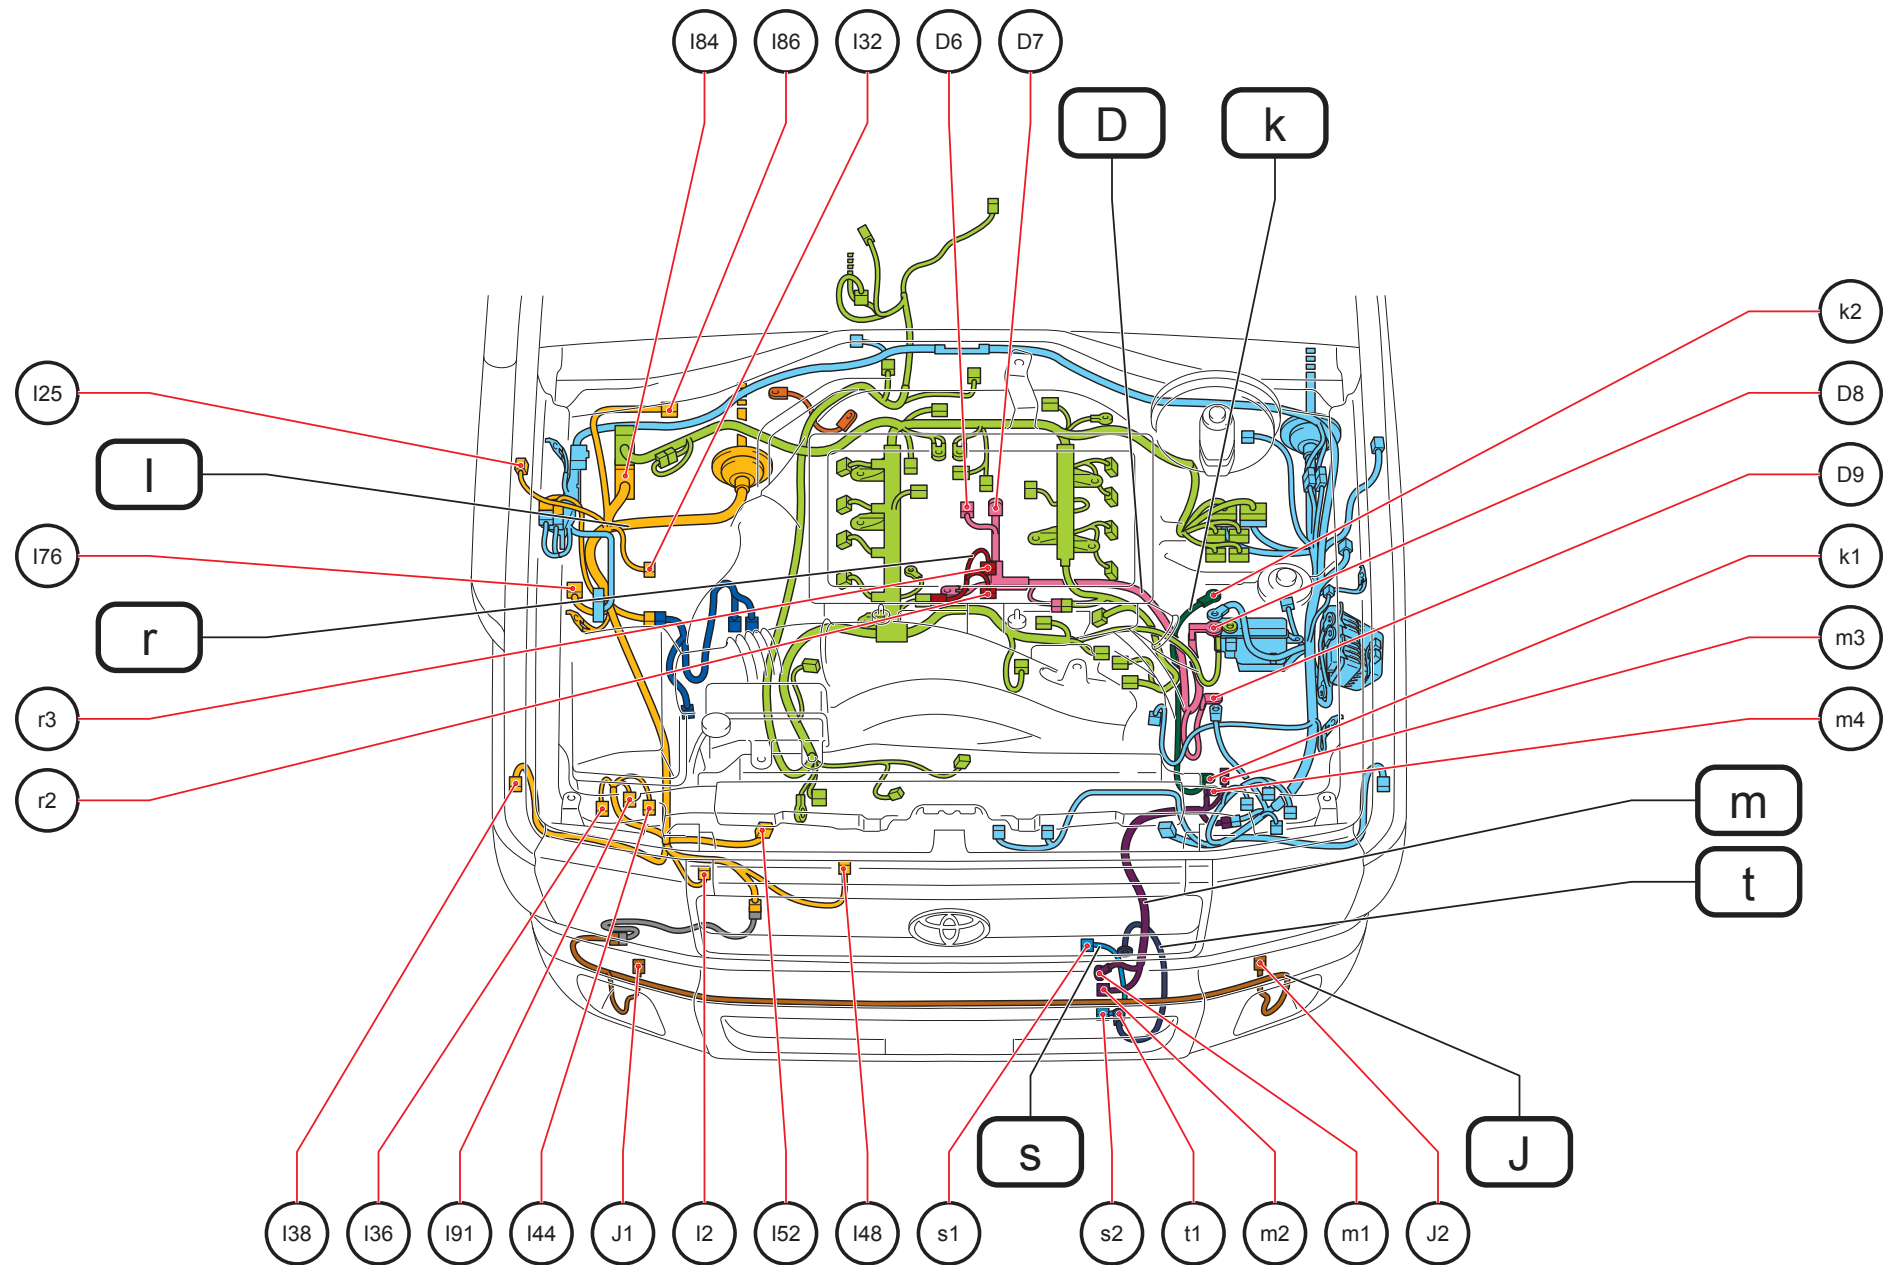


D6	Starter Assembly
D7	Starter Assembly
D8	Battery (Main)
D9	Battery (Main)
I2	A/C Pressure Switch (Cooler Refrigerant Liquid Pipe B)
I25	Side Turn Signal Light Assembly RH
I32	Vacuum Warning Switch Assembly
I36	Headlight Assembly RH
I38	Headlight Assembly RH
I44	Headlight Assembly RH
I48	Thermistor Assembly
I52	Front Airbag Sensor RH
I76	Fuse Block Assembly
I84	ECM
I86	Windshield Wiper Motor Assembly
I91	Headlight Assembly RH
J1	Fog Light Assembly RH
J2	Fog Light Assembly LH
k1	No. 1 Magnet Switch Assembly
k2	Battery (Main)
m1	Winch Motor with Magnet Switch Assembly
m2	Winch Motor with Magnet Switch Assembly
m3	No. 1 Magnet Switch Assembly
m4	No. 1 Magnet Switch Assembly
r2	Suction Control Valve
r3	Fuel Temperature Sensor
s1	Winch Assembly
s2	Winch Motor with Magnet Switch Assembly
t1	Winch Motor with Magnet Switch Assembly


Position of Parts in Engine Compartment (LHD 1VD-FTV)



90980-11184

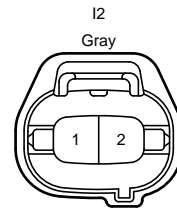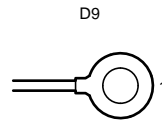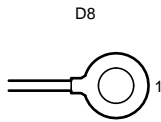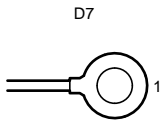


90980-11149

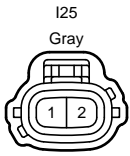


90980-11162




90980-11252

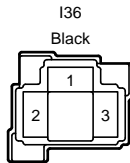

90980-11314
(High, Low)

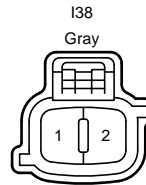


90980-11019
(Front Turn Signal Light)

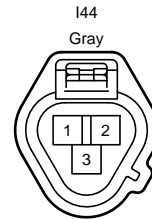

90980-11016
(Headlight Beam Level Control Actuator)




90980-11070

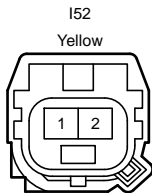


90980-12490




90980-10989

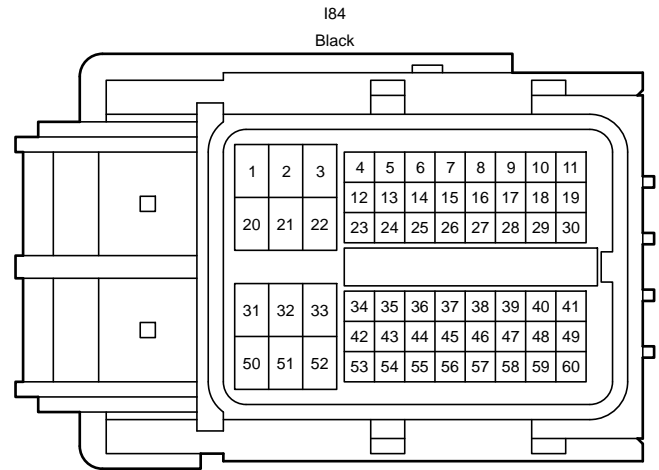


90980-12462

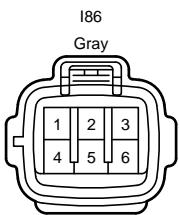


90980-11194

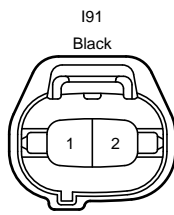





90980-11156
(Clearance Light)

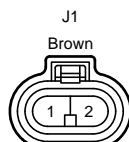


90980-11096

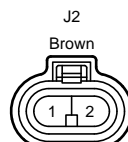



90980-11096

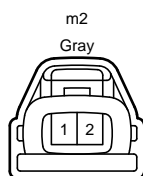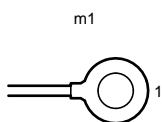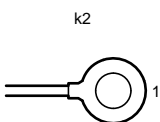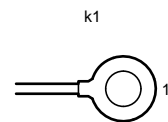

90980-10887

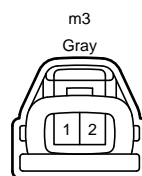

90980-10887

 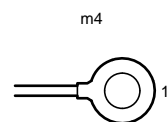

90980-11285

