


Position of Parts in Engine Compartment (LHD 1VD-FTV)

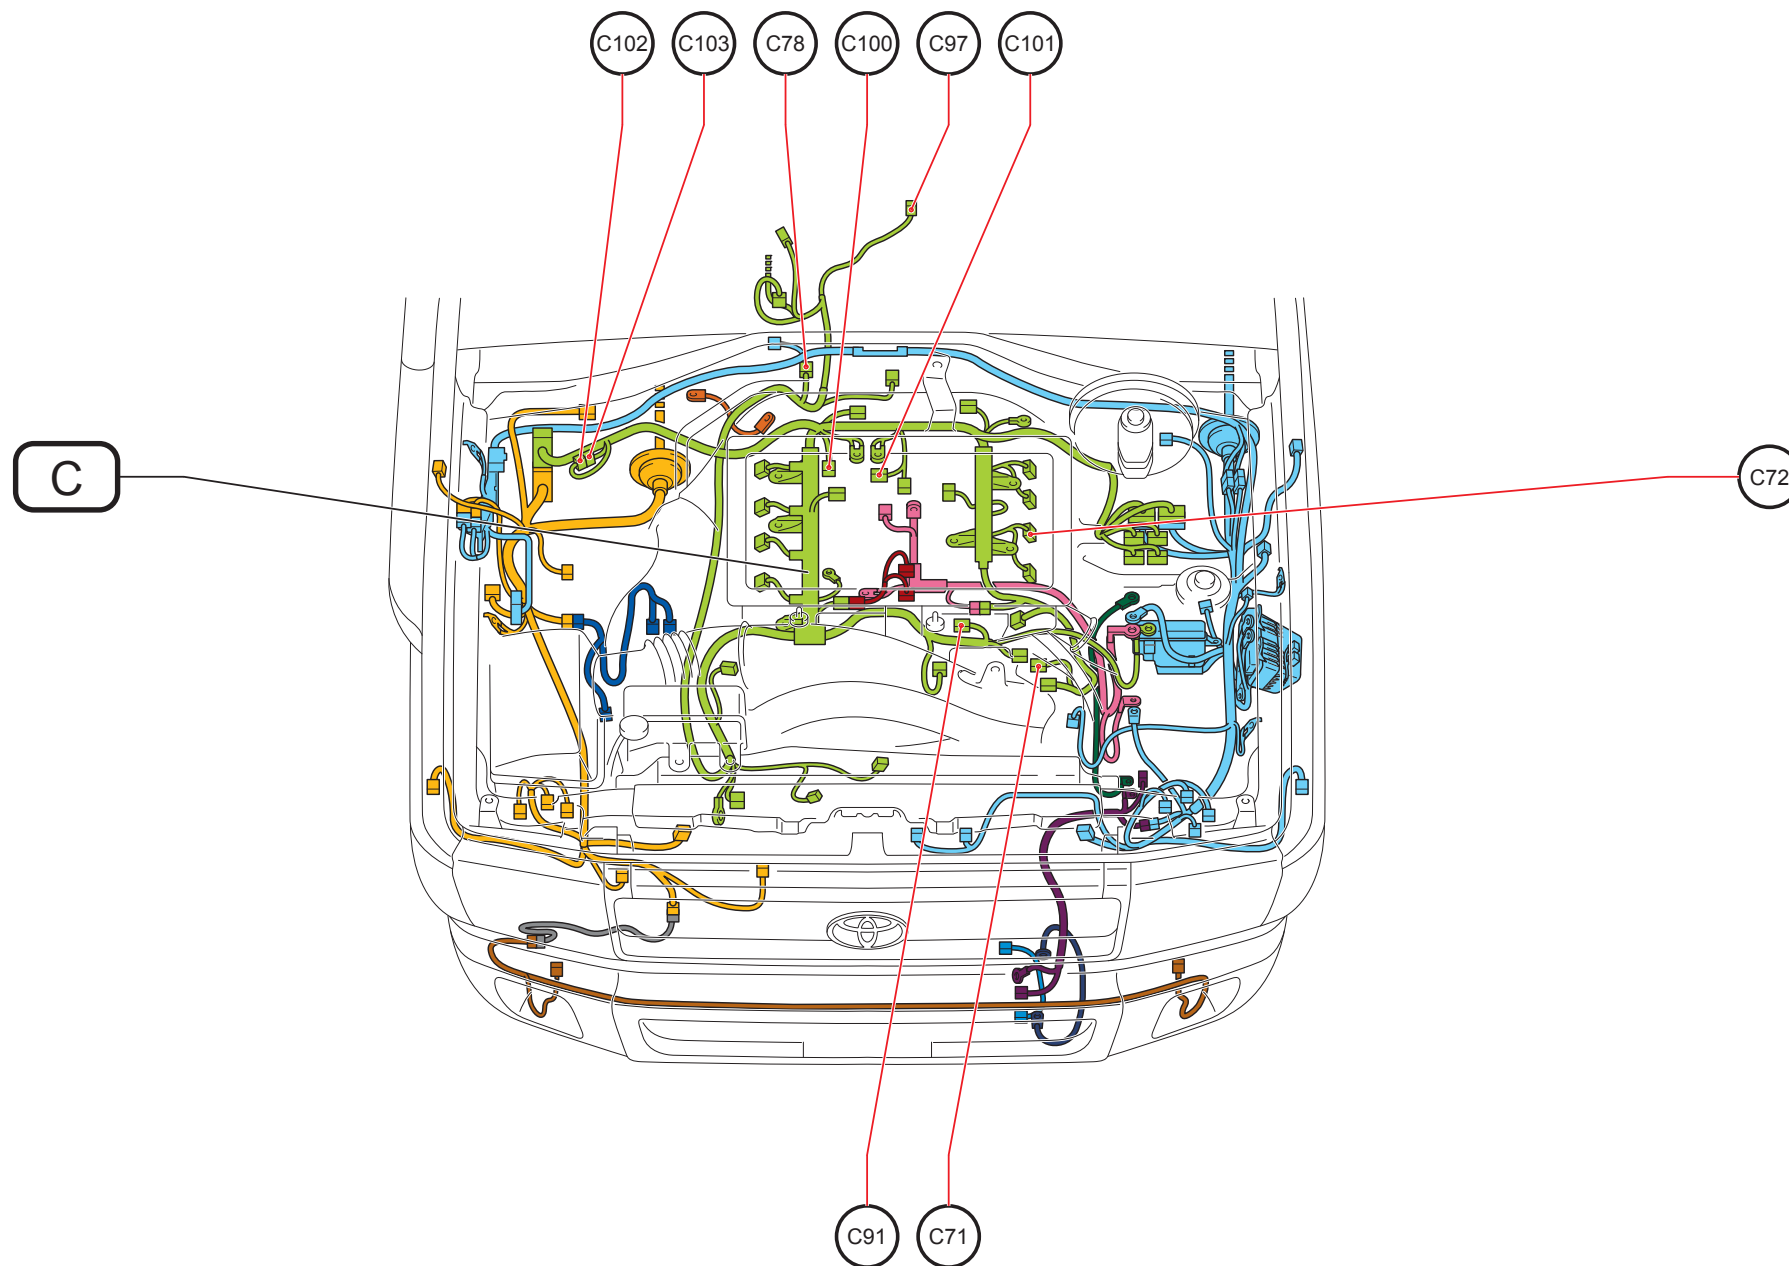

C71 Engine Oil Level Sensor
C72 Injector Assembly No. 4
C78 Shift Position Switch
C91 Electric Vacuum Regulating Valve Assembly (EGR)
C97 Fuel Sender Gage Assembly (Front)
C100 Fuel Pressure Sensor
C101 Diesel Turbo Pressure Sensor
C102 Short Connector
C103 Short Connector

Position of Parts in Engine Compartment (LHD 1VD-FTV)

