


Position of Parts in Engine Compartment (RHD 1VD-FTV)

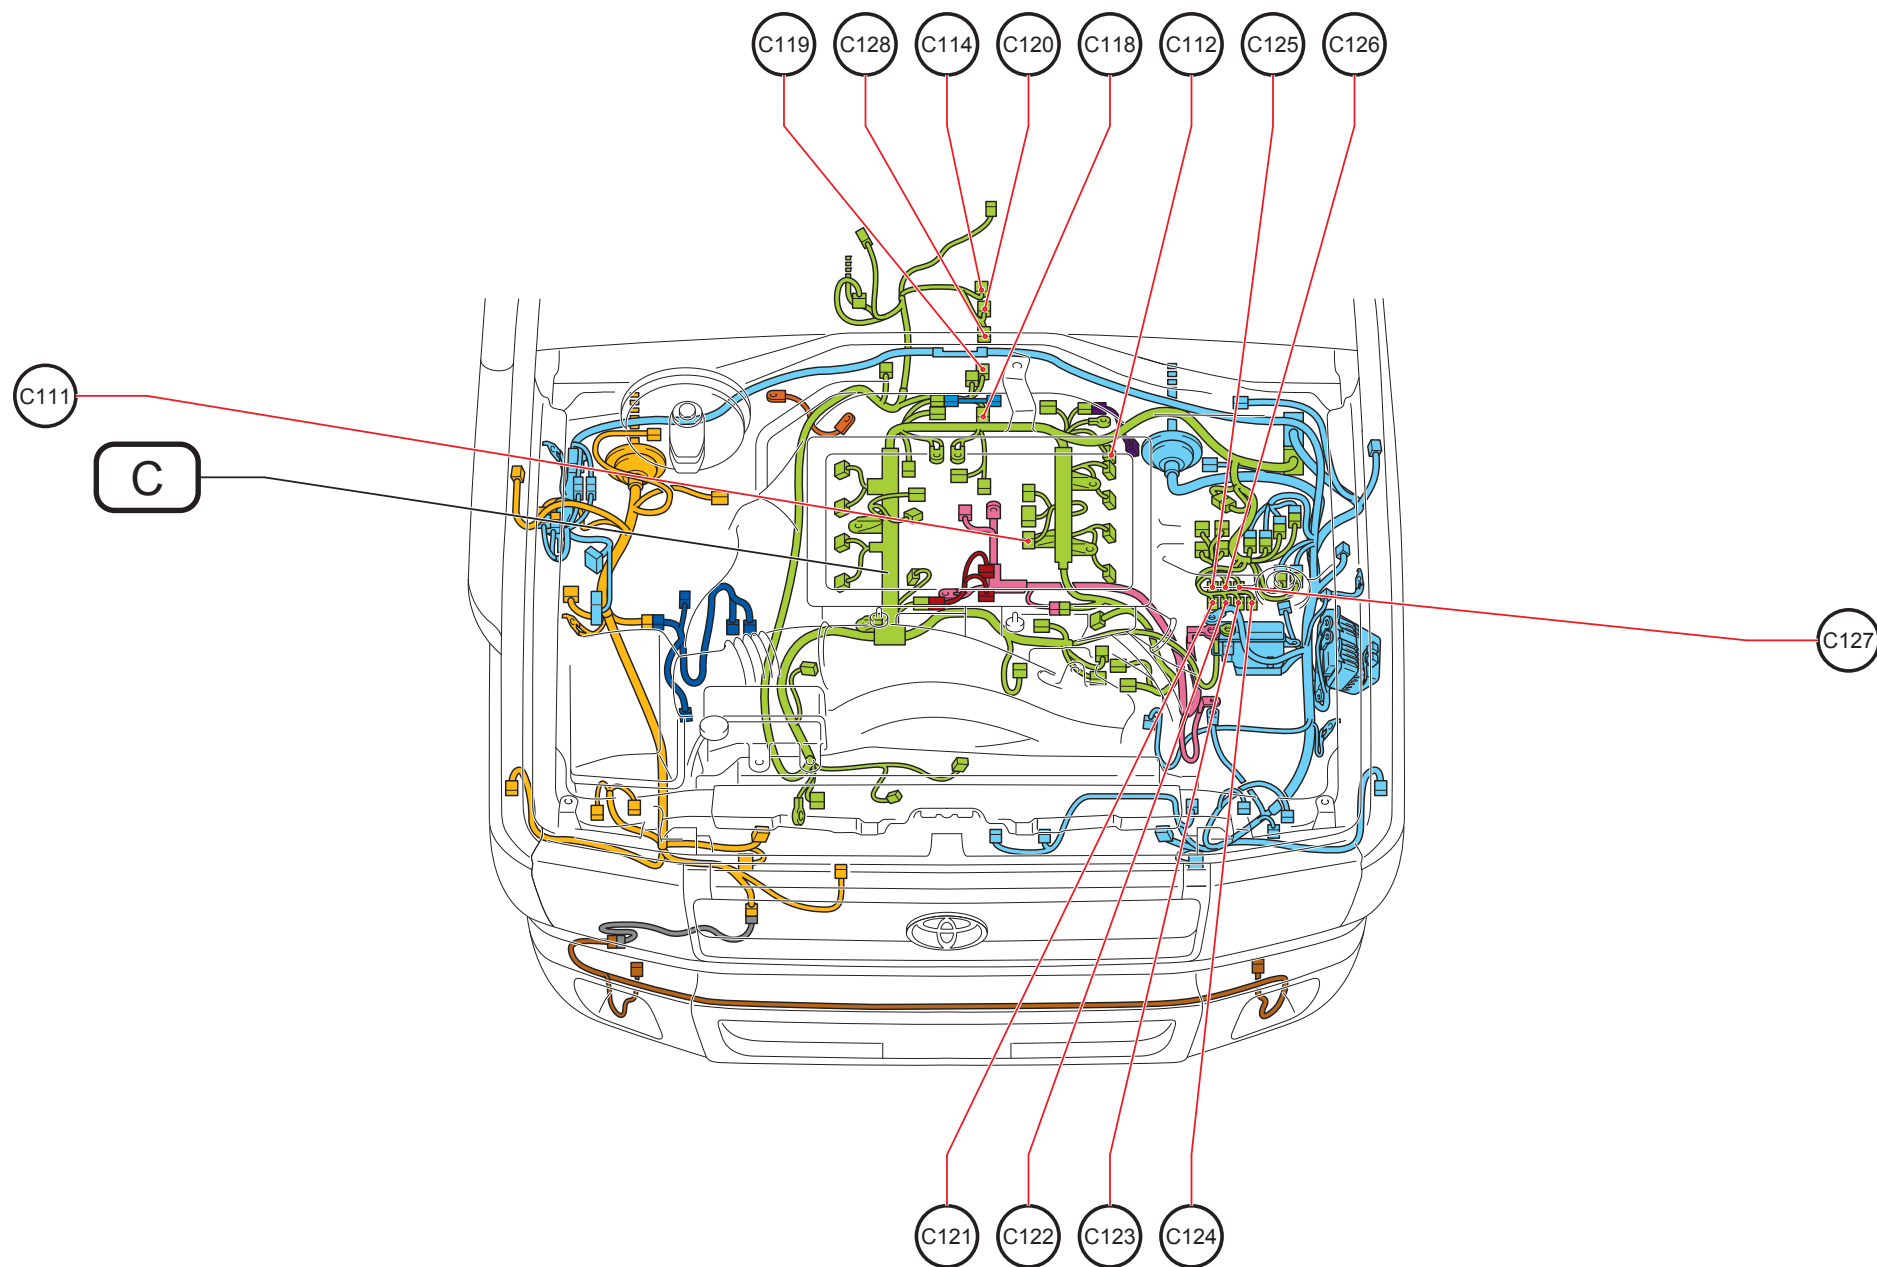

- C111 No. 1 Vacuum Switching Valve Assembly (for EGR Cooler Bypass Valve)
- C112 Injector Assembly No. 8
- C114 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C118 No. 1 Exhaust Gas Temperature Sensor
- C119 No. 2 Exhaust Gas Temperature Sensor
- C120 DPF Temperature Sensor (No. 3 Exhaust Gas Temperature Sensor)
- C121 Injector Driver (EDU) (No. 1)
- C122 Injector Driver (EDU) (No. 1)
- C123 Injector Driver (EDU) (No. 1)
- C124 Injector Driver (EDU) (No. 1)
- C125 Injector Driver (EDU) (No. 2)
- C126 Injector Driver (EDU) (No. 2)
- C127 Injector Driver (EDU) (No. 2)
- C128 Differential Pressure Sensor

Position of Parts in Engine Compartment (RHD 1VD-FTV)

