



Position of Parts in Instrument Panel (LHD)

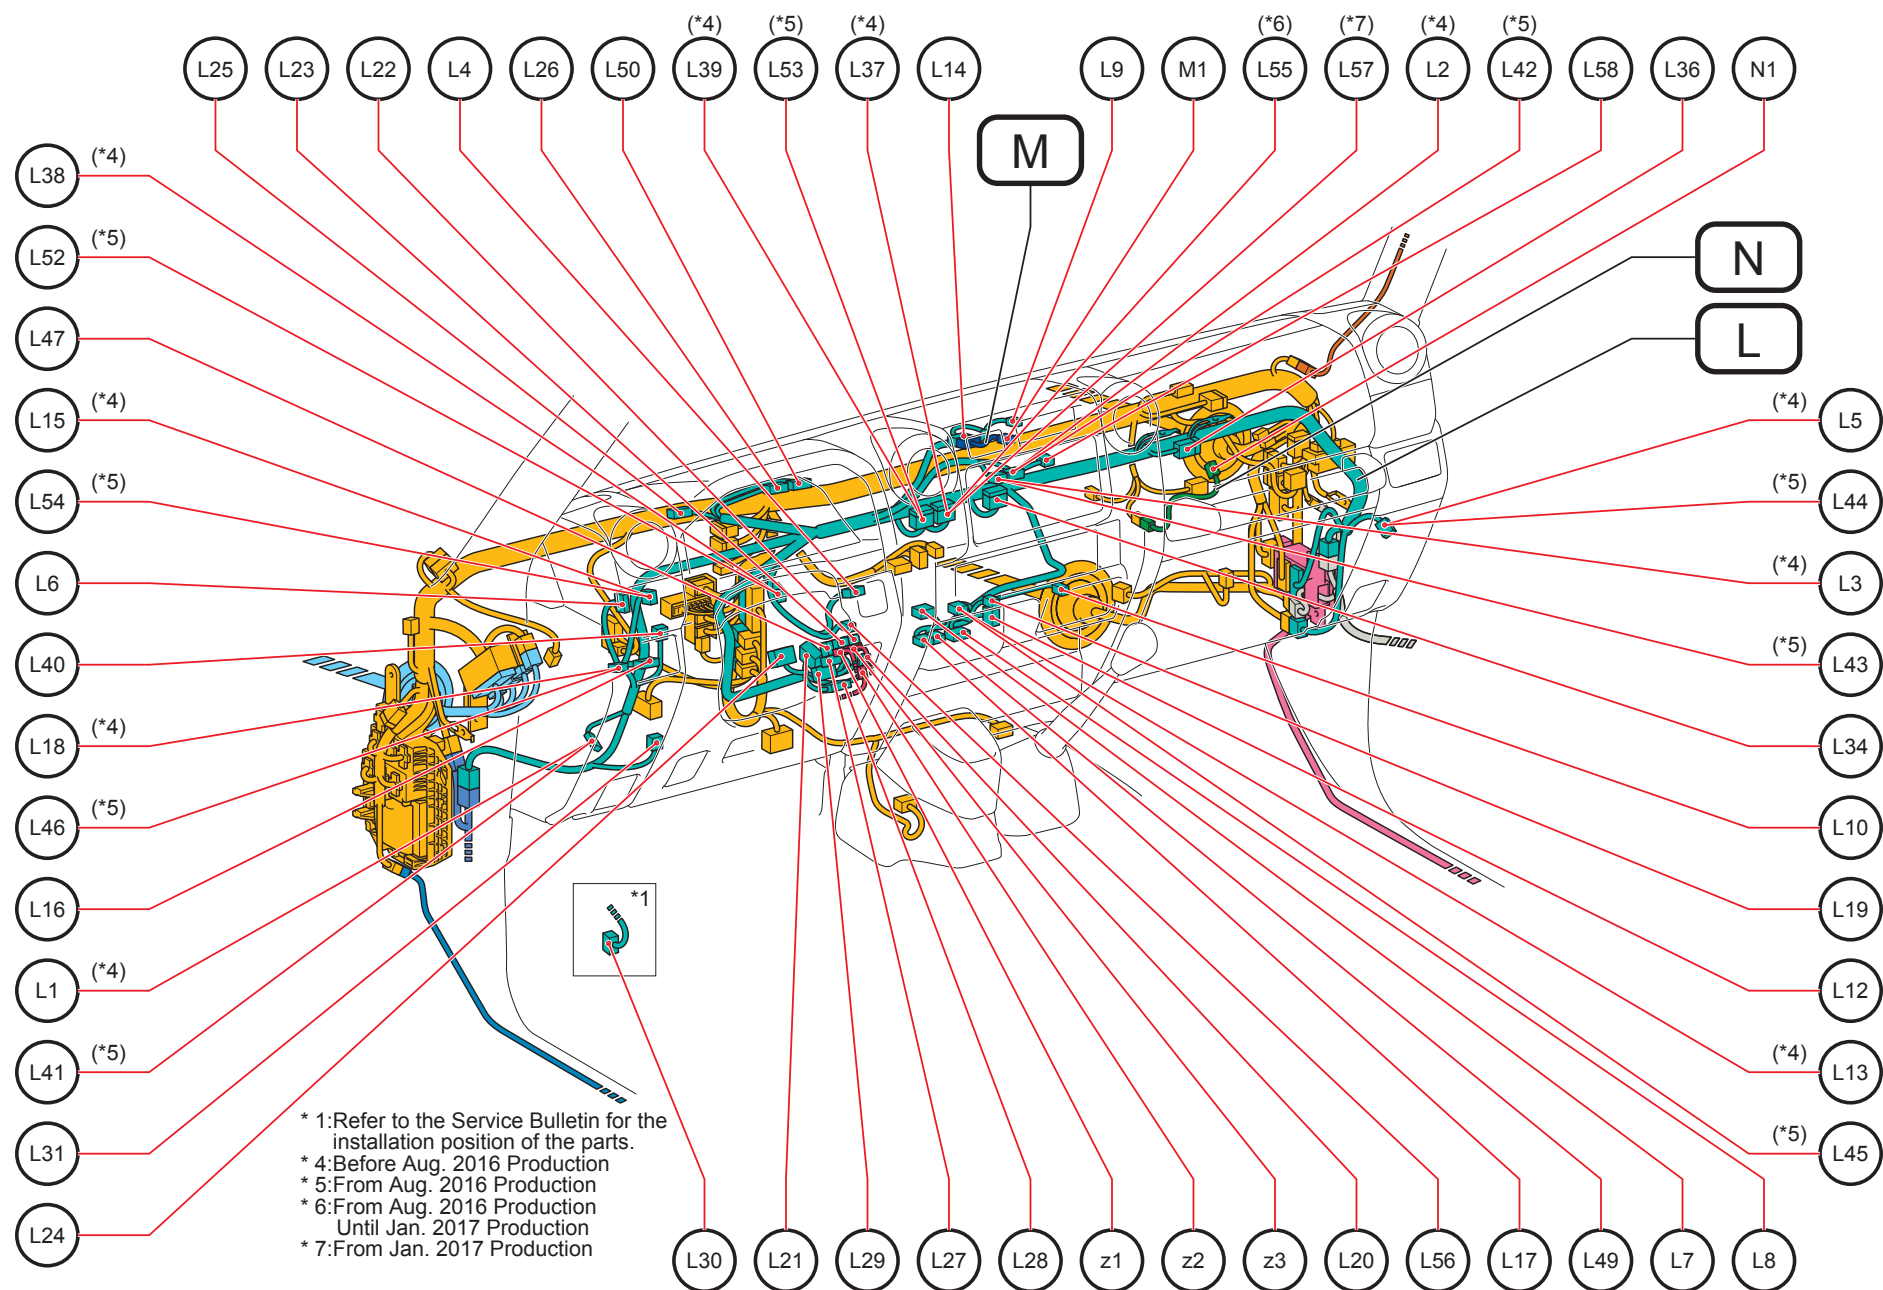


Position of Parts in Instrument Panel (LHD)

L1	Front No. 1 Speaker Assembly LH
L2	Radio Receiver Assembly
L3	Radio Receiver Assembly
L4	Center Differential Lock Switch
L5	Front No. 1 Speaker Assembly RH
L6	Idle Up Switch
L7	Rear Window Defogger Switch Assembly
L8	Fuel Control Switch Assembly
L9	Clock Assembly
L10	Ashtray Receptacle Light
L12	Cigarette Lighter Assembly
L13	Antenna Switch Assembly
L14	Hazard Warning Signal Switch Assembly
L15	Headlight Leveling Switch
L16	Outer Mirror Switch Assembly
L17	Transmission Control Switch
L18	Door Control Switch Assembly
L19	Cigarette Lighter Illumination (Cigarette Lighter Bezel Stay)
L20	Un-Lock Warning Switch Assembly
L21	Ignition or Starter Switch Assembly
L22	Windshield Wiper Switch Assembly
L23	Windshield Wiper Switch Assembly
L24	Headlight Dimmer Switch Assembly
L25	Combination Meter Assembly
L26	Combination Meter Assembly
L27	Spiral Cable Sub-Assembly
L28	Transponder Key Amplifier
L29	Spiral Cable Sub-Assembly
L30	Transponder Key ECU Assembly
L31	Door Control ECU with Receiver Assembly
L34	No. 26 Junction Connector
L36	No. 28 Junction Connector
L37	No. 29 Junction Connector
L38	No. 30 Junction Connector
L39	No. 31 Junction Connector
L40	Option Connector (Auto Antenna)
L41	Front No. 1 Speaker Assembly LH
L42	Radio Receiver Assembly
L43	Radio Receiver Assembly
L44	Front No. 1 Speaker Assembly RH
L45	Antenna Switch Assembly
L46	Door Control Switch Assembly
L47	Steering Sensor (Spiral Cable with Sensor Sub-Assembly)
L49	VSC Off Switch
L50	Combination Meter Assembly
L52	No. 30 Junction Connector
L53	No. 31 Junction Connector
L54	Headlight Leveling Switch
L55	No. 29 Junction Connector
L56	Tire Pressure Warning Reset Switch
L57	No. 37 Junction Connector
L58	No. 38 Junction Connector
M1	Hazard Warning Signal Switch Assembly
N1	Front Passenger Side Squib Circuit (Instrument Panel Passenger Airbag Assembly)
z1	Horn Button Wire Sub-Assembly , Spiral Cable Sub-Assembly
z2	Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z3	Cruise Control Switch Wire , Spiral Cable Sub-Assembly


Position of Parts in Instrument Panel (LHD)

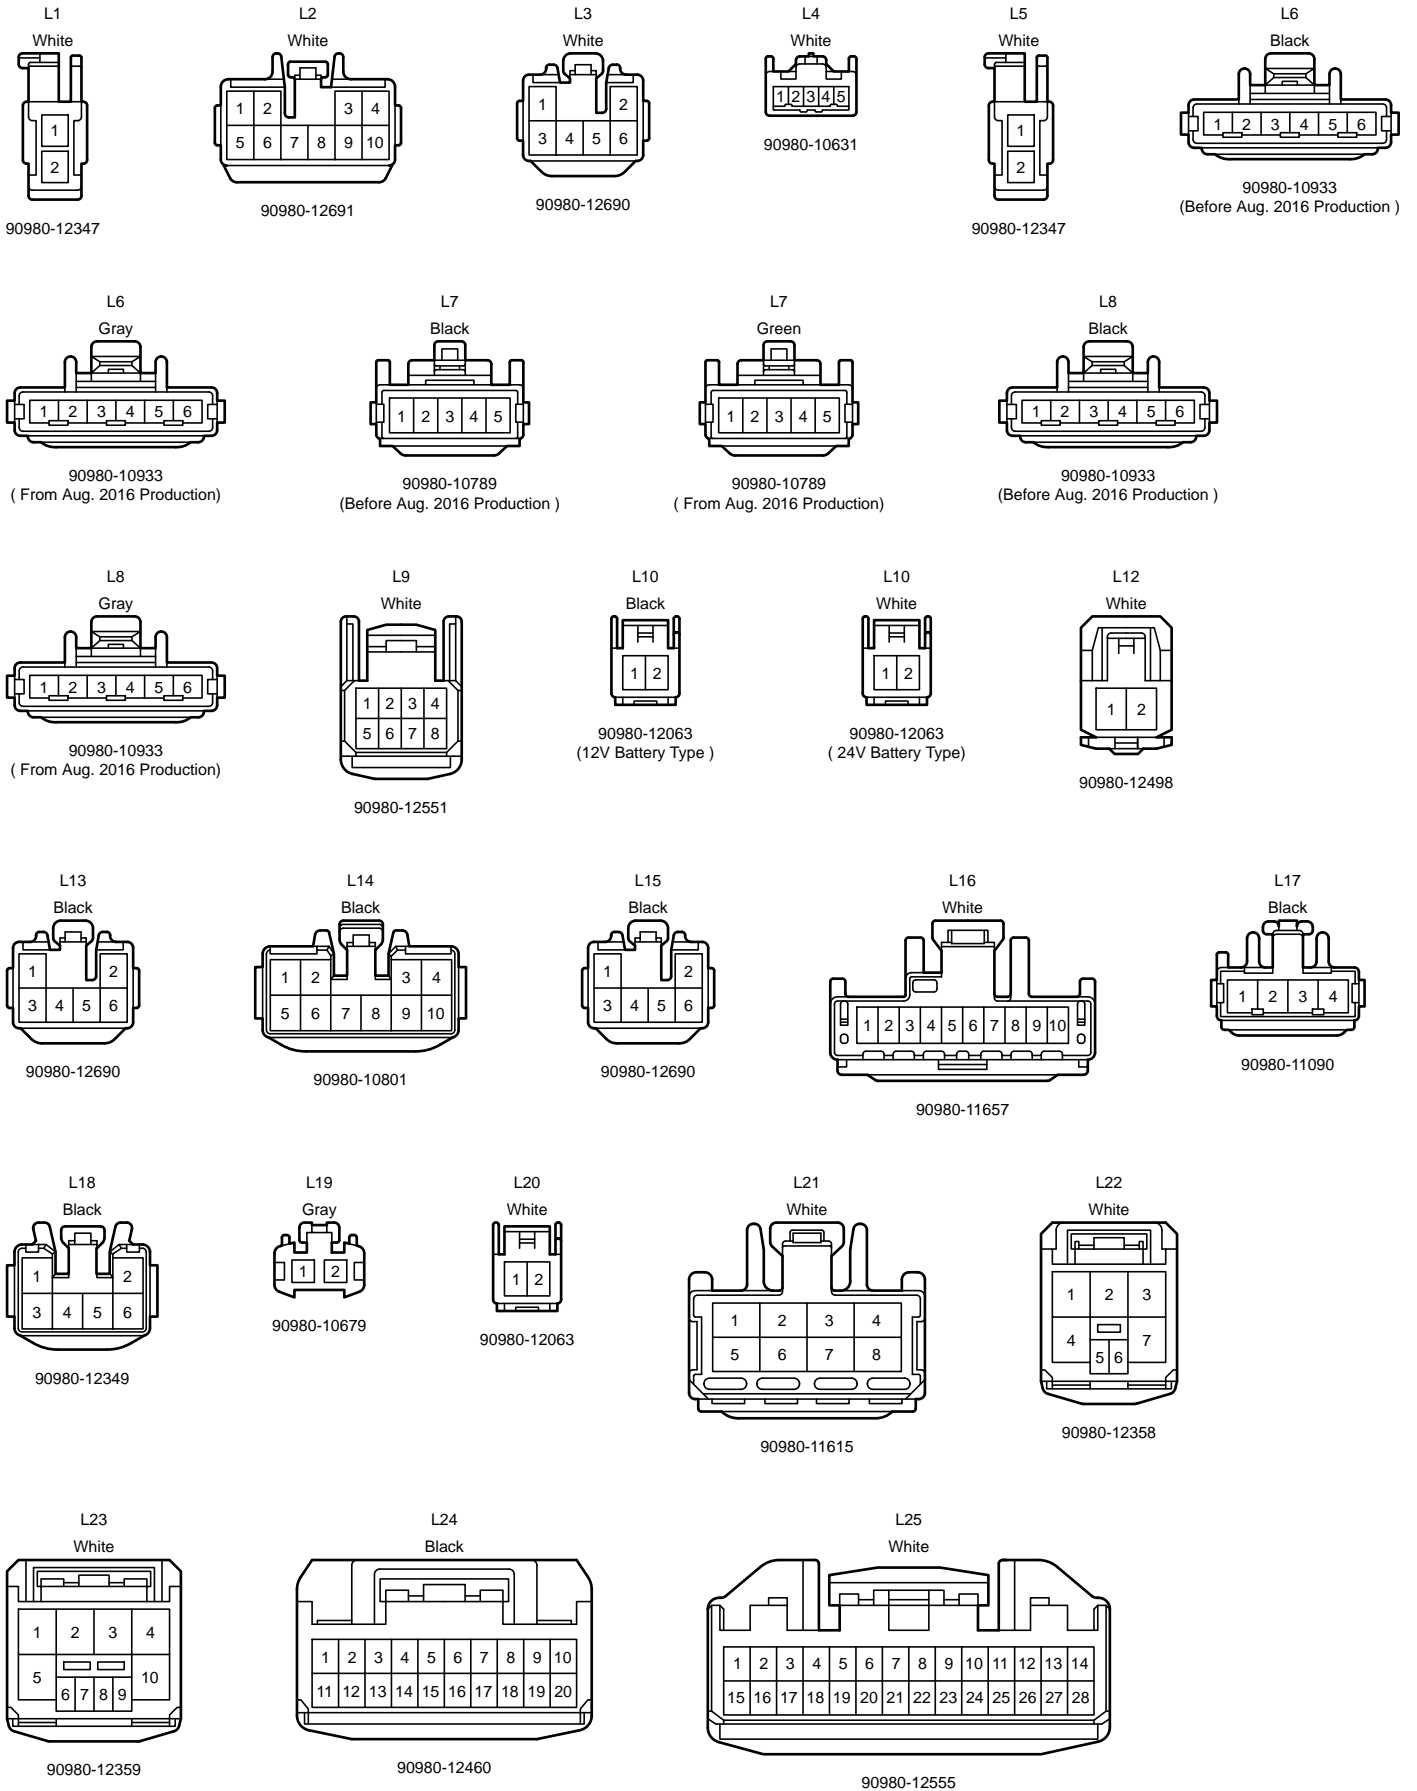


Position of Parts in Instrument Panel (LHD)

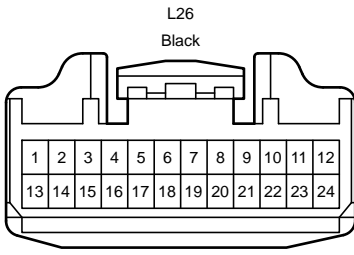


90980-12554

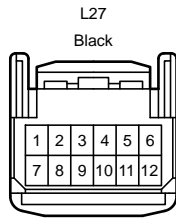


90980-12552

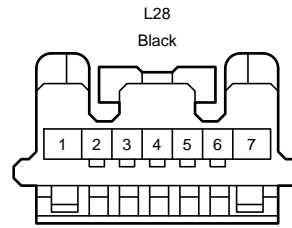


90980-12092

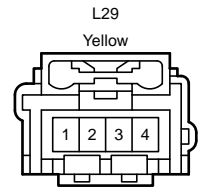


90980-12160

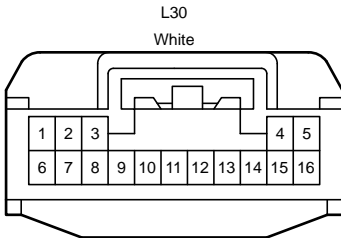


90980-12423

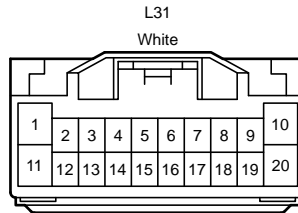


90980-12038

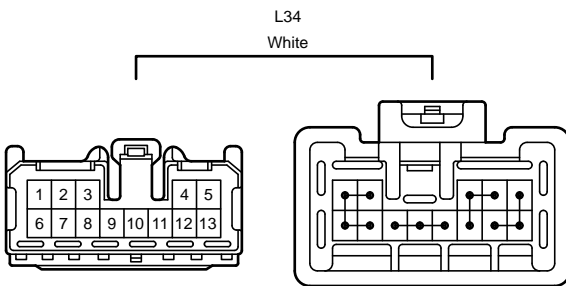


90980-12372

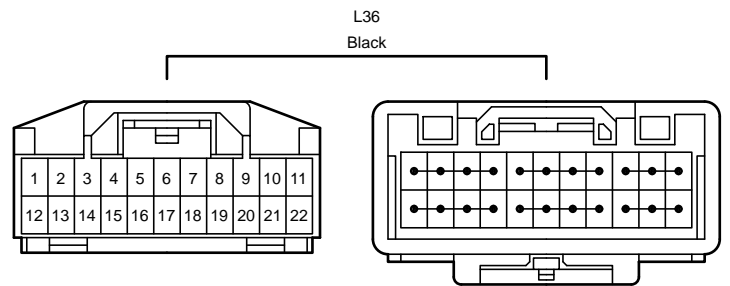


90980-11915

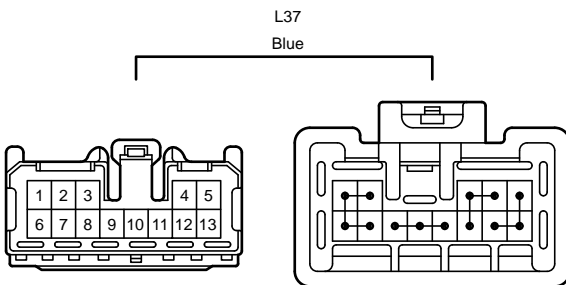


90980-12479

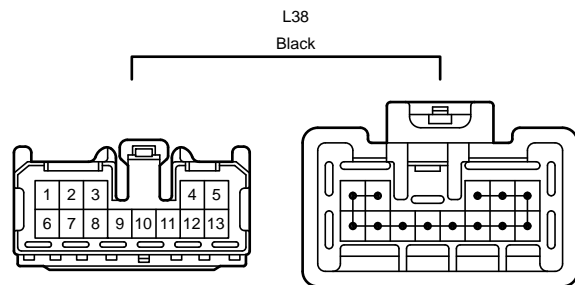


90980-12479

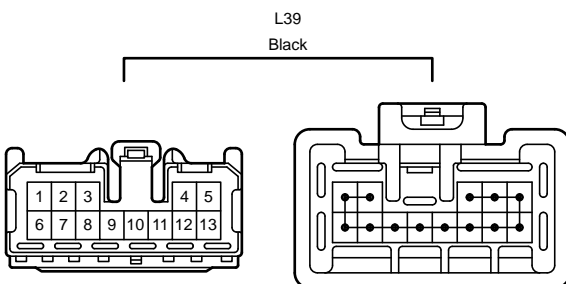


90980-12479

 

90980-10871

 


90980-10935

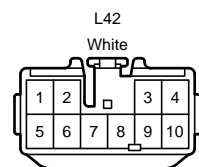


90980-10997


Position of Parts in Instrument Panel (LHD)

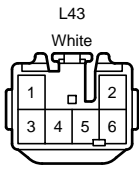


90980-10996

 


90980-10935

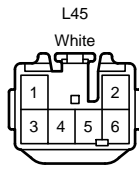


90980-10996

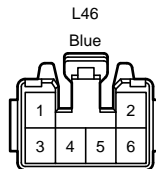


90980-10797

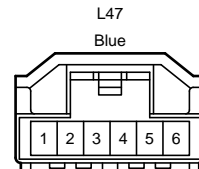


90980-11986

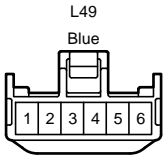


90980-10957

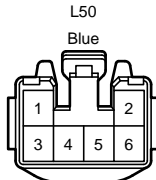


90980-10797

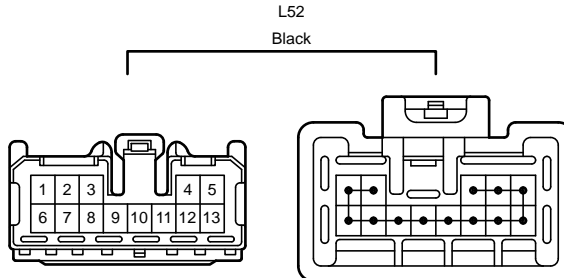


90980-11542

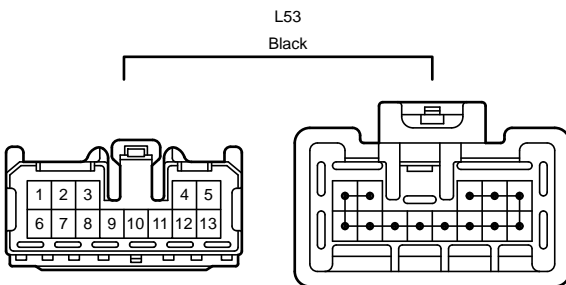


90980-11542

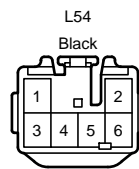


90980-10996

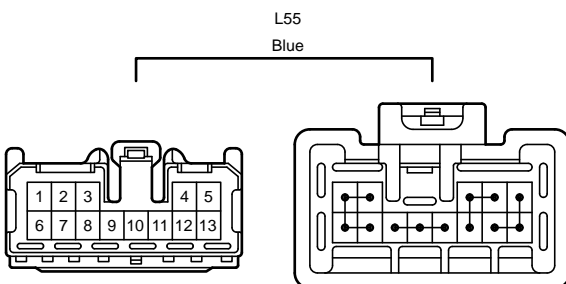


90980-11542

 

90980-10906

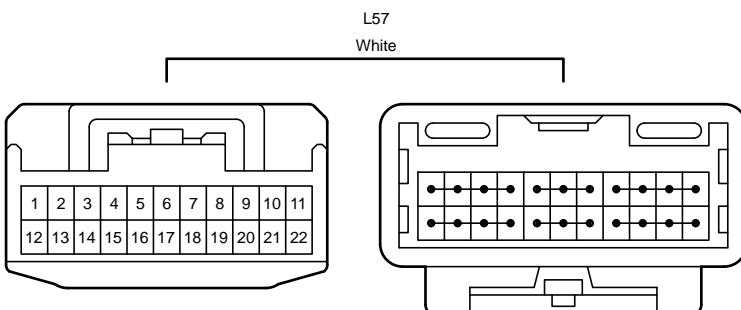


90980-12372

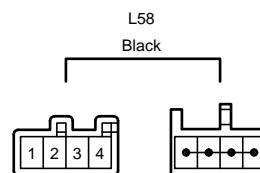


90980-11398


Position of Parts in Instrument Panel (LHD)

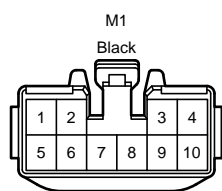


90980-10801

 


90980-12224

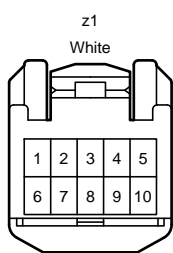

90980-12361

 

90980-12224

 

90980-12360