



# Position of Parts in Engine Compartment (LHD 1VD-FTV)

 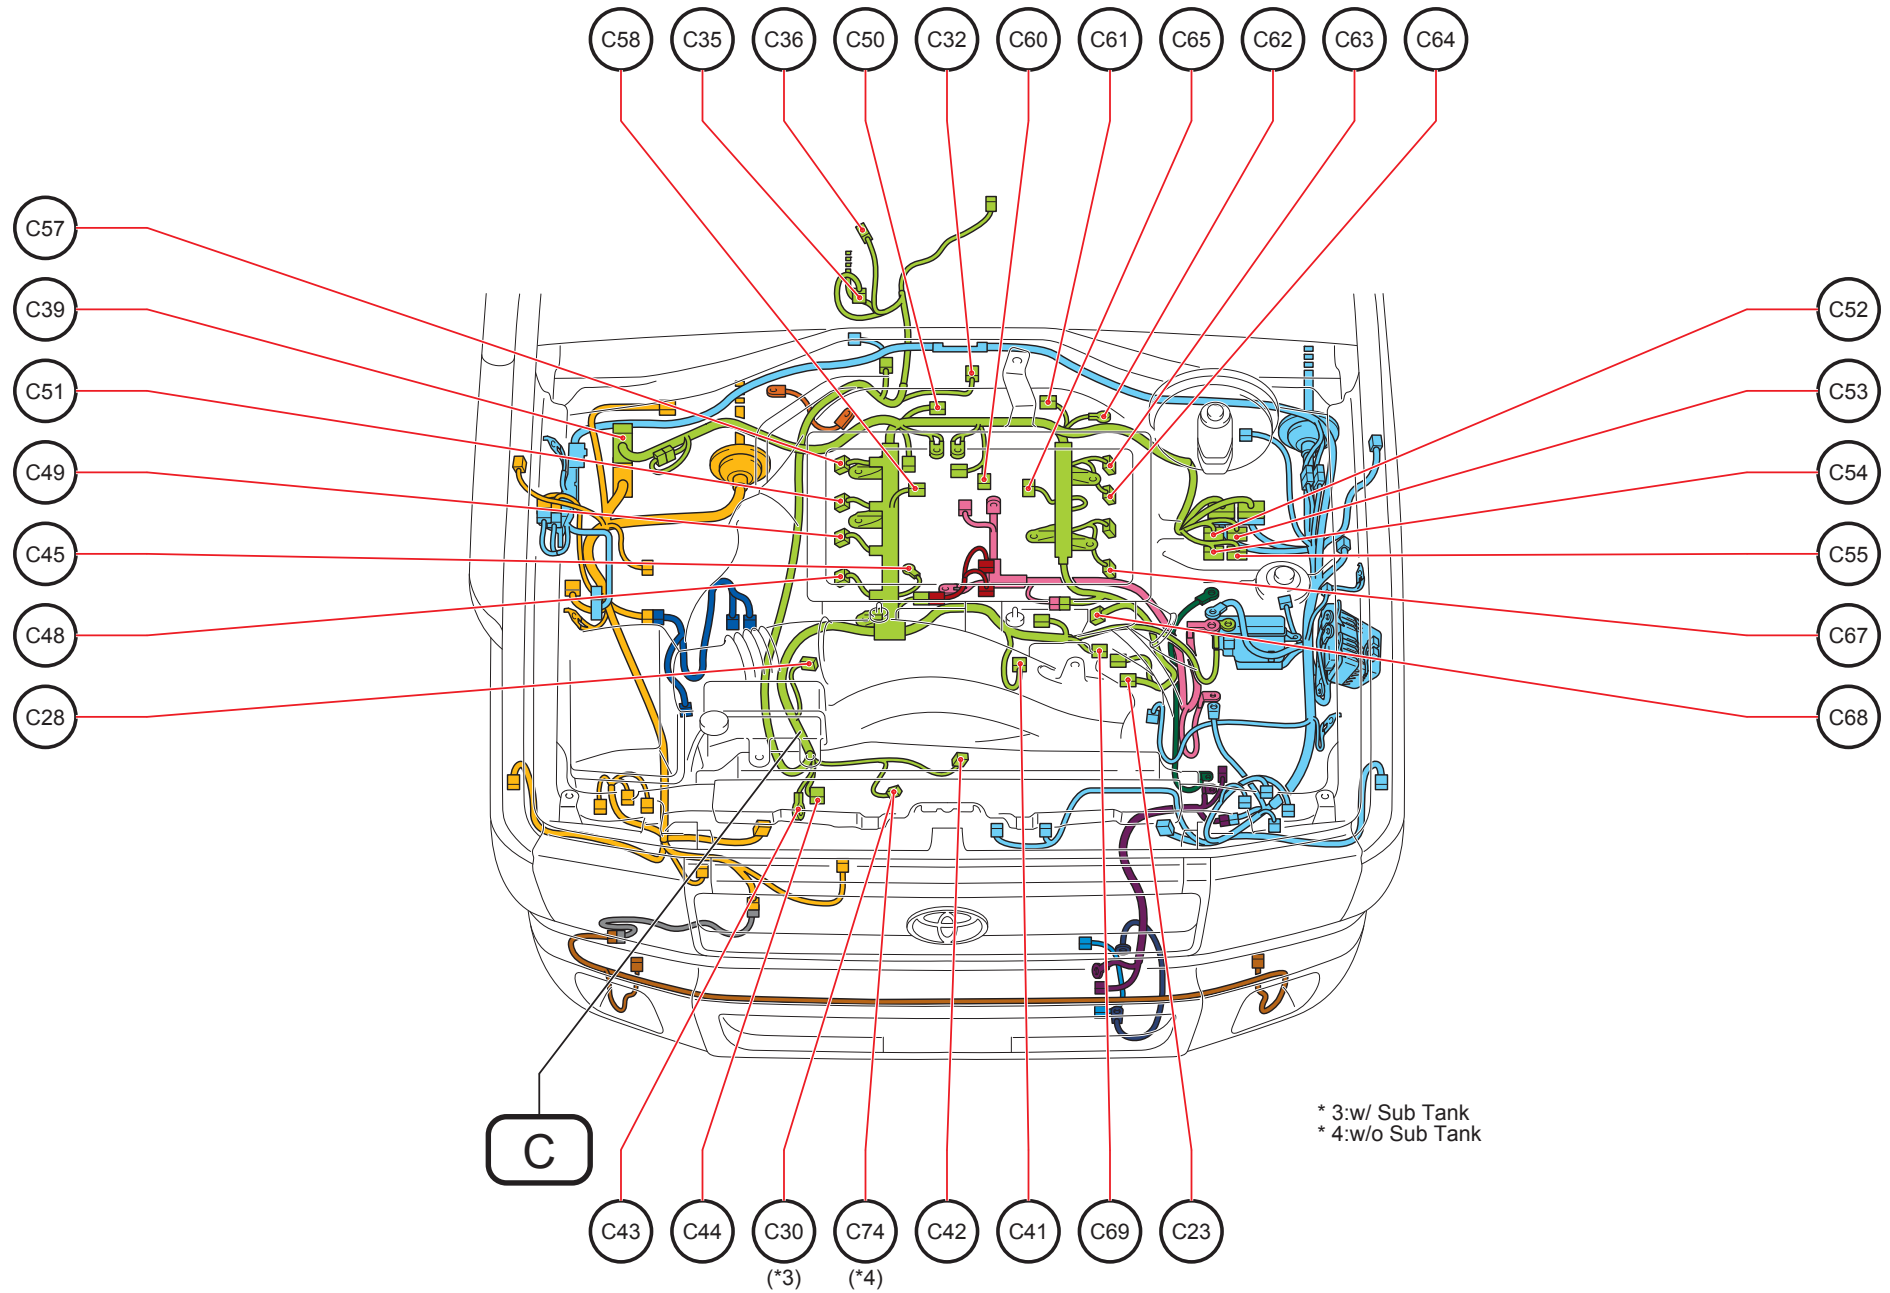


C23	Magnet Clutch Assembly
C28	Power Steering Oil Pressure Switch
C30	Engine Oil Pressure Switch Assembly
C32	Back-Up Light Switch Assembly
C35	Center Differential Lock Indicator Switch (No. 1 Transfer Indicator Switch)
C36	Transfer L4 Position Switch (No. 1 Transfer Indicator Switch)
C39	ECM
C41	Intake Mass Air Flow Meter Sub-Assembly
C42	Crank Position Sensor
C43	Generator Assembly
C44	Generator Assembly
C45	Glow Plug Assembly No. 1
C48	Injector Assembly No. 1
C49	Injector Assembly No. 3
C50	Diesel Throttle Body Assembly (Bank 1)
C51	Injector Assembly No. 5
C52	Injector Driver (EDU) (No. 2)
C53	Injector Driver (EDU) (No. 2)
C54	Injector Driver (EDU) (No. 1)
C55	Injector Driver (EDU) (No. 1)
C57	Injector Assembly No. 7
C58	Diesel Throttle Body Assembly (Bank 1)
C60	Intake Air Temperature Sensor
C61	Diesel Throttle Body Assembly (Bank 2)
C62	Glow Plug Assembly No. 2
C63	Injector Assembly No. 8
C64	Injector Assembly No. 6
C65	Diesel Throttle Body Assembly (Bank 2)
C67	Injector Assembly No. 2
C68	Cam Position Sensor
C69	Diesel Engine Coolant Temperature Sensor
C74	Oil Pressure Sender Gage Assembly


## Position of Parts in Engine Compartment (LHD 1VD-FTV)

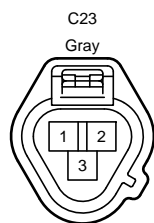


90980-11016




90980-11428

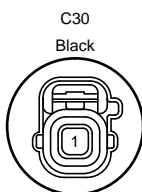


90980-11363

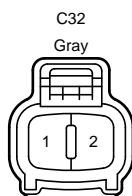


90980-11051

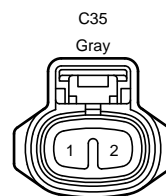


90980-11250

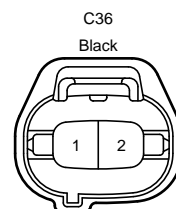


90980-11156

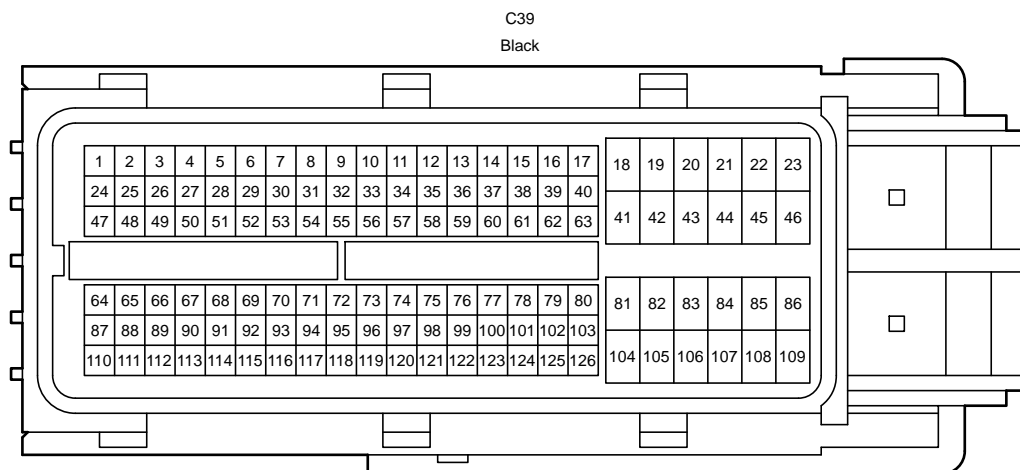



90980-12396

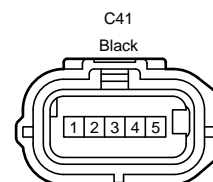



90980-12292

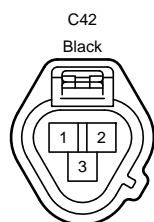


90980-11016

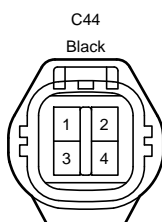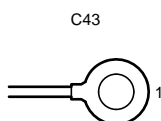


90980-11964

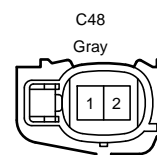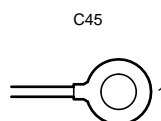


90980-11875

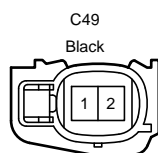


90980-11875

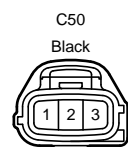


90980-11261

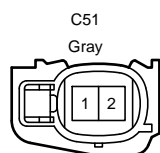


90980-11875

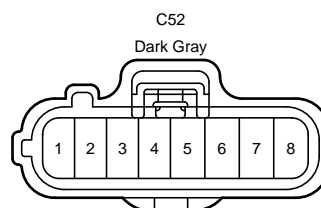


90980-11593

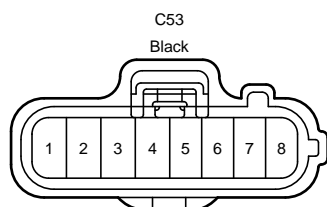

90980-11592

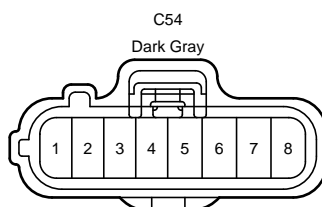

90980-11593

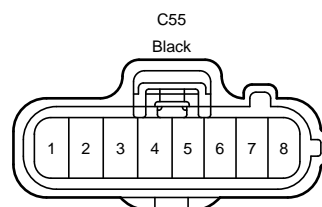

90980-11592

