
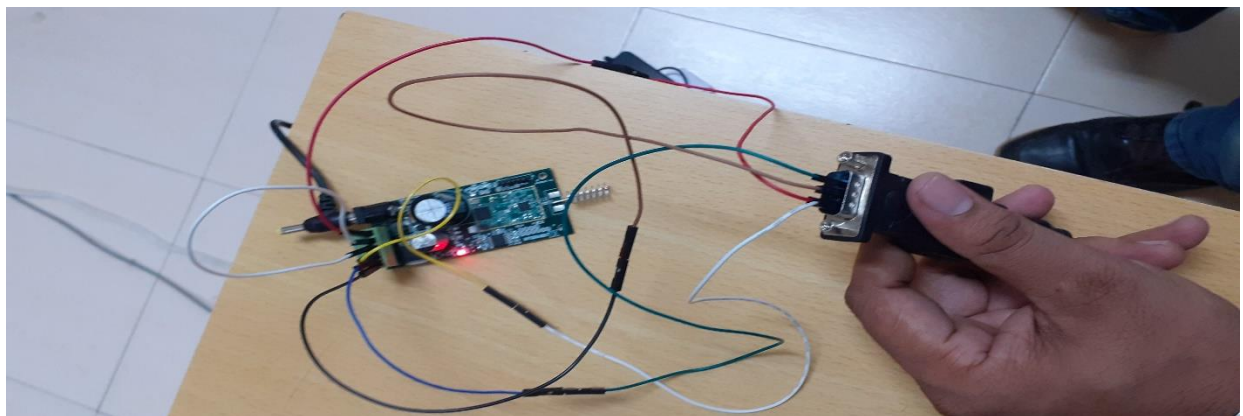


Below is the connection Picture and their Pin diagram of **InterNext RS232 to LoRaWAN convertor** connection with Atmel IC and DB9 serial connector


1. InterNext RS232 to LoRaWAN convertor to DB9 serial connector

DB 9 Pin	InterNext RS232 to LoRaWAN convertor
2 - Rx	2 - Rx
3 - TX	3 - TX
5 - GND	3 /4 - GND
9- VCC(RI)	5 - VCC

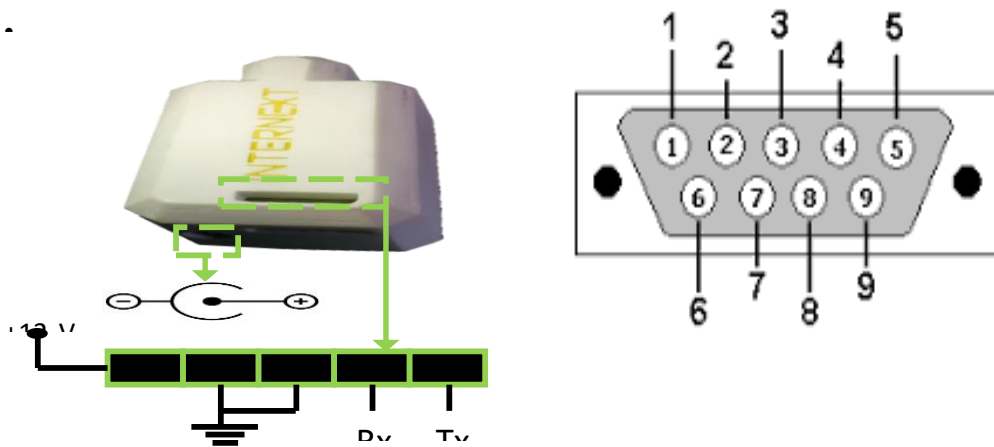

2. InterNext RS232 to LoRaWAN convertor to Atmel IC

The red wire from the SAM pin of Atmel IC should be connected with the 1st pin of **InterNext RS232 module**, We make pin 6 of module as NC.

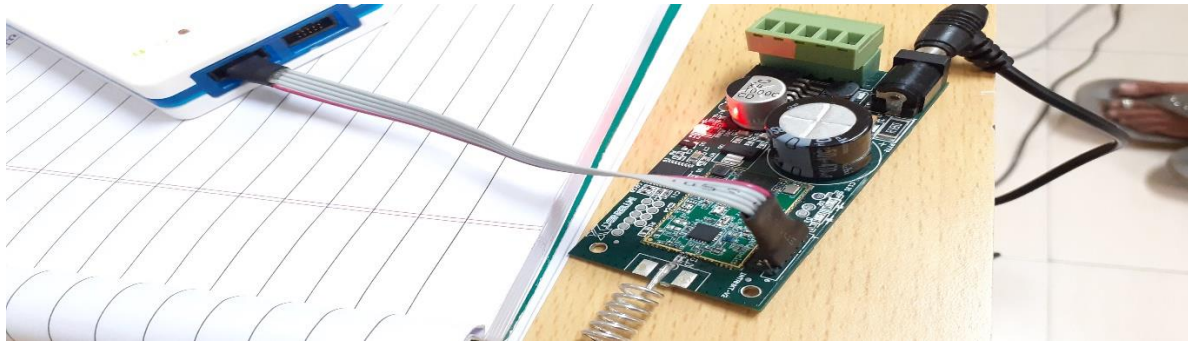

3. connection diagram of SAM & J6 Header for flashing code in the mallet board.

SAM Pin No	J 6 Header Pin No	Pinout Details
10	1	Reset
1	2	Vcc
3	3	GND
2	4	I/O
4	5	Clk

