

To install firmware:

- Download the latest Arduino IDE from <https://www.arduino.cc/>.
- Run the Arduino IDE.
- Install the SoftwareWire library using the library manager (Tools/Manage Libraries...).
- Unzip the firmware.
- In the Arduino IDE, use the File/Open command and browse the unzipped firmware source code.
- Upload the firmware to the Arduino using Sketch/Upload.

To run PC host software:

- Download the latest Processing IDE from <https://processing.org/>.
- Run the Processing IDE.
- Unzip the host software.
- In the Processing IDE, use the File/Open command and browse to the unzipped host software code.
- Run the software using Sketch/Run.