


All-In-One E-BOX User Manual

(AIO_GUI 1.7)


1) E-BOX contains these functions:

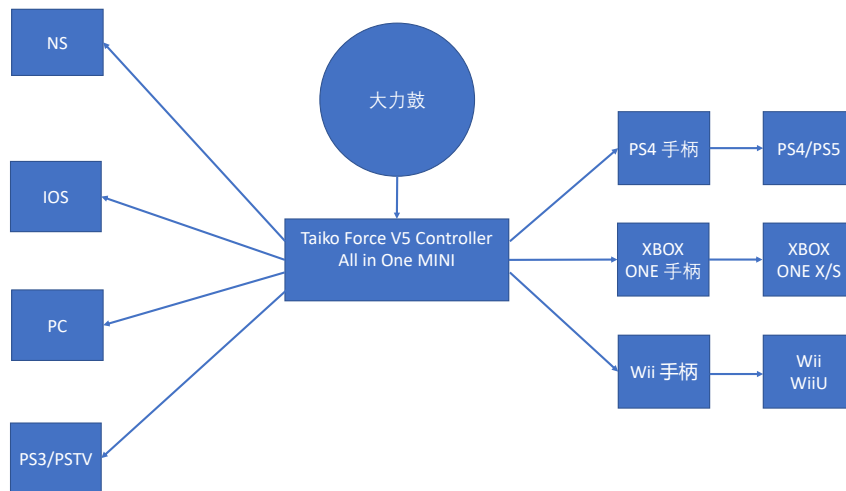

1. Up to 7 platforms support for Taiko Controller, which are Nintendo Switch, Sony PS4/PS5, iOS, PC, Sony PSTV, Wii/WiiU, Xbox One X/S °.
2. In PS4/PS5 mode, you have to plug in original PS4 controller to USB#2 for PlayStation to verify the E-BOX.

In Xbox One X/S mode, you have to plug in a original Xbox One X/S controller still for verification.(Since we only got Xbox Series X Controller, Elite 1 and 2, it' s still unknown for other controllers.)

2) Ports and buttons:

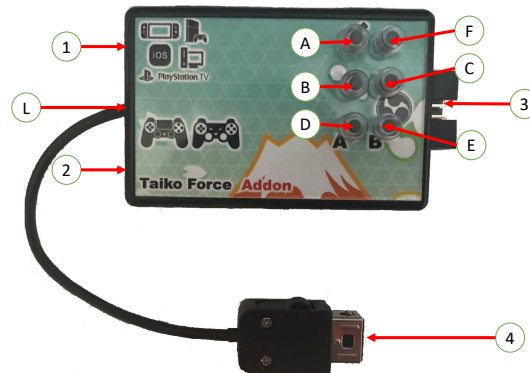

1. Connect NS · PS4/PS5 · IOS · PC · PSTV · PS3 · Xbox One X/S
 2. In PS4/PS5 mode, you' ll have to connect dualshock 4. Please connect this port when it' s off, after connected, ds4 will show up red light. Under Xbox mode, you' ll have to connect a xbox controller. Please connect this port when it' s off, if it worked, the xbox icon will light up. °
 3. Connect Taiko Controller
 4. Connect Wiimote, but you' ll have to power supply USB#1.
- ABCDEF is for changing modes or special buttons,
L meant LED.


3) Mode:

1. Connect USB#1 with consoles or PC, the lights will flick few times and lights up:
Always bright : NS;
Flick 1 time and always bright : PS4/PS5;
Flick 2 times and always bright : iOS;
Flick 3 times and always bright : PC;
Flick 4 times and always bright : PS3/PSTV;
Flick 5 times and always bright : Wii/WiiU;

- Flick 6 times and always bright : Xbox One X/S;
2. Change Mode: Remove cable from USB#1, press the button and connect again, and then check the lights and put off your button, the mode should be changed now. °
- Press A and insert USB#1 = NS;
- Press B and insert USB#1 = PS4/5
- Press C and insert USB#1 = IOS;
- Press D and insert USB#1 = PC;
- Press E and insert USB#1 = PS3/PSTV;
- Press F and insert USB#1 = Wii/WiiU;
- Press A+F and insert USB#1 = Xbox One X/S;

4) Settings :

1. Download App from https://github.com/rayPopo/aio_setting/releases

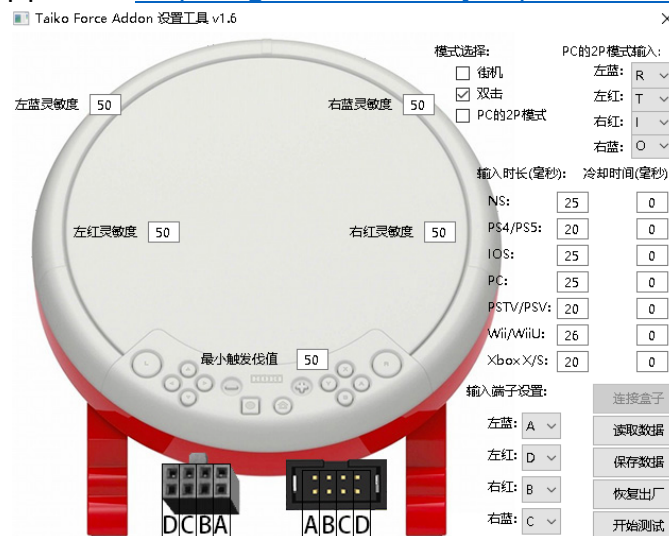

2. Enter setting mode: Press D and insert USB#1 to PC, open up aio_gui.exe.
3. Press [**Connect**] Button(if it shows **Taiko Force Addon not Found**, please check the cable and the LED.)
4. Press [**Read Data**].
5. [**Sensitivity**] for one-side-sensitivity multiple.
6. [**Min threshold**] Sensitivity Settings for 4 sensors at a time.
7. [**Mode**]:
 - Arcade: Different key bindings for NS/PS, unnecessary to check if you don' t know what it does.
 - Double: Checked = You can double hit at one time.
 - PC 2P: In PC Mode, 1P = DFJK; 2P = RTIO ◦
8. [**Input Duration**] : Signal Length for 1 hit, normally needs no changing.



5) PS4/PS5 mode : You have to plug in DS4 to USB#2 !!!



6) iOS : You need an OTA converter.

1. After it' s connected, open taiko+, until the menu shows up like that, you need to press left/right don, and then you can play with your controller.

 






 



















7) Console mode buttons:

Controller/ Buttons	NS	IOS MIDI	PC	PC 2P	PS4/PS3/P STV
Left Blue		0x28	d	r	

		Prev Song			
Left Red		0x26 Next Song	f	t	
Right Red		0x2D OK	j	i	
Right Blue		0x2B OK	k	o	
A					
B			ESC	ESC	
C			UP	UP	
D			DOWN	DOWN	
E			ENTER	ENTER	
F					
A+B					
A+C					
A+D					
A+E					
A+F					

8) Arcade mode buttons:

Controller/Buttons	NS	IOS MIDI	PC	PC 2P	PS4/PS3/PSTV
Left Blue		0x28 Prev Song	d	r	
Left Red		0x26	f	t	

		Next Song			
Right Red		0x2D OK	j	i	
Right Blue		0x2B OK	k	o	
A					
B			ESC	ESC	
C			UP	UP	
D			DOWN	DOWN	
E			ENTER	ENTER	
F					
A+B					
A+C					
A+D					
A+E					
A+F	