



Button Modes

<div>9</div> <div>10</div> <div>4C</div>	Light	<div>9</div> <div>10</div> <div>4C</div>	Operation	<div>9</div> <div>10</div> <div>4C</div>	Music Player	<div>9</div> <div>10</div> <div>4C</div>	Admin
--	-------	--	-----------	--	--------------	--	-------

Operation	Press	Hold
<div>9</div>	Time Travel	Display mode: Pushwheel value
<div>10</div>	Play "key3.mp3"	Display mode: Temperature
<div>4C</div>	Play "key6.mp3"	Display mode: Speed

Music Player	Press	Hold
<div>9</div>	Previous song	Disable shuffle mode
<div>10</div>	Play / Stop	Enable shuffle mode
<div>4C</div>	Next song	Go to song #0

Admin	Press	Hold
<div>9</div>	Volume up	Display IP address
<div>10</div>	Volume down	
<div>4C</div>		Delete static IP and AP password

Special key sequences	TCD
Select pushwheel display mode	8010
Select temperature display mode	8011
Select speed display mode	8012
Select volume level (00 - 19)	83xx
Enable volume knob	8399
Set brightness level (00-15)	84xx
Music Player : Play / Stop	8005
Music Player : Previous Song	8002
Music Player : Next Song	8008
Music Player : Set folder number	805x
Music Player : Shuffle off	8222
Music Player : Shuffle on	8555
Music Player : Go to song 000	8888
Music Player : Go to song xxx	8888xxx
Play "key3.mp3" on SD card	8003
Play "key6.mp3" on SD card	8006
Display current IP address	8090
Restart	8064738
Delete static IP address	8123456

Control through TCD requires BTTFN connection.