



Beeper

Servo 2

Servo 1

(Step D)  
(Dir C)  
(Endstop C)  
(Blue LED)  
Ctrl1

(Endstop D)  
External Reset