

# Edt Alarm

Latitude

Longitude

back to PS  
position as  
current

SYNC TO

Bearing to anchor

in degrees

Distance to anchor

in meters

automatically synchronize ...

Alarm Action

