





Nucleo144 allows disconnection of
MCU AGND from Nucleo GND (SB162).
Use this jumper to connect
MCU AGND to Breakout GND.