

PENTAX PENTAX PENTAX PENTAX
KP K-1 K-1ii 645Z



User

MANUAL

Pentax KP/K1/K1ii/645Z
ASCOM Driver

Richard Romano

July 20, 2025

Revision Sheet

Release No.	Date	Revision Description
Rev. 1.0	7/20/2025	Initial Release

USER'S MANUAL

TABLE OF CONTENTS

	<u>Page #</u>
A. GETTING STARTED WITH SHARPCAP	A-1
1.1 Driver Installation	A-1
1.2 SharpCap Installation and First Steps	A-2
1.3 SharpCap Focuser Installation	A-6
1.4 Live View With SharpCap	A-7
1.5 Bulb Mode With SharpCap	A-7
B. GETTING STARTED WITH N.I.N.A.	B-8
2.1 Driver Installation	B-8
2.2 N.I.N.A. Installation and First Steps	B-9
C. TROUBLESHOOTING	C-1
3.1 Logging On.....	C-1
3.2 System Menu.....	C-1
3.2.x [System Function Name]	C-1
3.3 Changing User ID and Password.....	C-1
3.4 Exit System.....	C-1
A. Appendix.....	C-1
B. Appendix.....	C-2


A. GETTING STARTED WITH SHARPCAP

1.1 Driver Installation

Download and install ASCOM. You should get this version if possible:
ASCOMPlatform702.4675.exe

From:
<https://github.com/ASCOMInitiative/ASCOMPlatform/releases/download/v7.0.2/AscomPlatform702.4675.exe>

Next, download and unzip the Pentax KP ASCOM Driver:
[Releases · richromano/ASCOMPentaxCameraDriver](#)

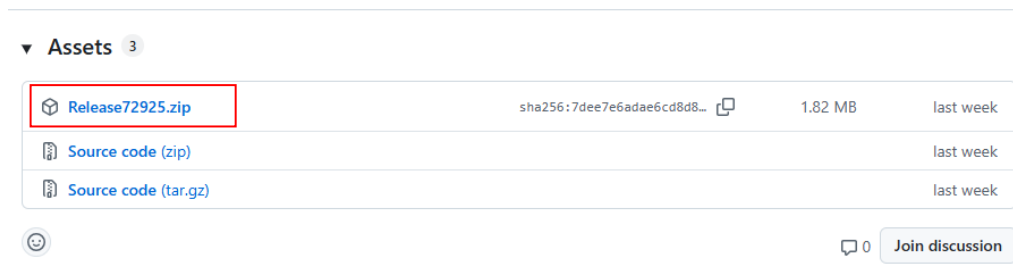

Place the latest release to a long term location. This is the location the software will run from. Run install.bat by double clicking on it.


ASCOM.PentaxKP.Camera.tlb	7/30/2025 8:26 PM	TLB File	43 KB
ASCOM.PentaxKP.Camera.dll	7/30/2025 8:25 PM	Application extens...	420 KB
ASCOM.PentaxKP.Camera.pdb	7/30/2025 8:25 PM	Program Debug D...	116 KB
RicohCameraSDK.dll	7/28/2025 5:32 PM	Application extens...	203 KB
uninstall	7/13/2025 5:12 PM	Windows Batch File	1 KB
install	7/13/2025 5:11 PM	Windows Batch File	1 KB
ASCOM.PentaxKP.Camera.dll.config	6/15/2025 10:22 AM	VisualStudio.conf...	1 KB
libraw.dll	6/4/2025 12:05 AM	Application extens...	1,005 KB
ASCOM.Exceptions.dll	11/28/2024 5:47 AM	Application extens...	27 KB
ASCOM.Utilities.dll	11/28/2024 5:46 AM	Application extens...	1,184 KB
ASCOM.Internal.Extensions.dll	11/28/2024 5:46 AM	Application extens...	20 KB
ASCOM.SettingsProvider.dll	11/28/2024 5:46 AM	Application extens...	147 KB
ASCOM.DeviceInterfaces.dll	11/28/2024 5:46 AM	Application extens...	57 KB
ASCOM.Controls.dll	11/28/2024 5:46 AM	Application extens...	40 KB
ASCOM.Attributes.dll	11/28/2024 5:46 AM	Application extens...	18 KB
ASCOM.Astrometry.dll	11/28/2024 5:46 AM	Application extens...	484 KB
ASCOM.Utilities.Video.dll	11/28/2024 5:46 AM	Application extens...	31 KB
ASCOM.DeviceInterfaces	11/28/2024 5:14 AM	Microsoft Edge H...	1,674 KB
ASCOM.Astrometry	11/28/2024 5:14 AM	Microsoft Edge H...	907 KB
ASCOM.Exceptions	11/28/2024 5:14 AM	Microsoft Edge H...	45 KB
ASCOM.Utilities	11/28/2024 5:14 AM	Microsoft Edge H...	325 KB
ASCOM.Attributes	11/28/2024 5:12 AM	Microsoft Edge H...	5 KB
ASCOM.Controls	11/28/2024 5:12 AM	Microsoft Edge H...	28 KB
ASCOM.SettingsProvider	11/28/2024 5:12 AM	Microsoft Edge H...	10 KB
ASCOM.Internal.Extensions	11/28/2024 5:12 AM	Microsoft Edge H...	7 KB

1.2 SharpCap Installation and First Steps


Download and install Sharpcap 64bit:

<https://d.sharpcap.co.uk/download.html?version=4.1.13484.0&arch=x64>

 
Turn on your camera and make sure the USB mode is set to MTP/PTP mode. Set the Camera to M mode. You can set the shutter to Electronic Shutter if desired. Connect your camera to the computer and make sure it is recognized as a camera.





Open Sharpcap. Select the Camera menu and you should see Pentax KP/K1/645Z.

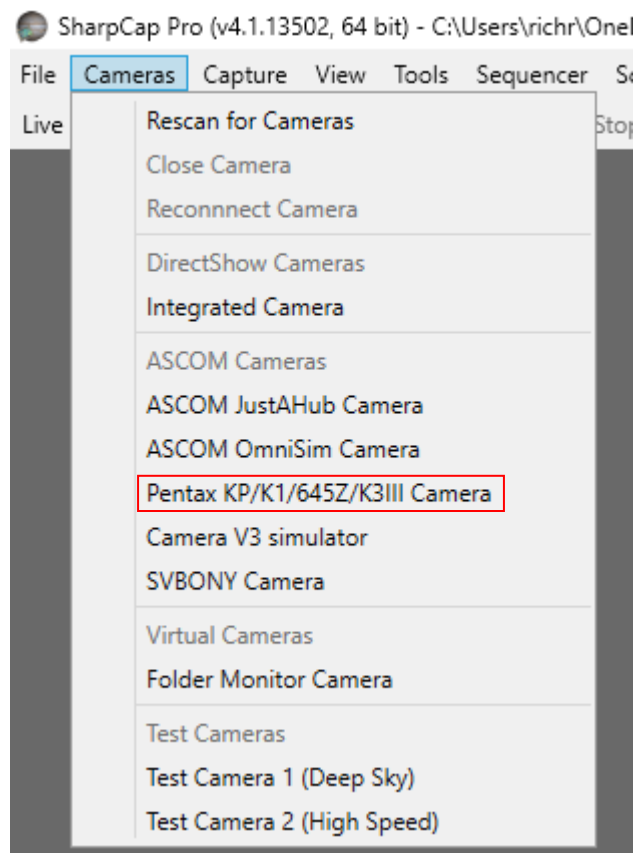


Select Pentax KP/K1/645Z and a dialog box should show up. Inside the dialog you should see a drop down where you can select your Camera.

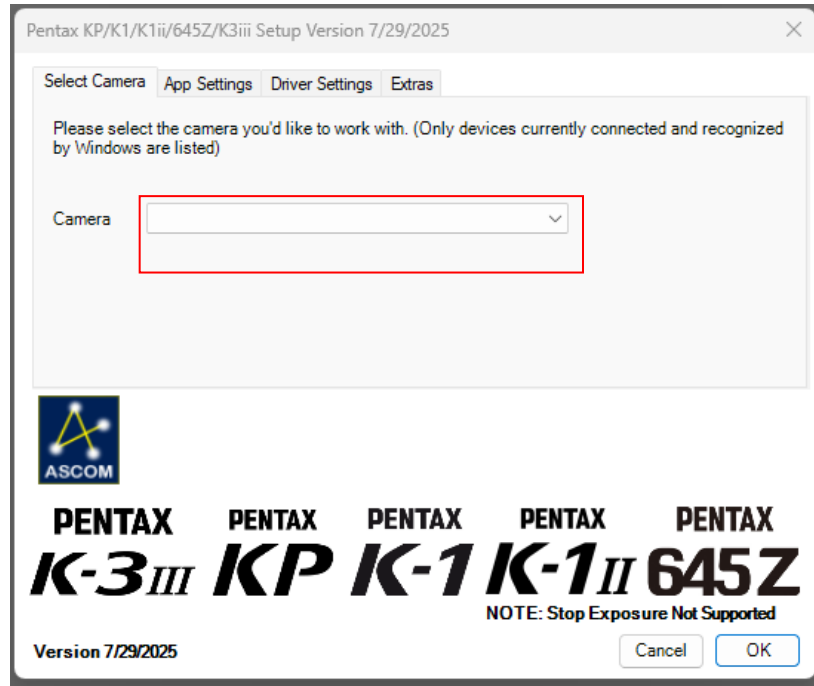

You can review each of the other settings pages as shown here. However, you should just accept the default settings given when you first install (the defaults are shown again here in case you want to reset them). Then press OK.

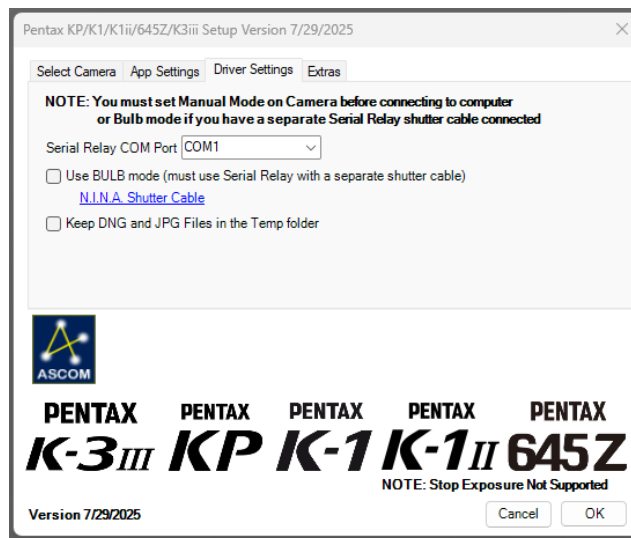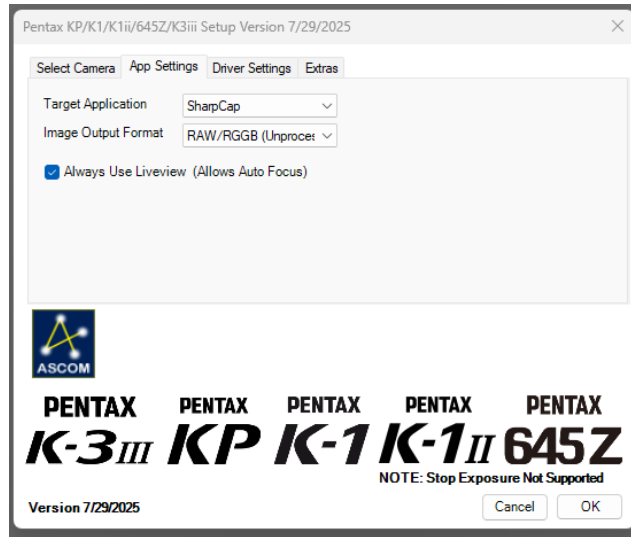

After pressing Okay, you should see the following Window.

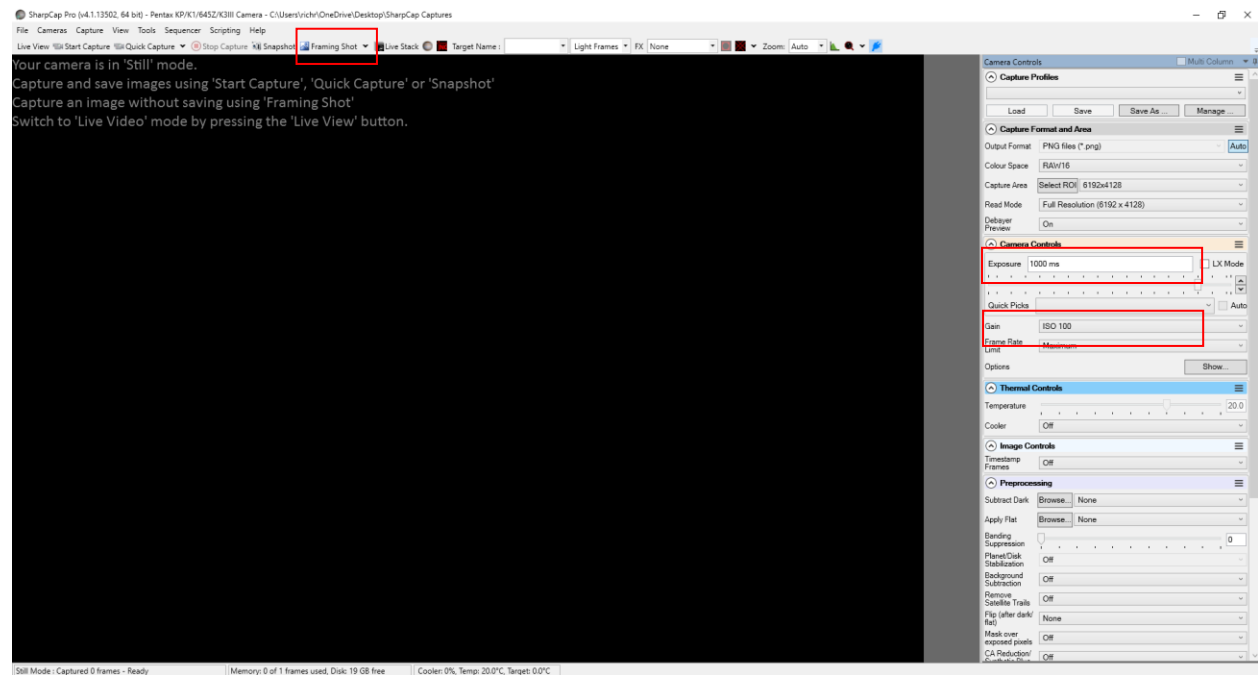


Take a picture by pressing the Framing Shot button. This should show an image. You can adjust the gain and the ISO using the other two buttons. You can then take more framing shots.


1.3 SharpCap Focuser Installation

There is a Pentax Focuser that is included in the driver installation. In SharpCap select the File-> SharpCap Settings. You will see the following:

First select the Hardware pane and then in the drop down menu in the Focuser pick the Pentax Focuser. There are no Properties to set and you can leave the other values at their defaults. SharpCap will automatically connect the focuser when the Camera is opened. (You must close and reopen the camera to connect the first time).

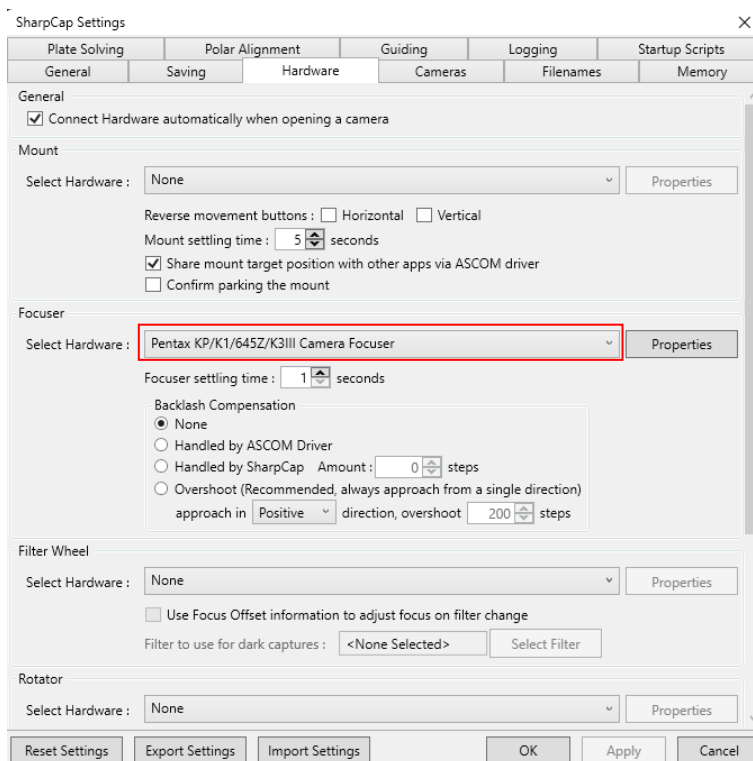

With the Focuser connected you will see an extra window in the lower right corner of SharpCap. You can control the Focuser manually from there. There are also several ways to automatically focus the camera. For the Focuser to work you need to have the camera in AF mode with an autofocus lens.

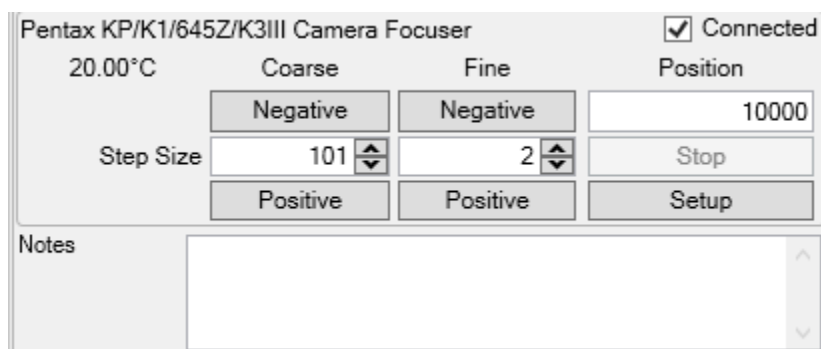

1.4 Live View With SharpCap

1.5 Bulb Mode With SharpCap

