

Instructions for The Puck

- 1) After removing the original belt hook screws, you may wish to clean the holes gently with a cotton swab, toothpick, etc.
- 2) The flat head screws are for attaching the belt hook to the belt-hook adapter. This may be easier to do while the adapter is attached to the Puck. **Important:** The thumb screw needs to be in place before attaching the belt hook, or else you'll need to undo the belt hook screws to be able to put it in. There is a small flat washer and a retainer washer on the thumb screw.
- 3) The three barrel-head screws (2 large and 1 short) are for securing the Puck on the instrument, using the largest and smallest Allen wrenches. After initially inserting screws and giving a few turns, gradually tighten screws a bit at a time, going from screw to screw. If you screw in either side all the way from the beginning without the other side, the Puck may tilt too much to be able to add the other screw(s). Make sure the Puck is secure, but be careful not to overtighten the screws.

Once the Puck is attached to the Stick, you can either attach it to an NS stand via the center hole on the Puck, or remount the belt hook to the Puck with the thumb screw.

