


Default config is
for Receive(slave) mode.

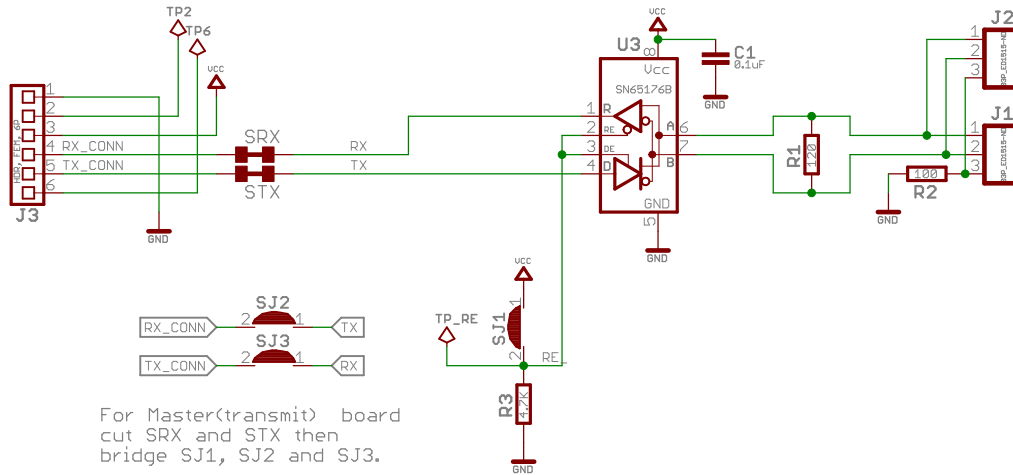

For Master(transmit) board
cut SRX and STX then
bridge SJ1, SJ2 and SJ3.