

DVL-A50 details

Axis conversions


The axis on the DVL-A50 are oriented North-East-Down (NED)

- X axis is pointing forward (LED is forward, cable backward)
- Y axis is pointing right
- Z axis is pointing down (mounting holes are up, transducers are down)

Transducer numbering



Transducer beam width

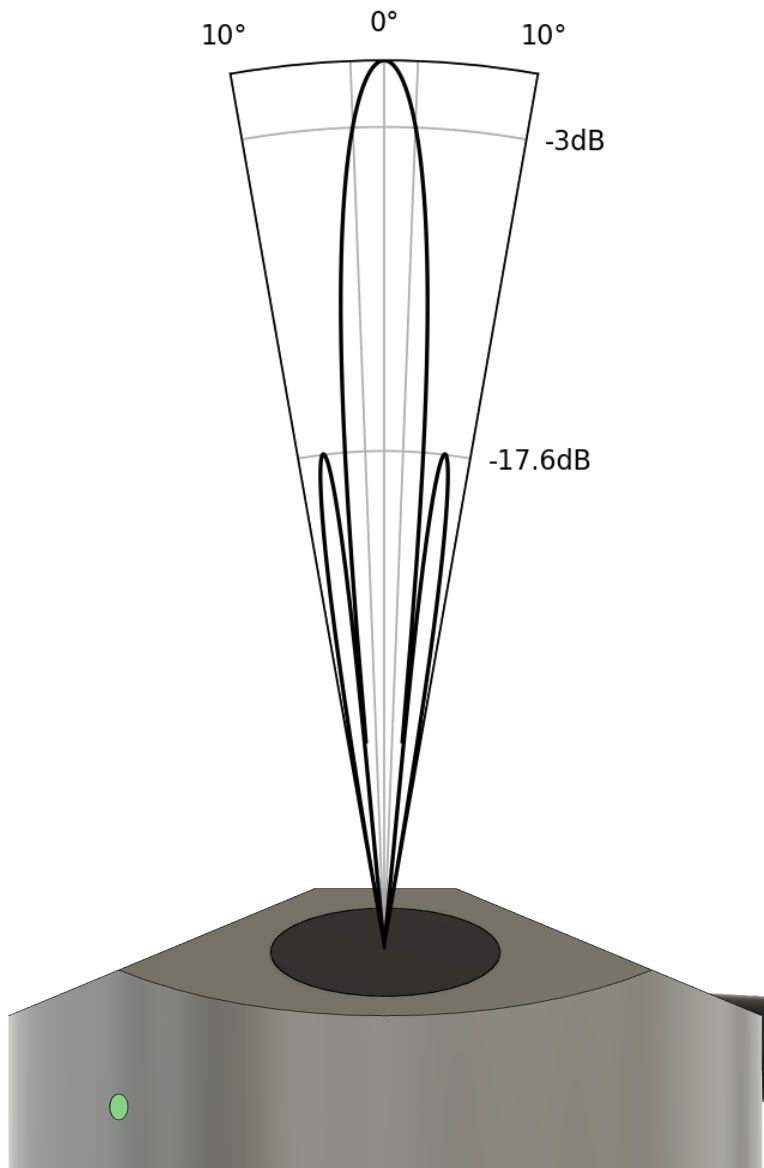

Half-power beam width is 4.4°

Line of sight



Ethernet Interface

The DVL has a few services available on ethernet:

- Multicast DNS (mDNS) for easy discovery
- Web gui for easy setup and diagnostic
- TCP low latency velocity updates
- Updater for software upgrades

Multicast DNS (mDNS)

Factory default for the DVL is to operate a DHCP client. This means it will attempt to obtain an IP address from a DHCP server on the same network. For convenience the DVL supports mDNS to easily discover the assigned IP address. The mDNS name used for the DVL is: `waterlinked-dvl`.

Note

If no DHCP server is available on the network, it is recommended to configure a static ip address as the DVL can use up to 5 minutes searching for a DHCP server.

Web GUI

On operating systems supporting mDNS you can open the web GUI via the following URL: <http://waterlinked-dvl>. If mDNS is not supported you need to obtain the IP address of the DVL and use that in your browser (http://IP_ADDRESS).

The web GUI shows the status of the DVL (velocity and altitude) as well as diagnostic information. The web GUI also allows for network configuration.

Network configuration

The DVL has two IP configuration options through the web GUI:

- DHCP client, where it obtains an IP address from a DHCP server on the same network.
- Static mode where the user sets the wanted IP address for the DVL.

Once the IP configuration is modified the DVL needs to be rebooted for the settings take effect.



Note

The boot time, i.e. the time it takes from the DVL-A50 receives power until it starts operating normally, will vary based on the network configuration. Using the [fallback IP](#), the boot time can be as much as 1 min 30 sec. The lowest observed boot time is 20 sec with static IP.

TCP Output

The DVL supports sending measurements updates using the Transmission Control Protocol (TCP). A TCP server is available on port **16171** which outputs the latest measurements to all the connected clients. In the web GUI you can see the number of connected clients and the format of the output message. See [description of the output protocol](#).

Software update

To get the best performance of the DVL it is recommended to always run the latest software. The update GUI can automatically check if a new software version is available.

Automatic software update

The easiest way of checking if a new version is available is to connect the DVL to the internet and let the upgrade GUI automatically check for a new version:

- Connect the DVL ethernet to a network where the internet is available and make sure the DVL network configuration allows access to the internet.
- Go to <http://waterlinked-dvl:9000> or http://IP_ADDRESS:9000.
- The upgrade GUI will automatically check if there is a new version available and allow installation of new upgrade with a single click.

Offline software update

If you are unable to connect the DVL to the internet, offline software update is available. The process is:

- Find the current version and chipid in the the "about" section of the DVL web gui
- Manually download an upgrade package (.wlup) from [the update server](#) using the chipid.
- Verify if the version downloaded is newer than the currently running version
- Go to <http://waterlinked-dvl:9000> or http://IP_ADDRESS:9000.
- Select "manual upload" and then upload the downloaded file.

Fallback IP

For convenience the DVL will always be available with the static IP address: **192.168.194.95**. To be able to connect to the DVL using the fallback IP address perform following steps:

- Connect a ethernet cable directly from the DVL to your computer.
- Set static IP on your computer to be **192.168.194.90**
- In a web browser open `http://192.168.194.95`