

Logitech Wireless Gamepad F710 Setup Memo

How to use the pad

- SWITCH D/X
 - D - 6 axes - for teleop manual joy2twist
 - X - 8 axes - not used
- MODE Led
 - Off - axes 0 & 1 active for left stick - for teleop
 - On - axes 4 & 5 active for left stick - not used
- Turtlebot Logitech teleop
 - **LB button** - for **dead man** - **always activate** to perform movement



More infos:

<http://gaming.logitech.com/en-us/gaming-controllers/f710-wireless-gamepad>

http://support.logitech.com/en_us/product/wireless-gamepad-f710

<http://support.logitech.com/article/21360>

How to setup the pad

- Connect the Joystick Wireless Dongle to the workstation.
- Configure the Joystick in Linux ubuntu with the help of the following instructions :
 - <http://wiki.ros.org/joy/Tutorials/ConfiguringALinuxJoystick>
- Start the *joy_node* and check the values of the */joy* topic axes values.