


# User Manual-Cell Phone Control

## 1. Basic Working Principle

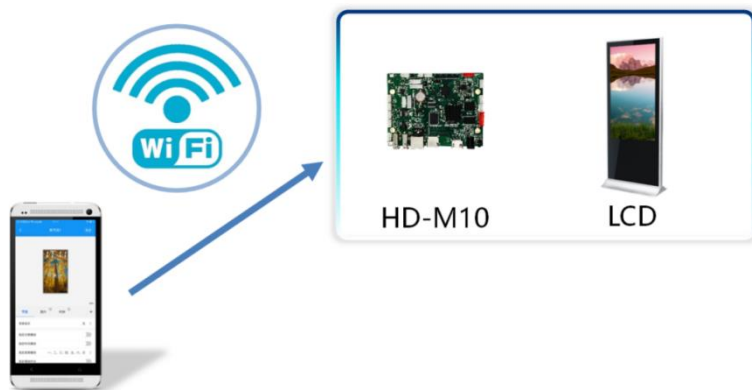

## 2. "LedArt" Software Installation And Send Program On Cell Phone

2.1 You can scan below QR code to download and installation, choose suitable apk for your phone




2.2 You can also search and install for "LedArt" downloads in Google Play Stores, choose suitable apk for your phone


### 2.3 Create And Make Program

Step1 Wi-Fi connection (Find device) : Press the "menu" on the remote control, select Wi-Fi hotspot, and turn on Wi-Fi hotspot


Note: If you use a network cable to connect to the LAN, skip this step.

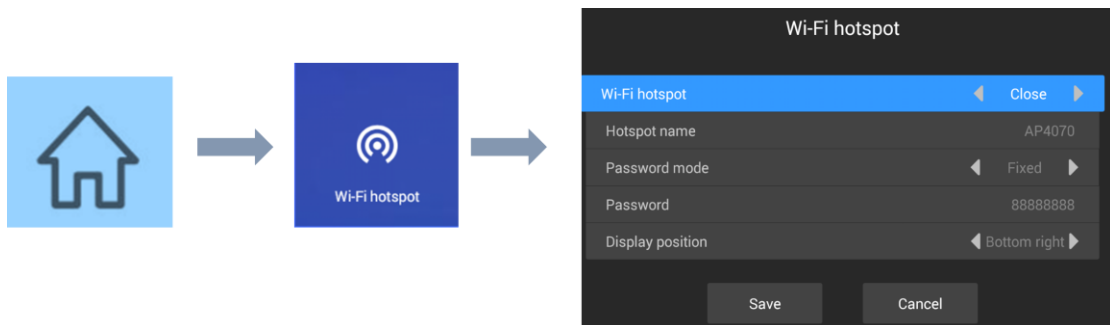


Step2 Open "LedArt" software, select the "Device" module, click "Find Machine", and then connect the corresponding Wi-Fi hotspot. As shown below

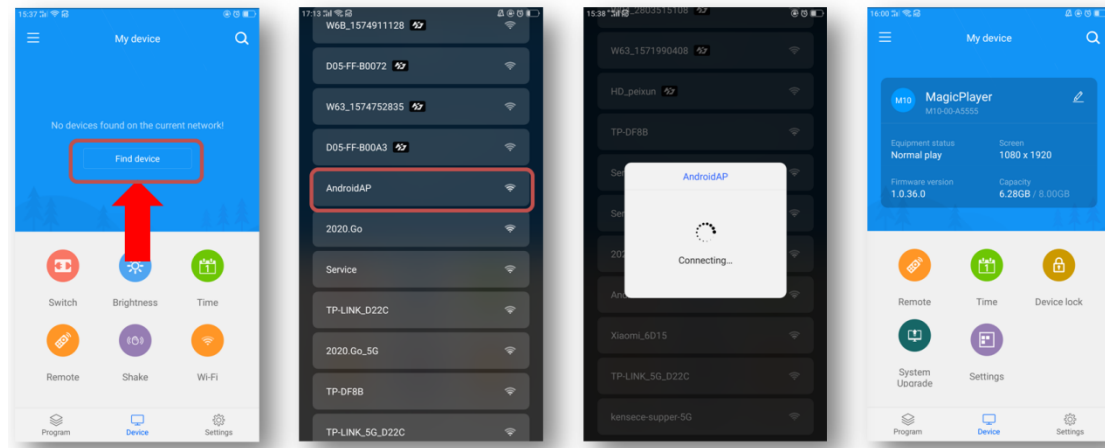

You can also connect to a Wi-Fi hotspot in your phone's "Settings" WLAN, as below pic

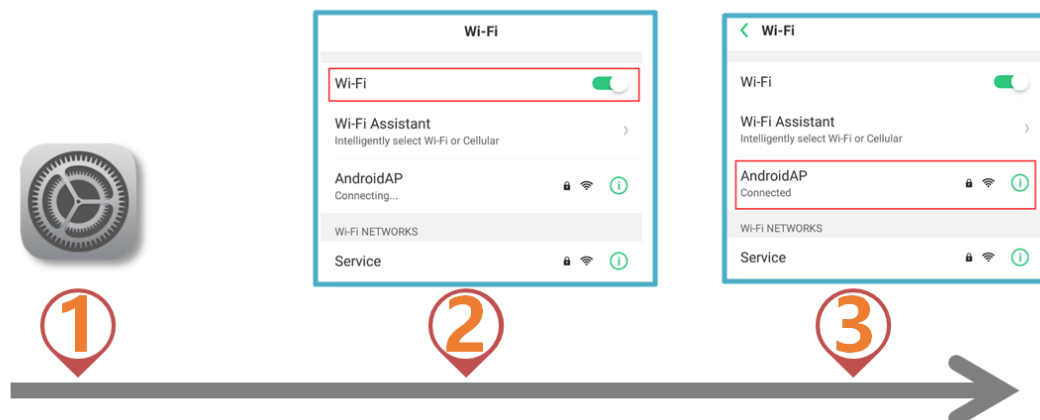

Step3 Select the "Programs" module, click "New Display", it will automatically search the LCD screen, select it and confirm, the system will recognize the LCD screen size by default, and click "OK", The new program will be created.

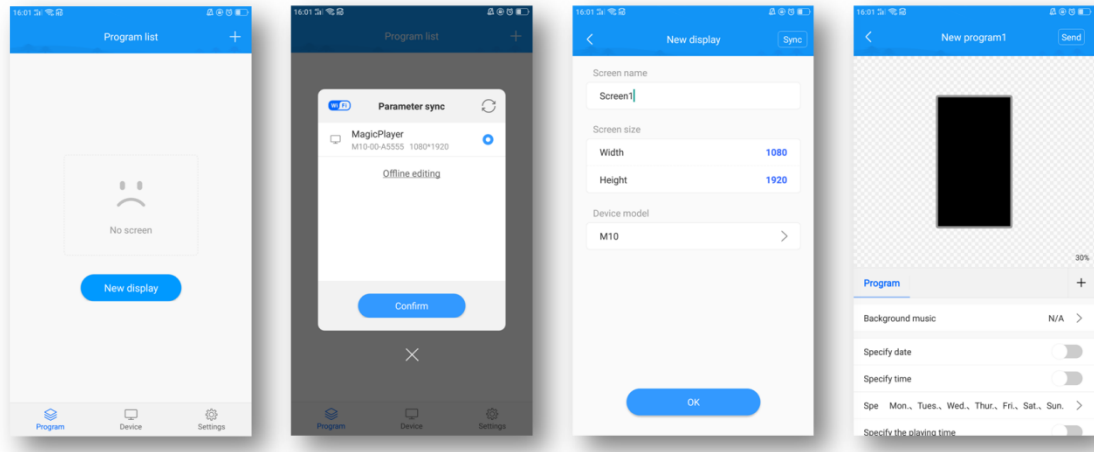


Note: If there is no online LCD screen, you can edit offline and customize the screen width and height.

#### Step4 Choose Material Which You Want

##### ①Add video


Click the "+" on the right, choose "add video", you can enlarge the video area in the display area. You can click the "+" below to add multiple videos; The videos will be played in a loop

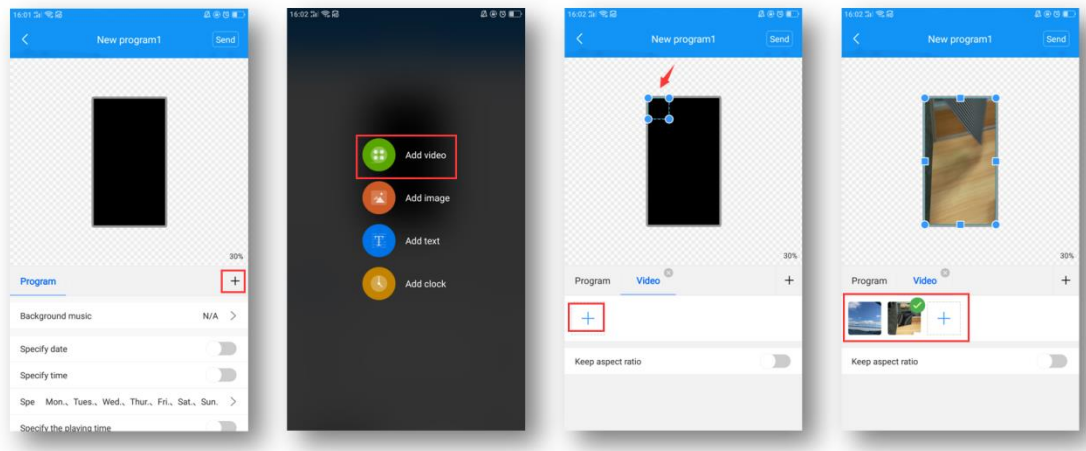

##### ②Add Image

Click the "+" on the right, choose "add image", you can enlarge the image area in the display area. You can click the "+" below to add multiple images; The images will be played in a loop


Note: After add a picture, you can modify the picture display duration, animation effects, and display effects below the picture list.

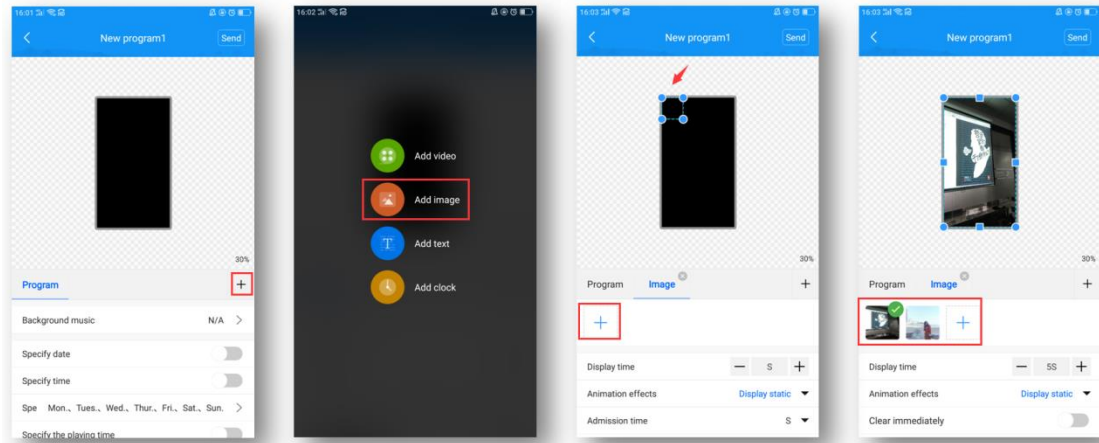

### ③Edit Text

Click "+" on the right to add a text area, then enlarge the text area in the simulation display area, and then enter the text to be played in the text input box below


Note: Below the text input box, you can modify the font type / size / color, text display duration, animation effects, and background color (swipe up to see)

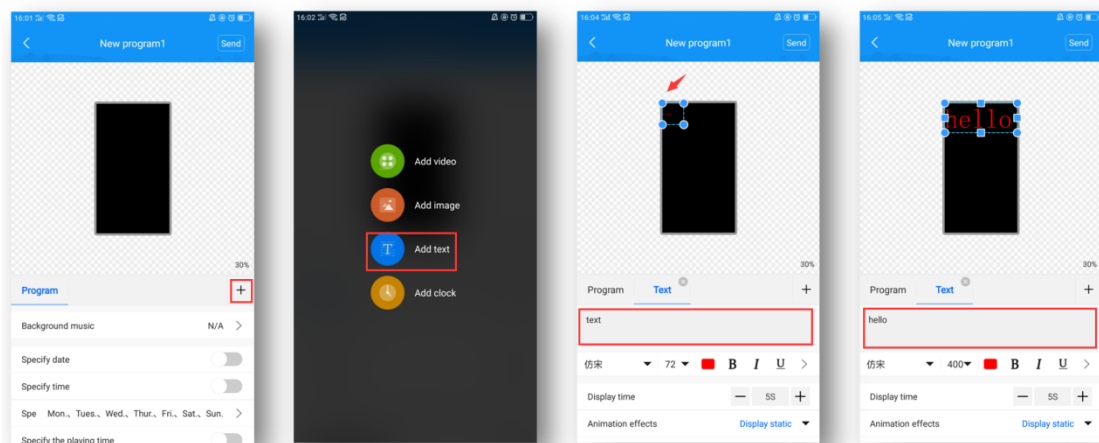

### ④Time display


Click the "+" on the right to add the clock area, and then enlarge the clock area in the analog display area. The clock text size is automatically adjusted according to the height of the area

Note: you can choose to display seconds, modify font color, and stroke in below of Clock

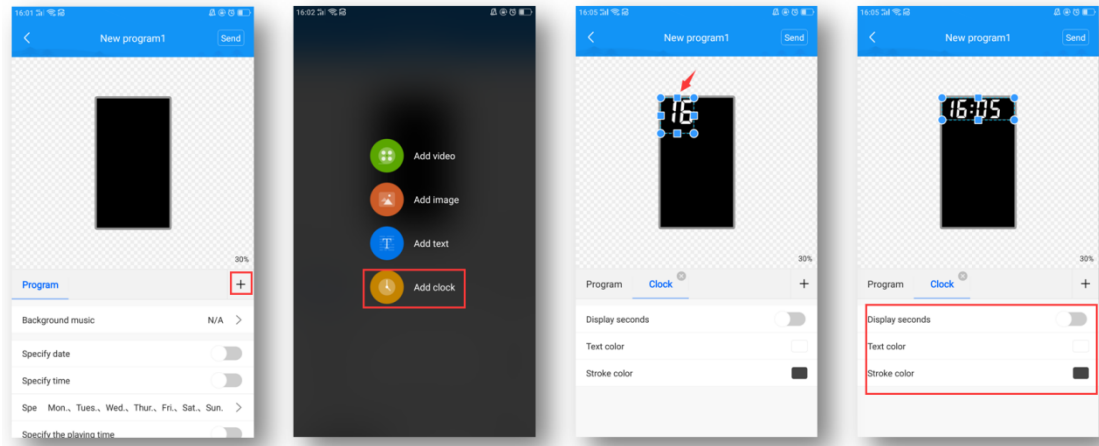

### ⑤Layer Overlay Setting

The bottom layer is added first, and the overlays added later are displayed on top. As shown in the figure below, the picture area is superimposed on the video area to play, and the text area is superimposed on the video and picture area to play

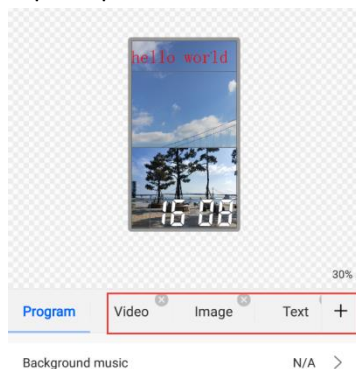


Features:

- 1) Each area can be enlarged and reduced and dragged arbitrarily;
- 2) The background of text and clock is transparent by default, so you can add video / picture as the background of text / clock first;
- 3) Only supports adding 2 video areas at the same time, that is, supporting 2 videos playing at the same time.


### ⑥Other Available Settings

Select "Program" on the left side of the program editing interface, and you can set the background music, broadcast date, broadcast time, broadcast week, and broadcast duration of the program

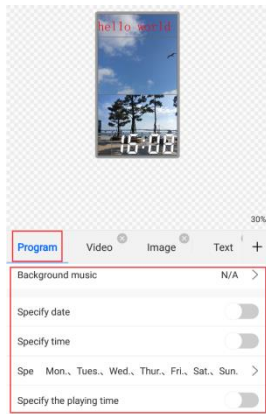


### Step5 Send program

①One Program: after created the program, click "Send" in the upper right corner to send the program to LCD screen

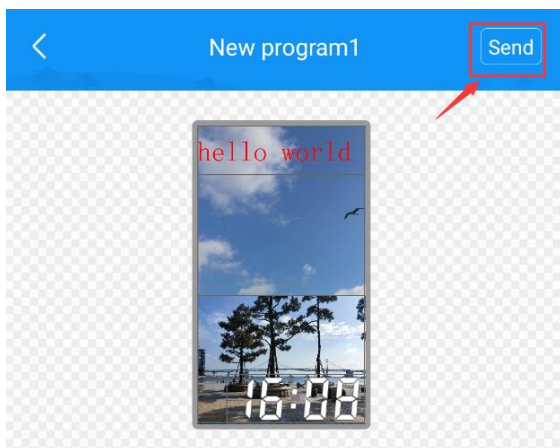

### ②Multiple Program



Exit the program interface and return to the program list. You can add and send multiple programs to LCD screen, as below

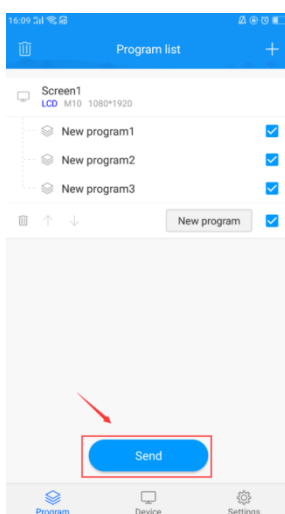

## 3. Other Setting for your reference



### 3.1 Remote control

Select the "Device" module and click "Remote", you can use the remote control functions-switch on / off, previous / next program, pause / play, adjust volume and adjust brightness, etc

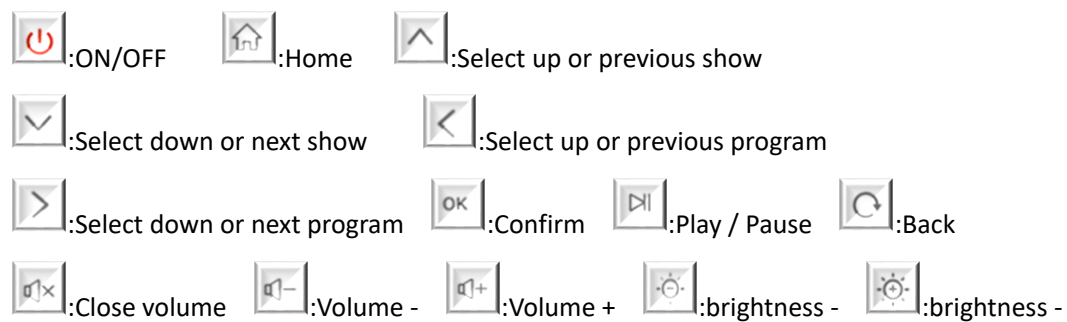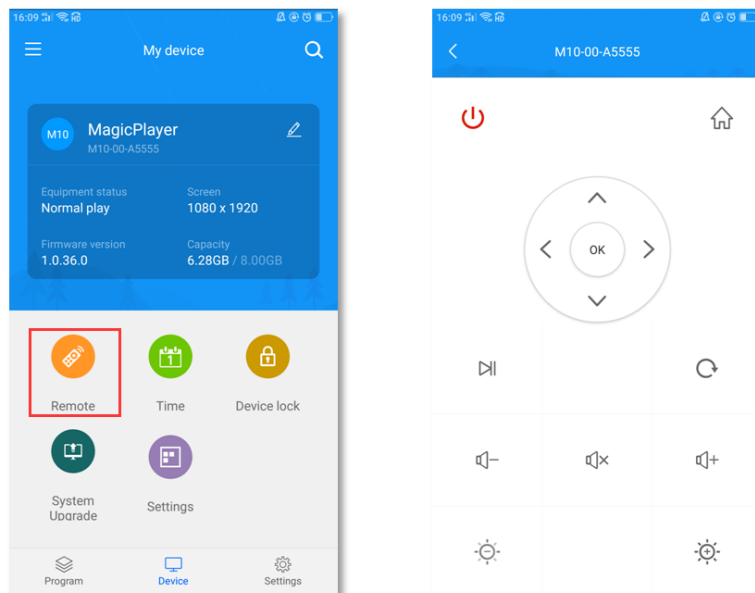

### 3.2 Time correction

Select the "Device" module and click "Time Correction" to correct the time

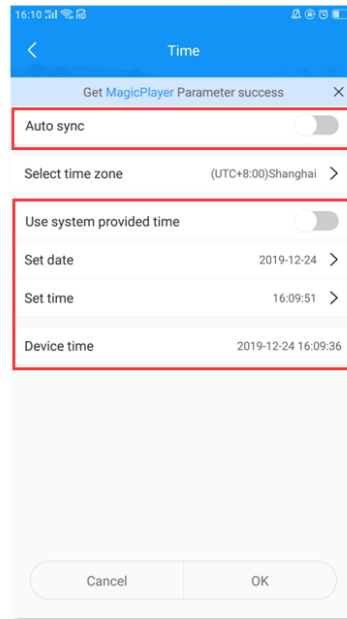
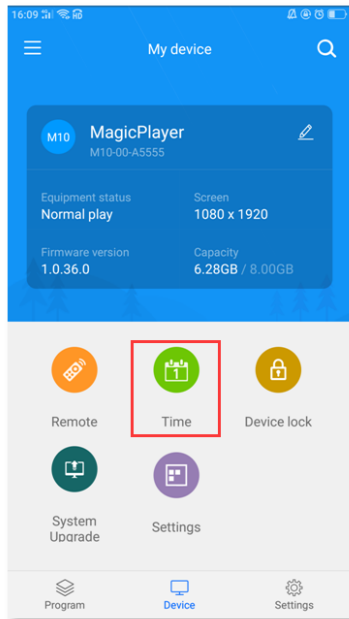


Note: There are 3 modes for option

- 1) Automatic synchronization, if the controller is connected to the Internet, turn on this setting, the time can automatically synchronize the Internet time
- 2) Use the date and time of your phone to synchronize the time on your phone
- 3) When neither of the above 2 setting items is enabled, you can manually modify the time

### 3.3 Device lock

Select the "Device" module and click "Device Lock" to turn on the device lock. Each time you send a program, you need to enter the correct password to send it

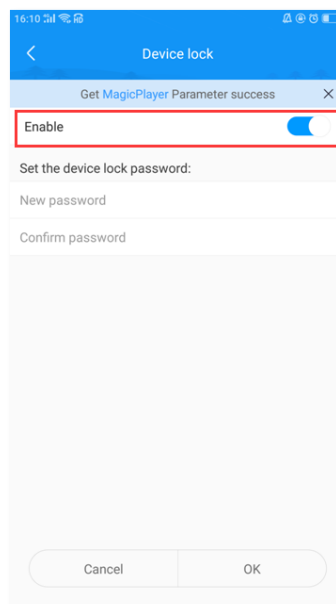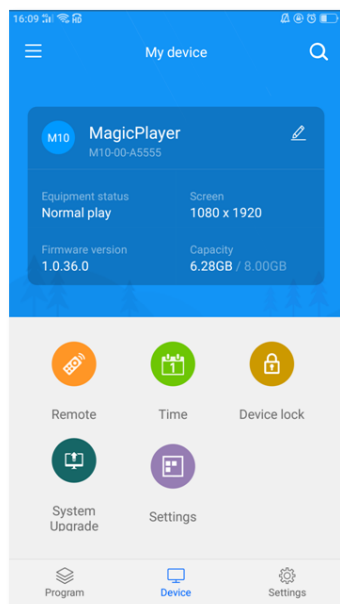


### 3.4 System Upgrade



Select the "Device" module, click "System Upgrade", and select a version to upgrade the controller system


Note: The version needs to be downloaded in "Download Management" in the "Settings" module.  
(Mobile phone needs internet)

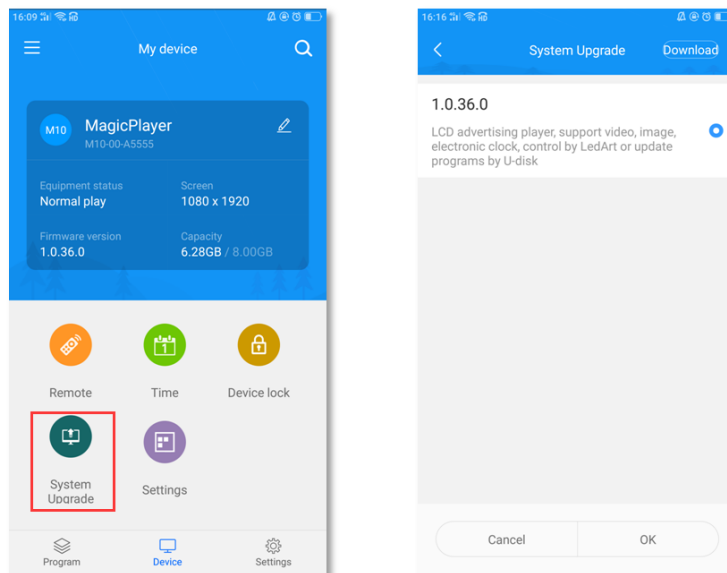

### 3.5 Screen parameter settings

Select the "Device" module, click "Screen Parameter Setting", select a parameter, and import the parameter into the controller

Note: The version needs to be downloaded in "Download Management" in the "Settings" module.  
(Mobile phone needs internet)

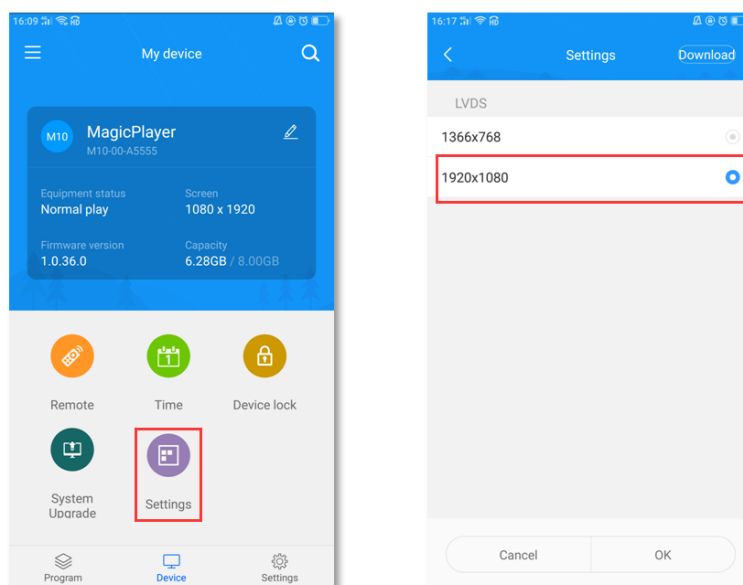

### 3.6 Other Settings

Select the "Settings" module to modify APP language, firmware management, hardware settings, and view Wi-Fi password records

