

]uÖ^uÜ]
]5Ö]2 ×x]U
2 :]uÖ^uÜ '^
] Ñ^ è^EÜ 12 ^

]ÖÜ]•à]e
Mettler Toledo :]ðè^eÜ]Ö
electronic :^...Ü^•Ü]á
5675 :]ðè^eÜ]•è]
]"%ç - :]Eá]áé
- :^×Ö^uÖ]Á
- :)d(^×Ü^•Þ]á (
- :)e(]ÄÖ]•Ü]Ä (
- :^uÖ]•Ö ^×
13.1.26 :]Eç]•Ó] Ü
13.1.27 :]EÐ] Ö]Eç

ACCURACY OF READING AND ZERO DEVIATION					
LOAD MASS	UP LOAD READING	UP LOAD ERROR	DOWN LOAD READING	DOWN LOAD ERROR	PERMISSIBLE ERROR
0	0	0	0	0	0.001
0.5	0.5	0	0.5	0	0.001
1	1	0	1	0	0.001
5	5	0	5	0	0.001
10	10	0	10	0	0.001
15	15	0	15	0	0.001

LOADING POINT	UP LOAD READING	UP LOAD ERROR	PERMISSIBLE ERROR
eÜ^...Þ	4.95	0	0.001
ðÜ]áÜ]•Þ]5ç	4.95	0	0.001
ÄÐ]áé]•Þ]5ç	4.95	0	0.001
ðÜ]áÜ]•è]U×]	4.95	0	0.001
ÄÐ]áé]•è]U×]	4.95	0	0.001

LOAD MASS	MASS READING	READING ERROR	PERMISSIBLE ERROR
7.5	7.5	0	0.001

PASS :]Eç]•Ó] Ô

.R O.I.M.L - 111]•b]UĐ]Áà]•Ñ]õç^ø
]"%ç] Ô]5Ó]
.^¶Ô]•à^•Ñ]