





Volume Calculator - How to use

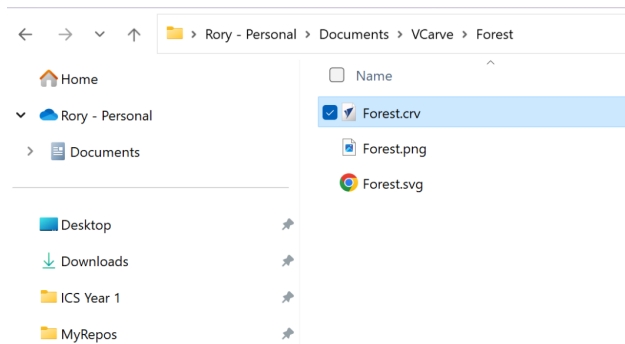


Firstly, open the CRV file you want to use from your folders, then select the relevant vectors. This can be done by clicking once on the pocket toolpath, or by selecting all the vectors manually.

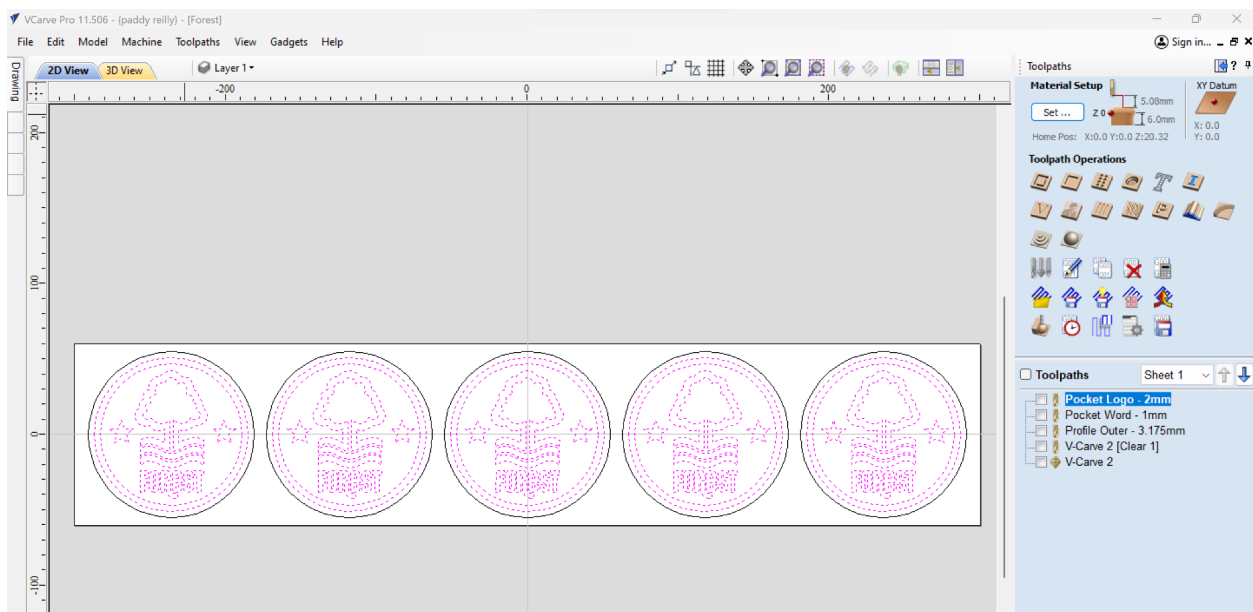

Once these vectors are selected, click File > Export > SVG and select a folder to save the SVG file in. You can also name the SVG file whatever you want.

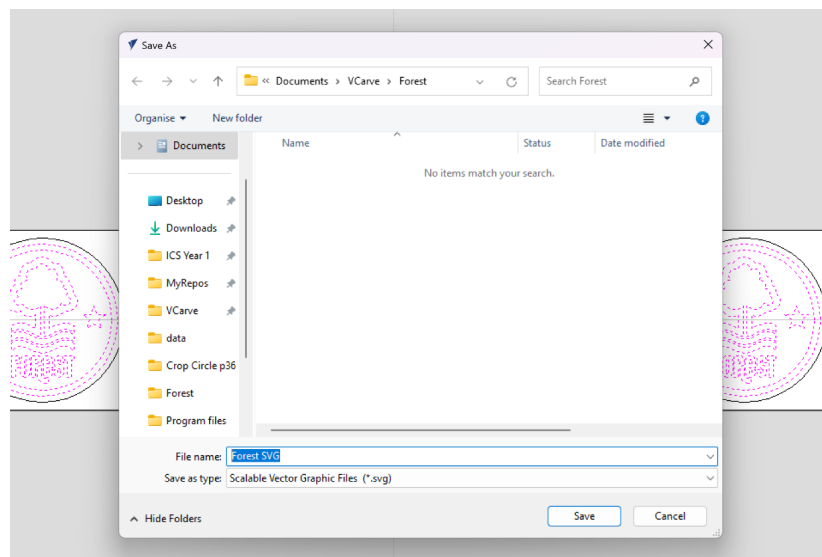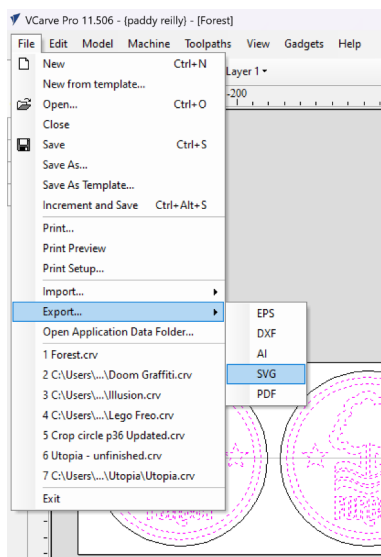

You can now open up my program, by selecting it from the taskbar at the bottom of your screen. When the program is open, click the “Browse for SVG” button and locate the SVG file you have saved. If you have trouble using this file explorer, try using the bar at the top, or the small green arrow icon next to this.

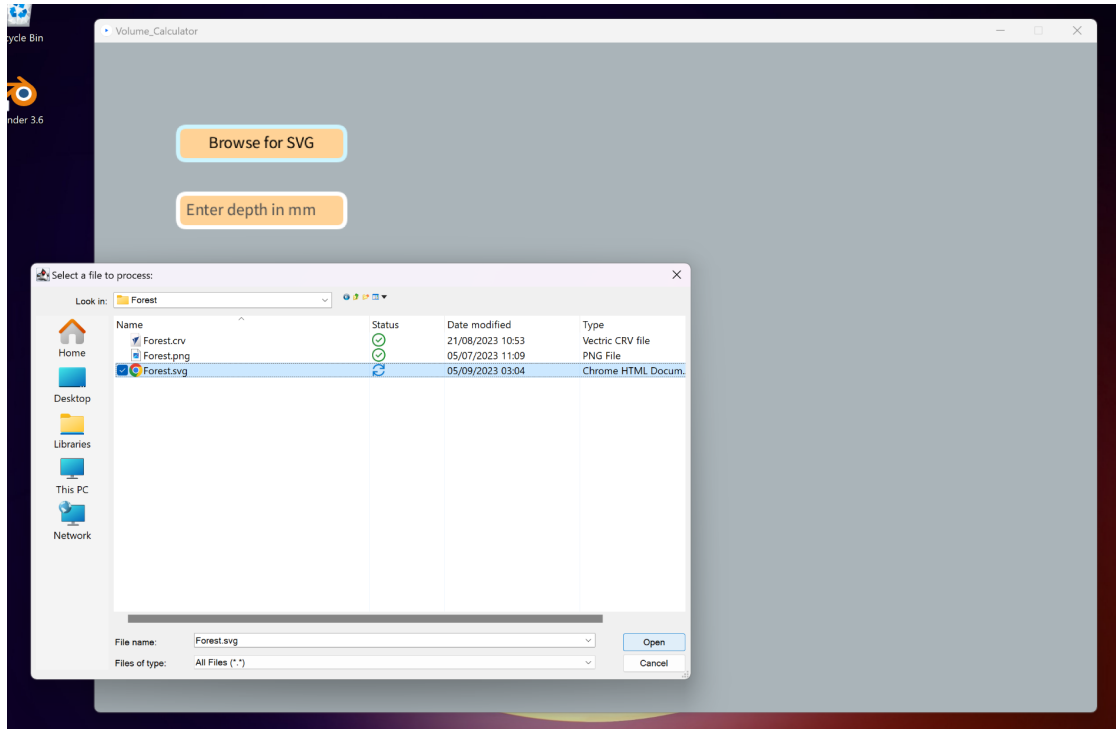

When you have selected the SVG file, simply type in a depth in mm into the other box and the results will be displayed on screen.

