

Locate output caps near connector pin


rusefi.com/s/proteus
github.com/mck1117/proteus
rusEFI

Sheet: /lowside_quad/
 File: lowside_quad.kicad_sch

Title: rusEFI Proteus

Size: A4 Date: 2022-04-09
 KiCad E.D.A. kicad-cli 7.0.7-7.0.7-ubuntu22.04.1

Rev: v0.7
 Id: 3/7

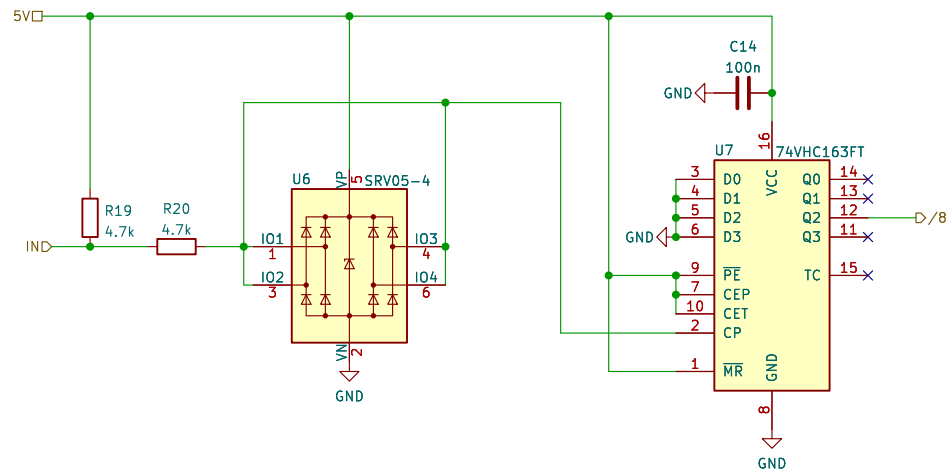

Sheet: /FREQ_DIVIDER/
File: FREQ_DIVIDER.kicad_sch

Title:


Size: A4


Date:

KiCad E.D.A. kicad-cli 7.0.7-7.0.7-ubuntu22.04.1

Rev:

Id: 4/7

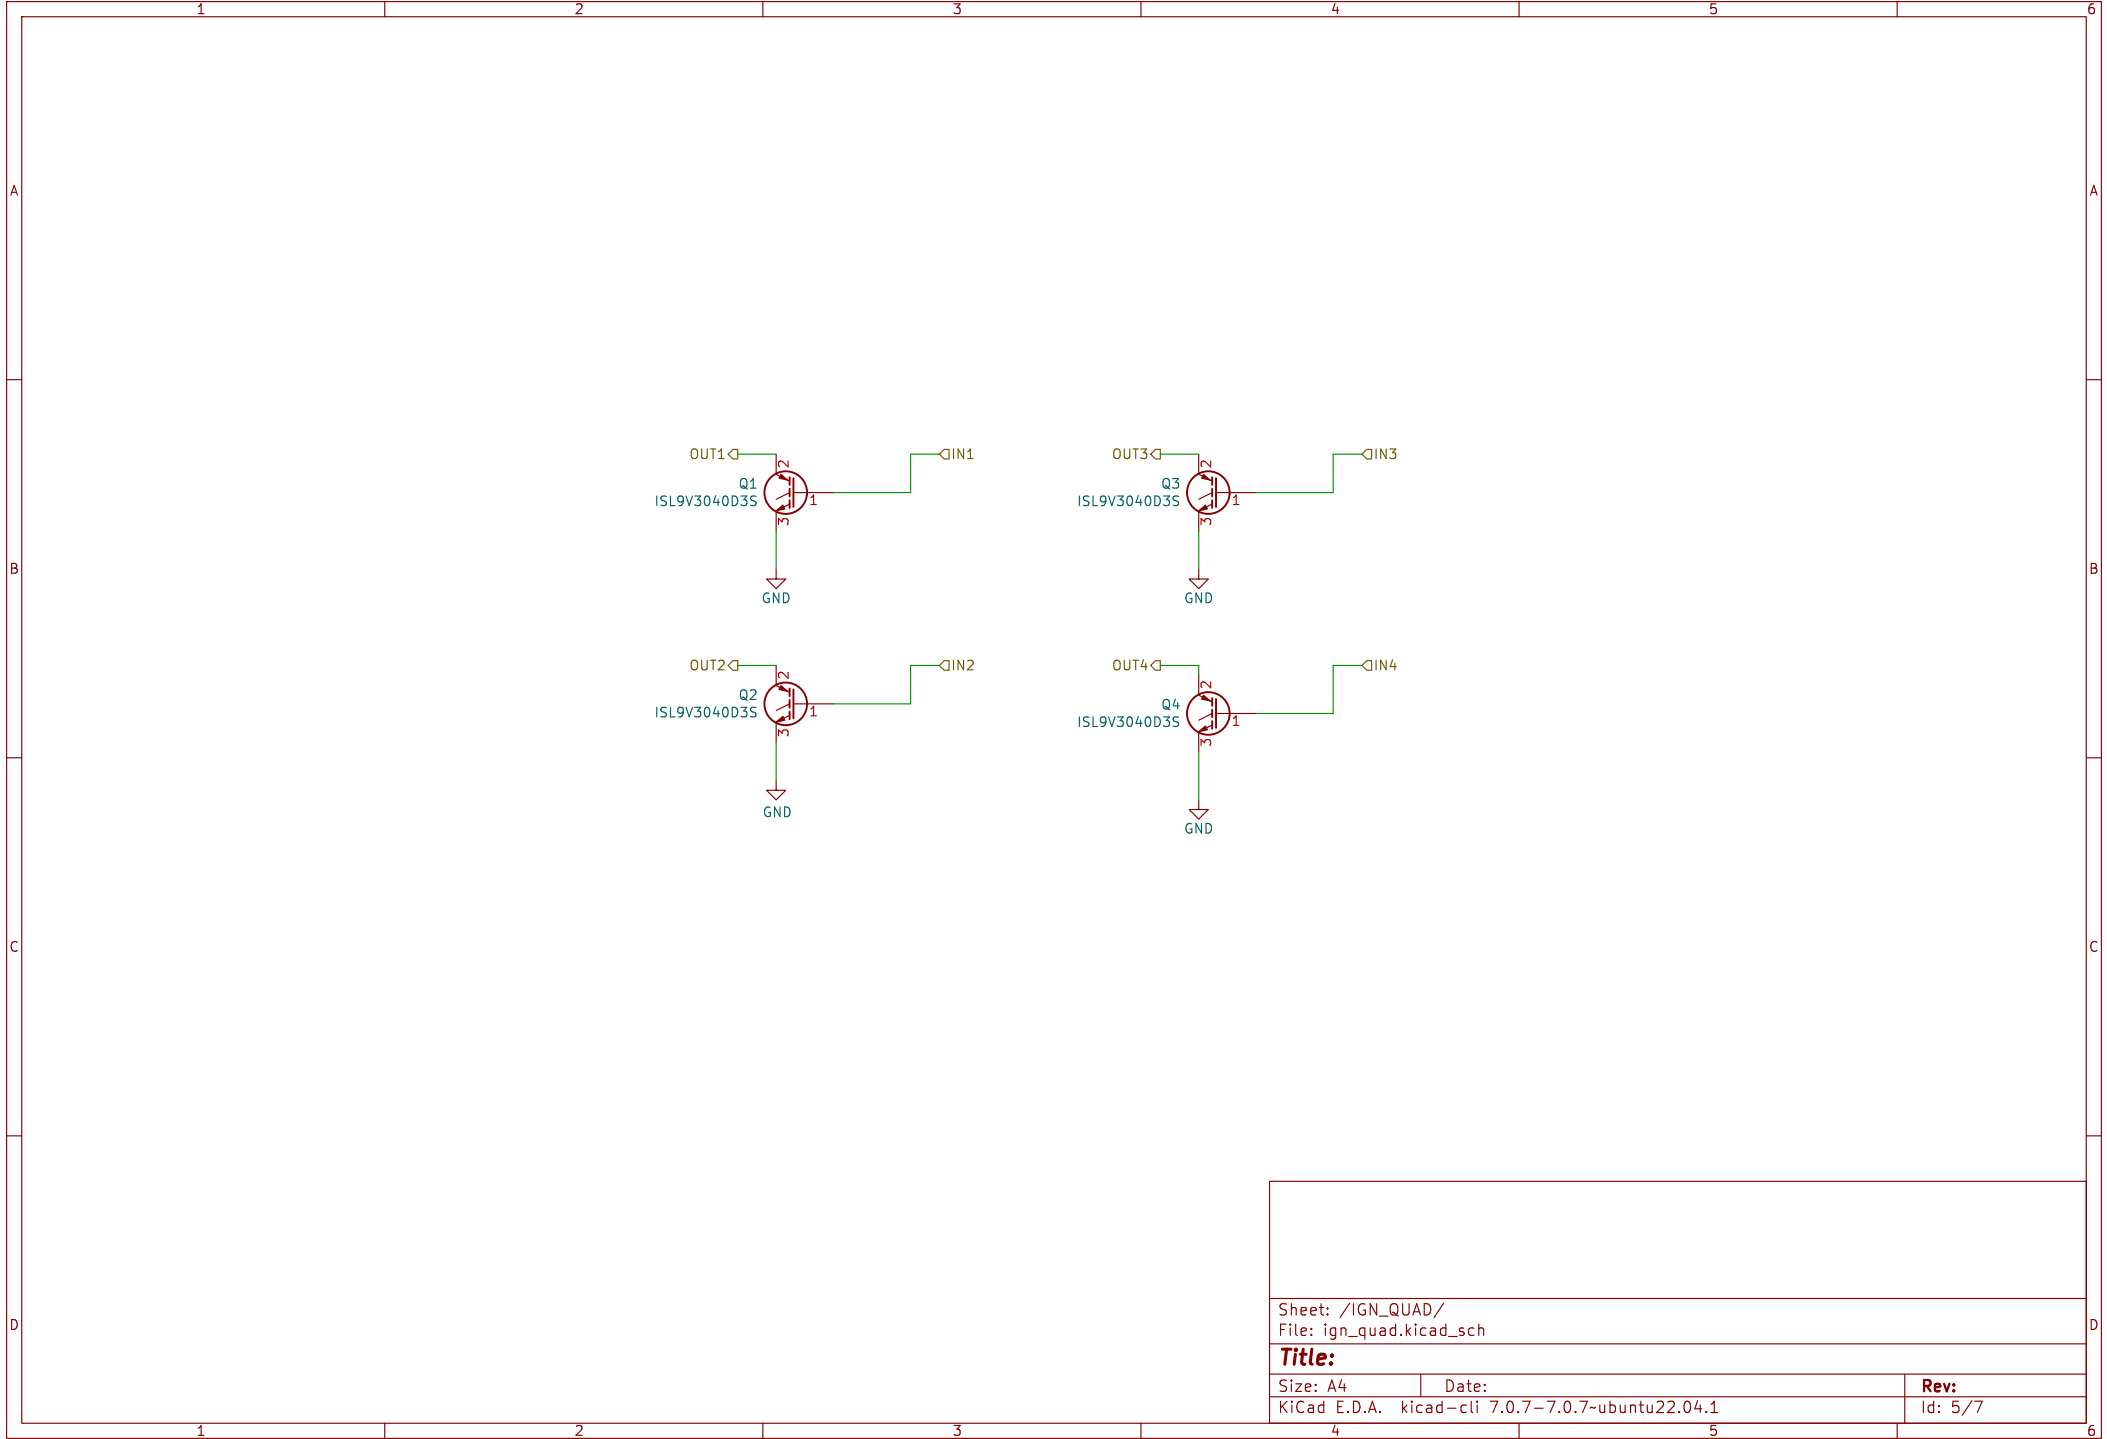

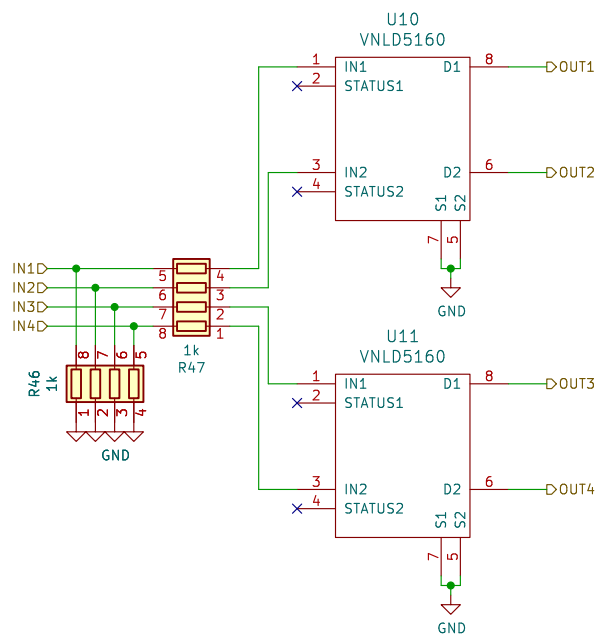

Locate output caps near connector pin

rusefi.com/s/proteus
github.com/mck1117/proteus
rusEFI

Sheet: /lowside_quad1/
 File: lowside_quad.kicad_sch

Title: rusEFI Proteus

Size: A4 Date: 2022-04-09
 KiCad E.D.A. kicad-cli 7.0.7-7.0.7-ubuntu22.04.1

Rev: v0.7
 Id: 6/7

