

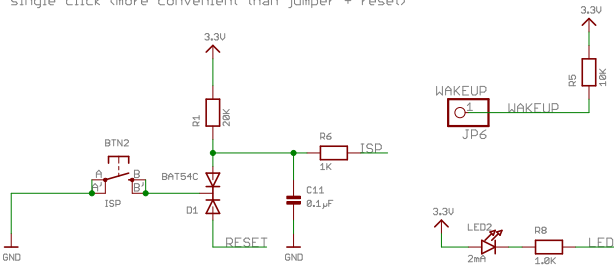
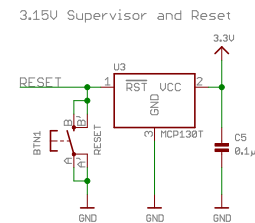
 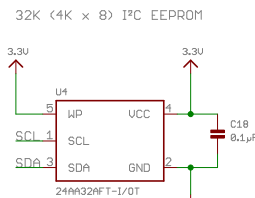
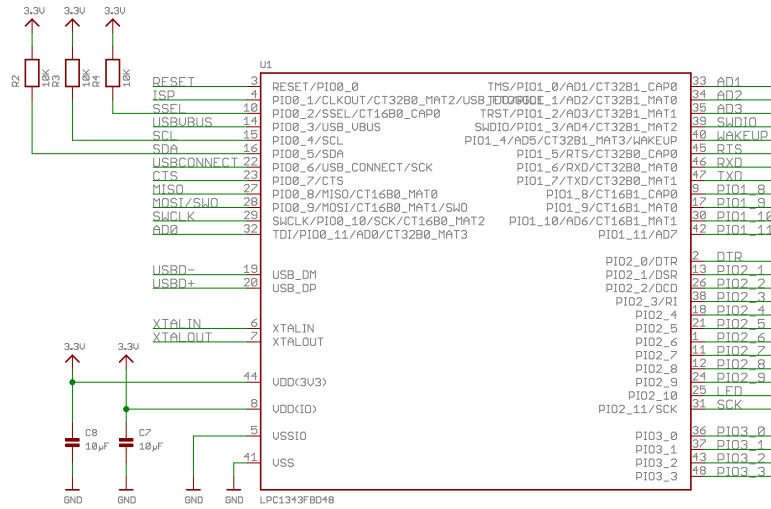





BAT54C puts device into ISP/USB Bootloader with a single click (more convenient than jumper + reset)

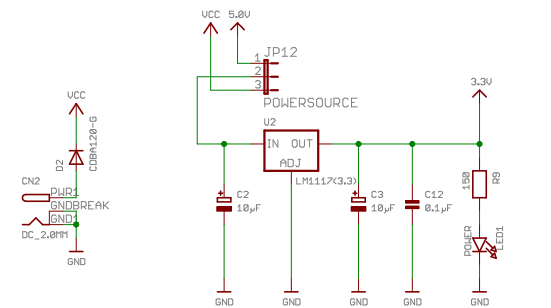

R7 + R14 will cause bootloader to boot into USB/MSC mode if USB is connected (0.3 HIGH), otherwise it will use UART/ISP (0.3 LOW)





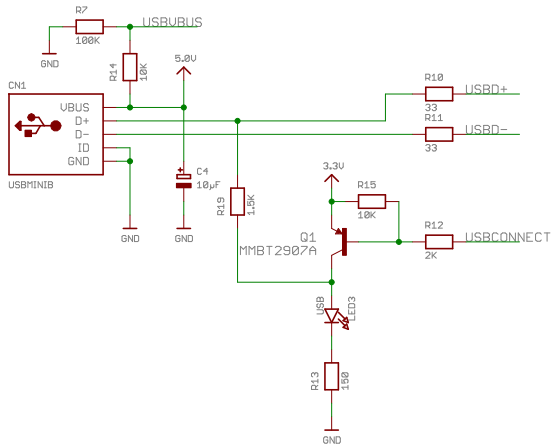


Dual SWD connectors since the 1.27mm connectors don't exist on most debuggers yet. The extra 2.54mm headers should make it easier to connect to in a pinch

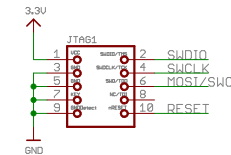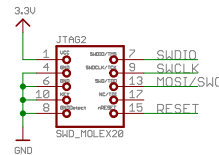

EXPANSION BOARD PINS

5.0V only available when USB is present

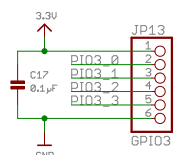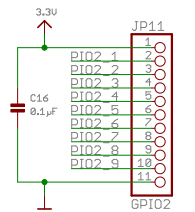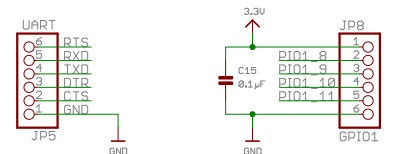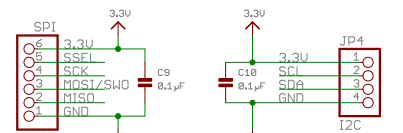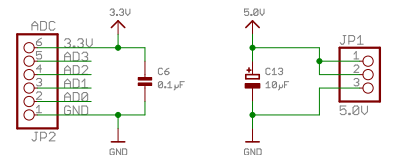

LPC1343_BaseBoard_V1.6

30/05/2010 20:11:21

Sheet: 1/1

www.microbuilder.eu