



GPS 車輛追蹤器 (GPS+GSM+GPRS)

GT02 安裝使用指南 (版本 1.0)



請您在使用之前認真閱讀安裝使用指南，以便得到正確的安裝方式及快速網上激活使用。
產品外觀、顏色如有改動，請以實物為準！

一、 產品配件圖:



二、 技術參數:

型號	電壓範圍	狀態指示	定位時間	定位精度	工作環境
GT02	12-24vDC	GPS-藍色 GSM-綠色 Power-紅色	1-2min	10m (2D RMS)	-25℃ to +80℃ (工作溫度) 45% to 80%RH (工作濕度)

三、 GT02 界面介紹



四、 SIM 卡的安裝

- 安裝方法(如下圖所示)



五、 安裝位置及供電方式

- 隱藏式安裝(建議如下圖)，注意必須將產品正面朝上而且上方不允許有金屬物遮擋，盡量讓 GT02 的可見天空範圍大一些。電源則採用汽車電瓶供電方式。



- 開放式安裝(如下圖所示),電源則採用點煙器供電方式。



六、 電源配線

GT02 電源配線有兩種：汽車電瓶電源線 / 點煙器頭電源線；

- 標配為汽車電瓶電源線，紅線端串有熔絲盒(3A FUSE)起短路過流保護。



- 選配為點煙器頭電源線，點煙器頭內有 3A FUSE 起短路過流保護，若需要採用點煙器供電方式時請與你的經銷商聯絡。



七、 開關機工作

- GT02 上電執行自動開機。正常工作時：紅色電源指示燈閃亮，藍色 GPS 指示燈常亮；綠色 GSM 指示燈常亮。若 GPS 或 GSM 指示燈閃亮表示信號搜索中，不亮表示接收信號異常。
- GT02 斷電後自動關機。

八、 側按鍵功能

- 在正常工作指示狀態下，若按下側按鍵，此時三個指示燈會同時熄滅進入隱蔽工作狀態，當再次按下側按鍵時三個指示燈恢復正常指示。一旦按過側按鍵，GT02 會有記憶功能，下次重新上電啟動時，待穩定工作後會自動進入隱蔽工作狀態。

九、 故障排除

- 當 GPS 信號接收異常時，請開車到較開闊的地方來定位，一般首次定位時間需要 1-2 分鐘。若長時間不定位，請檢查 GT02 的安裝位置是否符合要求，正常是安裝在沒有金屬遮擋的地方。
- 當 GSM 信號接收異常時，請檢查 GT02 的 SIM 卡是否正確安裝；或者所處地可能沒有覆蓋 GSM 信號（比如在地下室），請開車到有信號覆蓋的地方使用。
- 上電瞬間紅色電源指示燈不亮，請檢查電源線上的保險絲是否熔斷，若熔斷請聯絡你的經銷商更換同規格型號的 FUSE，並檢查排除 GT02 內部故障後方可再次上電工作。

十、 網上激活

如果您在平臺中已經有登陸帳號資訊，就可以進行下面的網上啟動程式。否則，請聯繫您的經銷商，為您開通網上登陸帳號，提供登陸名及密碼。


- 平臺登陸網站：<http://www.gpsbox.net>
操作流程：VIP 登錄平臺-激活目標>OK (參見下圖)

- 點擊 VIP 登錄,進入用戶登陸平臺,填入獲取的帳號及密碼後點提交進入平臺。



The image shows a user login window titled "用户登陆" (User Login). It features a "关闭" (Close) button in the top right corner. The login form includes fields for "账号:" (Account) with the value "谷米科技" (Gumi Technology) and "密码:" (Password) with masked characters. A "提交" (Submit) button is located below the password field. Below the submit button is a red link that says "直接进入体验中心" (Directly enter the experience center). The entire form is enclosed in a grey border with the text "填入登錄帳號及密碼" (Enter login account and password) at the bottom.

- 進入全球定位服務平臺後，從左下邊選擇激活目標鏈結。

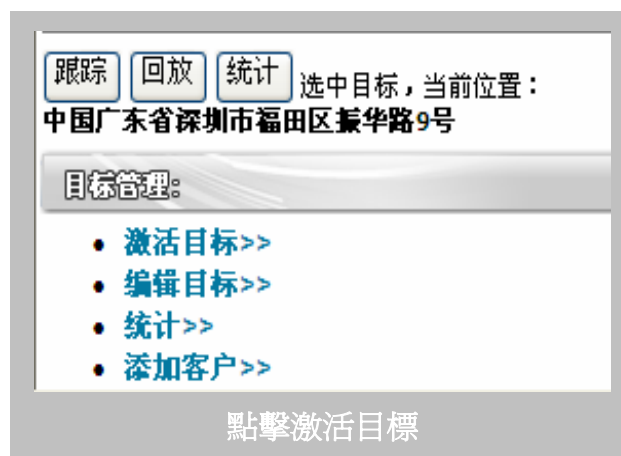

The image shows the main interface of the Global Positioning Service Platform. At the top, there are three buttons: "跟踪" (Track), "回放" (Playback), and "统计" (Statistics). Below these buttons, it says "选中目标, 当前位置:" (Select target, current position:) followed by the address "中国广东省深圳市福田区振华路9号" (No. 9 Zhenhua Road, Futian District, Shenzhen City, Guangdong Province, China). Below this is a section titled "目标管理:" (Target Management) with four links: "激活目标>>" (Activate target>>), "编辑目标>>" (Edit target>>), "统计>>" (Statistics>>), and "添加客户>>" (Add customer>>). The entire interface is enclosed in a grey border with the text "點擊激活目標" (Click to activate target) at the bottom.

- 點擊激活目標後進入激活新目標設置視窗。



The image shows the "激活新目标" (Activate New Target) settings window. It contains several input fields: "公司:" (Company) with the value "1000001", "tracker编号(15位IMEI号):" (Tracker ID (15-digit IMEI number)) with the value "353419030073888", and "名称:" (Name) with the value "粤B16888". There is also a dropdown menu for "新中新" (Xin Zhong Xin). At the bottom, there are two buttons: "激活" (Activate) and "关闭窗口" (Close window). The entire window is enclosed in a grey border with the text "填入產品 IMEI 號及名稱" (Enter product IMEI number and name) at the bottom.

- ✓ Tracker 編號：輸入隨機帶的 IMEI 號（15 位），在機身背面。
- ✓ 名稱：輸入不多於 12 個字元的 Tracker 名稱。
- ✓ 點激活即 OK。

- 查看目標

大約 2 分鐘,主介面會提示有新目標加入,重新登陸後會看到新加入的目標。

- 設置完畢

GPS 車輛追蹤器保修卡

特別聲明：

1. 若本產品日後有任何技術變更，恕不另行通知。
2. 產品外觀、顏色如有改動，以實物為準。
3. 保修卡只適用於下述所列 IMEI 號機子的售後服務。
4. 請妥善保管此保修卡，保修時請出示此卡及原購買單據。
5. 具體保修範圍請參見下表說明。

此卡為保修的基本憑證，請用戶認真填寫並妥善保存。

用戶姓名		聯繫電話	
通訊位址			
產品型號		IMEI 號	
購機日期		發票號碼	
銷售單位名稱			
銷售單位位址			
銷售單位電話			
<p>1. 自購買之日起，非人為損壞故障主機保修一年。</p> <p>2. 屬下列情況之一的，不在保修範圍，但可付費維修：</p> <p>（一）超過保修期限；</p> <p>（二）未經我司授權，擅自拆卸或維修造成損壞；</p> <p>（三）浸水，摔壞或印刷電路板燒毀；</p> <p>（四）因安裝、使用、維護、保管不當造成損壞的；</p> <p>（五）使用過程中引起的產品外殼、顯示鏡片、內置天線等破損；</p> <p>（六）產品內部 IMEI 號被撕去或模糊不清；</p> <p>（七）保修憑證與產品型號不符或保修憑證被塗改；</p> <p>（八）因不可抗力造成的損壞。</p>			

維 修 記 錄

維修記錄一			
維修單位		送修日期	
故障描述			
維修情況			
產品 IMEI 號		維修人員	

維修記錄二			
維修單位		送修日期	
故障描述			
維修情況			
產品 IMEI 號		維修人員	