



Scan the QR code to pair  
your fan with the WiZ app

signify


Our global brands

PHILIPS

WiZ

ECOLINK

ECOLINK

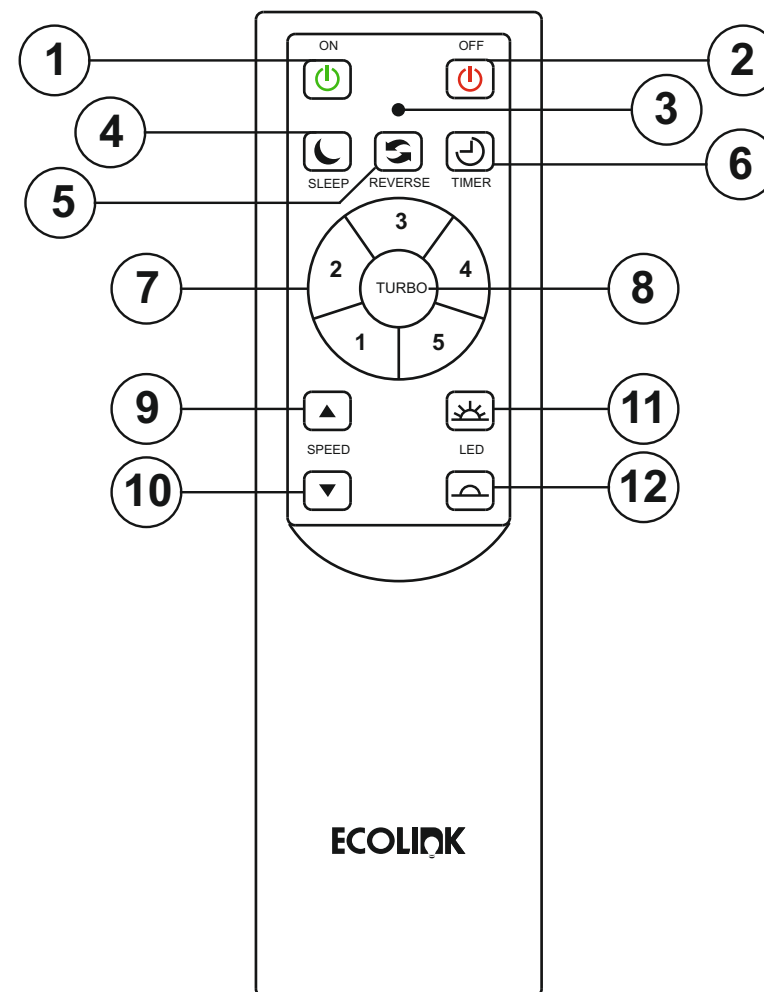

# Air Jewel Smart Fan

## REMOTE MANUAL

# Name and Function of the Remote

## ① Fan Power ON and Remote Pairing

While starting the fan for the first time, keep this button pressed and turn ON the main switch for successful pairing. Now the remote is ready to work with the fan. Pairing must be done immediately after the fan has been turned ON using the start switch on the switchboard.  
Press this button to turn ON the fan after pairing.  
(Same remote can be paired to multiple fans if installed in same room and can

## ② Fan Power OFF

## ③ Indicator

Light will be indicated with each press. The glowing light indicates that the remote and batteries are in good condition.  
The indicator light should glow when any button is pressed.

## ④ Sleep mode

When selecting the sleep mode, the fan will run at its running speed for two hours. After the first two hours, the speed will reduce by one step. Then, after another two hours, the speed will be reduced by one more step and this gradual reduction will continue.  
(Kindly note that the fan speed will not be reduced below speed 2)

## ⑤ Reverse

Reverse key, an additional specific mode, is intended to be used in winter for destratification. On switching the fan to reverse rotation mode, the fan rotates at an optimum speed in the clockwise direction, mixing the hot air above and cold air

## ⑥ Timer

When you press the Timer button, a timer will start with the following options:  
One-time press: 2 hours (2 lights will blink)  
Two-time press: 4 hours (4 lights will blink)  
Three-time press: 6 hours (all 6 lights will blink)

## ⑦ Fan Speed

The fan's speed can be regulated by the remote. Speed can be set as required. One Light will glow on pressing speed 1, Two will glow on pressing speed 2 and so on. (Lights will remain on until user turns it OFF by using the LED button)

## ⑧ Turbo Speed

Press this button to activate maximum fan speed. All lights including the green light will be turned ON. (Green light will remain ON until user turns it OFF by using the

## ⑨ Speed (UP)

Press this button to speed UP the fan in a step-wise manner.

## ⑩ Speed (DOWN)

Press this button to speed Down the fan in a step-wise manner.

## ⑪ LED (ON)

When you press this button, a light will turn ON with the following options:  
One-time Press: Fan's current running speed will be visible  
Two- time Press: All the speed lights will turn ON

## ⑫ LED (OFF)

## Notes

If the remote control is lost and the fan is not rotating when switch is ON – in this condition you can operate the fan in manual mode as per the below instruction:

-Turn ON/OFF the wall switch alternately at an interval of 1 sec in total 5 cycles  
After this process, turn ON the wall switch, and the ceiling fan will start at 3rd Speed.

In the event of a power failure and subsequent restoration while the fan is in motion, there may be a syncing or pairing of the sound between the winding and magnet. If such noise occurs, it is advised to switch OFF the fan and wait for it to come to a complete stop. Once it has stopped, switch the fan back ON, and it should resume normal operation.

However, if the fan does not switch to normal mode after restarting, switch it OFF (it will automatically turn OFF after 5 seconds) and wait till variations in supply voltage stabilizes. After some time when fan will be started again, it will start working normally. This type of situation only occurs when there is a sudden switch in the input supply.