

USB-C

Col 0	PD3	D1	RAW		
Col 1	PD2	D0	GND	Reset GND	
OLED GND		GND	Reset	Reset	
Encoder GND		GND	VCC	OLED	
OLED SDA	PD1	D2	A3	PF4	Row 0 + Encoder 0
OLED SCL	PD0	D3	A2	PF5	Row 1 + Encoder 1
Col 2	PD4	D4/A6	A1	PF6	Row 2 + Encoder 2
(Encoder) Col 3	PC6	D5	A0	PF7	Row 3 + Encoder 3
	PD7	D6/A7	D15	PB1	Encoder B 0
	PE6	D7	D14	PB3	Encoder B 1
Encoder A	PB4	D8/A8	D16	PB2	Encoder B 2
	PB5	D9/A9	D10/A10	PB6	Encoder B 3

