

Voice control operation process and instructions

Attention: It is necessary to wake up the "Hello Radio" voice before responding to subsequent control commands. The timeout after waking up is 8 seconds. If there is no valid voice within 8 seconds, it will enter sleep mode and need to be awakened again

Voice wake-up language "Hello Radio"

System Menu

Pop up system settings page

Model Menu

Pop up model settings page

Channel Monitor

Pop up channel monitor page

Channel Message

Telemetry

Pop up telemetry information page

Sensor status

Pop up sensor information page

Sensor message

Cancel

Return

The exit command for the above page is similar to pressing the RTN key

Quit

Open Gear

Open Gear

Landing gear extension function

Open Gear

Close Gear

Close Gear

Landing gear retraction function

Close Gear

Open flap

Open flap

Flap release function, voice release of flaps one segment at a time, divided into two segments

Open Flap

Close flap

Close flap

Flap retraction function

Deploy Flap

Aileron adjustment

Left

Left

Adjust the aileron to the left by one grid, and adjust the aircraft's aileron to the left

Right

Right

Adjust the aileron to the right by one grid, and adjust the aircraft's aileron to the right

Pitch adjustment

pitch up

pitch up

pitch up

Adjust the elevator up by one grid, and the aircraft will head up

pitch down

pitch down

pitch down

Adjust the elevator down by one grid, and the aircraft will head down

Rotating adjustment

Left

Left

Adjust the rudder to the left by one grid, and the aircraft will yaw left

Right

Right

Adjust the rudder to the right by one grid, and the aircraft will yaw right

Photo

Start recording

End recording

go home

GPS Return

hi take off

hi land

Set corresponding channel output control instructions, please wait for software updates and improvements