

## HOW TO CHANGE ROVER TIRE:

**1. Locate the flat tire**

rover\_normal.blend

**2. Apply parking brake (inside rover)**

**3. Apply wheel wedge**

rover\_normal.blend

wheel\_wedge.blend

**4. Identify bolt that controls the tire**

rover\_normal.blend

wheel\_wedge.blend

cap.blend

**5. Use wrench to loosen bolt**

rover\_normal.blend

wheel\_wedge.blend

cap.blend

wrench.blend

**6. Place jack under wheel**

jack\_screw.blend

rover\_normal.blend

wheel\_wedge.blend

**7. Raise the vehicle with the jack**

jack\_screw.blend

rover\_normal.blend

wheel\_wedge.blend

**8. Remove bolt all the way**

rover\_cap\_removed.blend

jack\_screw.blend

cap.blend

**9. Remove the flat tire**

rover\_no\_tire.blend

tire.blend

jack\_screw.blend

**10. Mount spare on the bolt**

tire.blend  
rover\_no\_tire.blend

**11. Tighten the lug nuts with wrench**

rover\_no\_tire.blend  
tire.blend  
wrench.blend  
Jack\_screw.blend  
cap.blend

**12. Lower the vehicle most of the way**

rover\_no\_tire.blend  
tire.blend  
jack\_screw.blend  
cap.blend

**13. Tighten the bolt completely**

rover\_normal.blend  
tire.blend  
wrench.blend  
jack\_screw.blend  
cap.blend

**14. Lower the vehicle completely**

rover\_normal.blend  
jack\_screw.blend

(<https://www.bridgestonetire.com/tread-and-trend/drivers-ed/how-to-change-a-flat-tire>)