

FDL-3: Nose/Tail Disassembly

Required Tools



#2 Phillips Screwdriver

Instructions

Prep

Locate the following:

1. Nose/Tail Compatible FDL-3 Blaster



Step 1

Remove Upper Cowl

1. Remove (2) 6-32 x 3/8" screws from the upper cowl  
2. Carefully remove the upper cowl





Step 2

Remove Mid Cap (Battery Cover)

1. Remove (2) 6-32 thumb screws from mid cap (battery cover)  
2. Carefully remove mid cap  
3. If present, carefully remove battery





Step 3

Unplug Cables

1. Unplug ESC (white/red/black), 12V (red/black) and power switch (black/black) cables from rear of nose section.





Step 4

Remove Mid Blaster Screws

1. Remove (4) 6-32 x 3/8" screws from front of side panels (2 on each side of blaster)  
2. Remove (2) 6-32 x 1/2" screws from front of underbelly (2 on each side of blaster)





Step 5

Separate Nose and Tail

1. Carefully separate nose and tail of blaster  
2. Uh oh, you broke it, you have successfully separated your FDL-3 blaster into a nose and a tail!









This work is licensed under a [Creative Commons Attribution-NonCommercial-ShareAlike 4.0 International License](#)