



## RFID Scanner

### INSTRUCTIONS

---

 
#### WHEN STARTING – RED LED LIGHT



ERROR – NOT CONNECTED Please check installation.

---

#### WHEN STARTING – FLASHING LED LIGHT



INITIALIZATION MODE: Please scan to create MASTER CARD



1<sup>st</sup> TAP BECOMES  
MASTER ADD CARD



2<sup>nd</sup> TAP BECOMES  
MASTER DELETE CARD



LED GREEN  
(NORMAL MODE)

---

#### WHEN STARTING – GREEN LED LIGHT



NORMAL MODE: PLEASE SCAN TO ENTER

---

### TO ADD NEW CARD



TAP  
MASTER ADD CARD



FLASHING LED  
(TAP TO ADD)



TAP  
NEW ID CARD



LED GREEN  
(ADDED)

### TO REMOVE CARD



TAP  
MASTER DELETE  
CARD



FLASHING LED  
(TAP TO REMOVE)



TAP  
EXISTING ID CARD



LED GREEN  
(REMOVED)

### TO REMOVE ALL CARDS (RESET)



TAP  
MASTER DELETE  
CARD



TAP  
MASTER DELETE  
CARD (AGAIN)



FLASHING LED  
(WAIT TO STOP  
FLASHING)



LED GREEN  
(RESET)