OMA Test Cases -Korea TestFest, 09 - 12 July 2018

Institute for Information Industries ALL Results

Test Session	Date	æ	Number:	

Answer Options	Response Count	
09-Jul	2	
10-Jul	2	
11-Jul	2	
12-Jul	1	
State Session Number (Reference below if needed):		

Please select file load requit for each Test Cane Description below: Please Fail Inconcision Nagriculate Out of Court	State Session Number (Reference below if needed):		7				
Contesting Inflated Bootstrap Contest Co	Please select the test result for each Test Case Description below:						
LightweightMAM-1 - Grant-1 Celent Installand Bootstrap	Answer Options	Pass	Fail	Inconclusive			
LightweightRZM-1.0 inc. 10 Color Telephology Color Color Telephology Color Color Telephology Color Color Telephology Color	Bootstrap Interface						
- Client initiation di Bootstrap Piut (1978) - Lighnesight/2014 D. Initiation de Control (1978) - Lighnesight/2014 D. Initiati (1978) - Lighnesight/2014 D. Initiation		4	1	0	1	1	7
-Clear full inside 8 Docustors (First (Cert)	- Client Initiated Bootstrap Full (PSK)	3	1	0	1	2	7
- Sample Bootstrap from Strandard - Registration Interface - Lightweight A224-10 - Int-101 - Intial Begistration - 7	- Client Initiated Bootstrap Full (Cert)	0	0	0	6	1	7
LightweightM2M-1 C-n+101 - Initial Registration Update		1	0	0	5	1	7
LightweightM2M-1.0-in-102 - Registration Lipdate	Registration Interface						
LightweightM2M-1.0-in-103 - Dergistration	LightweightM2M-1.0-int-101 - Initial Registration	7	0	0	0	0	7
LightweightM2M-1.0-in-104 - Registration Update Triquer	LightweightM2M-1.0-int-102 - Registration Update	7	0	0	0	0	7
Device management & Service Enablement Interface LightweightM2M-1 0-int-201 - Querying basic information in Plain Text format 7	LightweightM2M-1.0-int-103 - Deregistration	6	0	0	0	1	7
LightweightMZM-1.0-int-201 - Querying basic information in PILV format	LightweightM2M-1.0-int-104 - Registration Update Trigger	6	0	0	0	1	7
LightweightM2M-1.0-int-203 - Querying basic information in TLV format	Device management & Service Enablement Interface						
LightweightM2M-1.0-int-201- Querying basic information in JSON format	LightweightM2M-1.0-int-201 - Querying basic information in Plain Text format	7	0	0	0	0	7
LightweightM2M-1.0-int-205 - Setting basic information in Plain Text format	LightweightM2M-1.0-int-203 - Querying basic information in TLV format	7	0	0	0	0	7
LightweightM2M-1.0-int-215-Setting basic information in TLV format	LightweightM2M-1.0-int-204 - Querying basic information in JSON format	5	0	0	2	0	7
LightweightM2M-1.0-int-220 - Setting basic information in JSON format	LightweightM2M-1.0-int-205 - Setting basic information in Plain Text format	7	0	0	0	0	7
LightweightM2M-1.0-int-241 - Executable Resource: Rebooting the device			0		0		
LightweightMZM-1.0-int-260 - Discover Command 6							
Internation Reporting InterFACE LightweightM2M-1.0-int-301 - Observation and Notification of parameter values 6							
LightweightMZM-1.0-int-301 - Observation and Notification of parameter values	LightweightM2M-1.0-int-260 - Discover Command	ь	U	0	1	U	1
LightweightMZM-1.0-int-302 - Cancel Observations using Reset Operation	INFORMATION REPORTING INTERFACE					l	
LightweightM2M-1.0-int-803 - Cancel Observations using Observe with Cancel parameter							
SECURITY LightweightM2M-1.0-int-401 - UDP Channel Security - Pre-shared Key Mode							
LightweightM2M-1.0-int-401 - UDP Channel Security - Pre-shared Key Mode		0	0	0	7	0	7
LightweightM2M-1.0-int-402 - UDP Channel Security - Certified Mode 0 0 0 5 2 7 LightweightM2M-1.0-int-403 - UDP Channel Security - Certified Mode (Server Identify Verification Failure) 0 0 0 5 2 7 LightweightM2M-1.0-int-651 - Check Access to the Resources 6 0 0 1 0 7 LightweightM2M-1.0-int-652 - Querying the firmware version from the client 7 0 0 0 0 7 LightweightM2M-1.0-int-680 - Create Object Instance 7 0 0 0 0 7 LightweightM2M-1.0-int-685 - Delete Object Instance 7 0 0 0 0 7 LightweightM2M-1.0-int-785 - Delete Object Instance 5 0 0 2 0 7 LightweightM2M-1.0-int-701 - Querying the readable resources of object 5 0 0 2 0 7 FIRMWARE UPDATE OBJECT (ID 5) 5 0 0 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resources 7 0		4	0		1	2	7
LightweightM2M-1.0-int-651 - Check Access to the Resources 6 0 0 1 0 7 LightweightM2M-1.0-int-652 - Querying the firmware version from the client 7 0 0 0 0 7 LightweightM2M-1.0-int-680 - Create Object Instance 7 0 0 0 0 7 LightweightM2M-1.0-int-680 - Delete Object Instance 7 0 0 0 7 LightweightM2M-1.0-int-680 - Delete Object Instance 7 0 0 0 7 LightweightM2M-1.0-int-680 - Delete Object Instance 7 0 0 0 7 LightweightM2M-1.0-int-680 - Delete Object Instance 7 0 0 0 7 LightweightM2M-1.0-int-701 - Querying the readable resources of object 7 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resources 7 0 0 0 7 LightweightM2M-1.0-int-751 - Querying the readable resources 7 0 0 7 LightweightM2M-1.0-int-751 - Querying the readable resources 7 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 2 3 0 7							
LWM2M SERVER (ID 3) LightweightM2M-1.0-int-651 - Check Access to the Resources 6 0 0 1 0 7 LightweightM2M-1.0-int-652 - Querying the firmware version from the client 7 0 0 0 0 7 LightweightM2M-1.0-int-680 - Create Object Instance 7 0 0 0 0 7 LightweightM2M-1.0-int-685 - Delete Object Instance 7 0 0 0 0 7 LightweightM2M-1.0-int-701 - Querying the readable resources of object 5 0 0 2 0 7 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resources 5 0 0 2 0 7 FIRMWARE UPDATE OBJECT (ID 5) 0 0 0 0 0 7 LightweightM2M-1.0-int-751 - Querying the readable resources 7 0 0 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 2 0 3 0 7	LightweightM2M-1.0-int-403 - UDP Channel Security - Certified Mode (Server Identify Verification						
LightweightM2M-1.0-int-651 - Check Access to the Resources 6 0 0 1 0 7 LightweightM2M-1.0-int-652 - Querying the firmware version from the client 7 0 0 0 0 7 LightweightM2M-1.0-int-680 - Create Object Instance 7 0 0 0 0 0 7 LightweightM2M-1.0-int-685 - Delete Object Instance 7 0 0 0 0 7 LightweightM2M-1.0-int-701 - Querying the readable resources of object 5 0 0 2 0 7 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resources 5 0 0 2 0 7 FIRMWARE UPDATE OBJECT (ID 5) 5 0 0 0 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resource 7 0 0 0 0 7							
LightweightM2M-1.0-int-652 - Querying the firmware version from the client 7 0 0 0 0 7 LightweightM2M-1.0-int-680 - Create Object Instance 7 0 0 0 0 7 LightweightM2M-1.0-int-685 - Delete Object Instance 7 0 0 0 0 7 LightweightM2M-1.0-int-701 - Querying the readable resources of object 5 0 0 2 0 7 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resources 5 0 0 2 0 7 FIRMWARE UPDATE OBJECT (ID 5) 5 0 0 0 0 0 7 LightweightM2M-1.0-int-751 - Querying the readable resources 7 0 0 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 2 0 3 0 7		6	0	0	1	0	7
LightweightM2M-1.0-int-680 - Create Object Instance 7 0 0 0 0 7 LightweightM2M-1.0-int-685 - Delete Object Instance 7 0 0 0 0 7 LightweightM2M-1.0-int-701 - Querying the readable resources of object 5 0 0 2 0 7 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resources 5 0 0 2 0 7 FIRMWARE UPDATE OBJECT (ID 5) 5 0 0 0 0 0 7 LightweightM2M-1.0-int-751 - Querying the readable resources 7 0 0 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 2 0 3 0 7							
LightweightM2M-1.0-int-685 - Delete Object Instance 7 0 0 0 0 7 LWM2M CONNECTIVITY MONITORING (ID 4) LightweightM2M-1.0-int-701 - Querying the readable resources of object 5 0 0 2 0 7 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resources 5 0 0 2 0 7 FIRMWARE UPDATE OBJECT (ID 5) 5 0 0 0 0 0 0 7 LightweightM2M-1.0-int-751 - Querying the readable resources 7 0 0 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 2 0 3 0 7							
LightweightM2M-1.0-int-701 - Querying the readable resources of object 5 0 0 2 0 7 LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resources 5 0 0 2 0 7 FIRMWARE UPDATE OBJECT (ID 5) LightweightM2M-1.0-int-751 - Querying the readable resources 7 0 0 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 2 0 3 0 7							
LightweightM2M-1.0-int-701 - Querying the readable resources of object LightweightM2M-1.0-int-701 - Basic Observation and notification on Connectivity Monitoring Object Resources 5 0 0 2 0 7 FIRMWARE UPDATE OBJECT (ID 5) LightweightM2M-1.0-int-751 - Querying the readable resources 7 0 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 2 0 7							
LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resources 5 0 0 2 0 7 FIRMWARE UPDATE OBJECT (ID 5) LightweightM2M-1.0-int-751 - Querying the readable resources 7 0 0 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 2 0 3 0 7		5	0	0	2	0	7
FIRMWARE UPDATE OBJECT (ID 5) LightweightM2M-1.0-int-751 - Querying the readable resources 7 0 0 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 2 0 3 0 7	LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring						
LightweightM2M-1.0-int-751 - Querying the readable resources 7 0 0 0 0 7 LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 2 0 3 0 7		,			2		
LightweightM2M-1.0-int-755 - Setting the writable Resource Package 2 2 0 3 0 7		7	0	0	0	0	7
	LightweightM2M-1.0-int-755 - Setting the writable Resource Package LightweightM2M-1.0-int-756 - Setting the writable Resource Package URI	6	0	0	0	1	7

LightweightM2M-1.0-int-760 -Basic Observation and notification on Firmware Update Object Resources	6	0	0	1	0	7
LightweightM2M-1.0-int-770 - Successful Firmware update (via COAP)	5	0	0	2	0	7
LightweightM2M-1.0-int-771 - Successful Firmware update (via alternative mechanism)		0	0	0	1	7
LightweightM2M-1.0-int-772 - Error Case 1: firmware installation without downloaded package	6	0	0	0	1	7
LightweightM2M-1.0-int-773 - Error Case 2: shortage of storage memory	5	1	0	0	1	7
LightweightM2M-1.0-int-774 - Error Case 3: out of memory	4	1	0	1	1	7
LightweightM2M-1.0-int-775 - Error Case 4: Connection lost during download (package URI)	5	1	0	0	1	7
LightweightM2M-1.0-int-776 - Error Case 5: Package Integrity check failure	5	1	0	0	1	7
LightweightM2M-1.0-int-777 - Error Case 6: unsupported package type	5	1	0	0	1	7
LightweightM2M-1.0-int-778 - Error Case 7: invalid URI (package URI)	5	1	0	0	1	7
LightweightM2M-1.0-int-779 - Error Case 8: Unsuccessful Firmware Update	5	1	0	0	1	7
LightweightM2M-1.0-int-780 - Error Case 9: Unsupported protocol	4	1	0	1	1	7
LOCATION OBJECT (ID 6)						
LightweightM2M-1.0-int-801 - Querying the readable resources of object	7	0	0	0	0	7
LightweightM2M-1.0-int-810 - Basic Observation and notification on Location Object Instance	7	0	0	0	0	7
CONNECTIVITY STATISTICS (ID 7)						
LightweightM2M-1.0-int-901 - Querying a Data Collection from Connectivity Object Instance	6	0	0	1	0	7
LightweightM2M-1.0-int-905 - Setting the writable resources	6	0	0	1	0	7
LightweightM2M-1.0-int-910 - Basic Observation and notification on Connectivity Monitoring Object Instance	6	0	0	1	0	7
Multi-Servers Context						
LightweightM2M- 1.0 - int-950 - Multi-Servers Registration	4	0	0	2	1	7
LightweightM2M- 1.0 - int-951 - Multi-Servers & Attributes	3	0	0	3	1	7
CELLULAR NETWORK CONNECTIVITY (ID 10)		T	r		T	
LightweightM2M-1.0-int-1200 - Querying the readable resources of Object ID:10	3	0	0	4	0	7
LightweightM2M-1.0-int-1201 - Querying the readable resources of Object ID:10 in version 1.1	1	0	0	6	0	7
LightweightM2M-1.0-int-1202 - Setting the Power Saving Mode Resources of Object ID:10 (version 1.1 only)	1	0	0	6	0	7
LightweightM2M-1.0-int-1203 - Observation and notification on Object ID:0 related to Power Saving Mode Resources (version 1.1 only)	1	0	0	6	0	7
LightweightM2M-1.0-int-1204 - Observation and notification on Object ID: 10 related to timers	2	0	0	5	0	7
APN CONNECTION PROFILE (ID 11)		1	1			
LightweightM2M-CONMGMT - 1.0-int - 1250 - APN Configuration	3	0	0	4	0	7
BEARER SELECTION (ID 13)		I	I			
LightwightM2M-CONMGMT - 1.0-int-1350 - Bearer Selection	3	0	0	4	0	7
PORTFOLIO OBJECT (ID 16)						
LightweightM2M-1.0-int-1630 - Create Portfolio Object Instance	3	0	0	4	0	7
LightweightM2M-1.0-int-1635 - Delete Portfolio Object Instance	3	0	0	4	0	7
BinaryAppDataContainer Object (ID 19)						
LightweightM2M-1.0-int-1900 - Observation and notification on Object ID 19	2	0	0	5	0	7
LightweightM2M-1.0-int-1901 - Setting the writable Resource Data	1	1	0	5	0	7
Event Log Object (ID 20)						
LightweightM2M-1.0-int-2000 - Control the Log Function	2	0	0	5	0	7
LightweightM2M-1.0-int-2001 - Querying the readable resources	2	0	0	5	0	7
Totals	280	14	0	121	26	441

Explanation of Test Cases Results

Test Case Result	Criteria
	Both teams agree that the Test Case "Pass Criteria" has been met.
Fail	Both teams agreed that the Test Case "Pass Criteria" was not met.
	Teams are not in agreement of the Test result or the Test Case has not been run due to functionality not being tested as a result of an error in the implementation or other
ve	functionality that is required to run this Test Case.
Not	Test Case that has not been run due to one of the implementations does not support the functionality required to run this Test Case.
Applicable	The case that has not been an one or the imprementations both not support the remotiving required to ten that has been.
Out of	There was not enough time to test the Test Case.
Time	The state of the s