## iii - 1.0 Client Results

## **Test Session Date & Number:**

AnswerOptions	Response Count
07 - Oct	2
08 - Oct	0
09 - Oct	0
10 - Oct	0
	2

Answer Options	Pass	Fail	Incon-clusive	Not Applicable	Out of Time	Response Count
Bootstrap Interface						
LightweightM2M-1.0-int-0 - Client Initiated Bootstrap	2	0	0	0	0	2
LightweightM2M-1.0-int-1 - Client Initiated Bootstrap Full (PSK)	2	0	0	0	0	2
LightweightM2M-1.0-int-2 - Client Initiated Bootstrap Full (Cert)	0	0	0	2	0	2
LightweightM2M-1.0-int-3 - Simple Bootstrap from Smartcard	0	0	0	2	0	2
Registration Interface						
LightweightM2M-1.0-int-101 - Initial Registration	2	0	0	0	0	2
LightweightM2M-1.0-int-102 - Registration Update	2	0	0	0	0	2
LightweightM2M-1.0-int-103 - Deregistration	2	0	0	0	0	2
LightweightM2M-1.0-int-104 - Registration Update Trigger	2	0	0	0	0	2
Device management & Service Enablement Interface						
LightweightM2M-1.0-int-201 - Querying basic information in Plain Text format	2	0	0	0	0	2
LightweightM2M-1.0-int-203 - Querying basic information in TLV format	2	0	0	0	0	2
LightweightM2M-1.0-int-204 - Querying basic information in JSON format	2	0	0	0	0	2
LightweightM2M-1.0-int-205 - Setting basic information in Plain Text format	2	0	0	0	0	2
LightweightM2M-1.0-int-215 - Setting basic information in TLV format	2	0	0	0	0	2
LightweightM2M-1.0-int-220 - Setting basic information in JSON format	2	0	0	0	0	2
LightweightM2M-1.0-int-241 - Executable Resource: Rebooting the device	2	0	0	0	0	2
LightweightM2M-1.0-int-260 - Discover Command	2	0	0	0	0	2
INFORMATION REPORTING INTERFACE						
LightweightM2M-1.0-int-301 - Observation and Notification of parameter values	2	0	0	0	0	2
LightweightM2M-1.0-int-302 - Cancel Observations using Reset Operation	2	0	0	0	0	2

LightweightM2M-1.0-int-303 - Cancel Observations using Observe with Cancel parameter	0	0	0	2	0	2
SECURITY						
LightweightM2M-1.0-int-401 - UDP Channel Security - Pre-shared Key Mode	2	0	0	0	0	2
LightweightM2M-1.0-int-402 - UDP Channel Security - Certified Mode	0	0	0	2	0	2
LightweightM2M-1.0-int-403 - UDP Channel Security - Certified Mode (Server Identify Verification Failure)	0	0	0	2	0	2
LWM2M SERVER (ID 3)						
LightweightM2M-1.0-int-651 - Check Access to the Resources	2	0	0	0	0	2
LightweightM2M-1.0-int-652 - Querying the firmware version from the client	2	0	0	0	0	2
LightweightM2M-1.0-int-680 - Create Object Instance	2	0	0	0	0	2
LightweightM2M-1.0-int-685 - Delete Object Instance	2	0	0	0	0	2
LWM2M CONNECTIVITY MONITORING (ID 4)						
LightweightM2M-1.0-int-701 - Querying the readable resources of object	2	0	0	0	0	2
LightweightM2M-1.0-int-710 - Basic Observation and notification on Connectivity Monitoring Object Resources	2	0	0	0	0	2
FIRMWARE UPDATE OBJECT (ID 5)	_	<u> </u>	, and the second	Ü	J	
LightweightM2M-1.0-int-751 - Querying the readable resources	2	0	0	0	0	2
LightweightM2M-1.0-int-755 - Setting the writable Resource Package	2	0	0	0	0	2
LightweightM2M-1.0-int-756 - Setting the writable Resource Package URI	2	0	0	0	0	2
LightweightM2M-1.0-int-760 -Basic Observation and notification on Firmware Update Object Resources	2	0	0	0	0	2
LightweightM2M-1.0-int-770 - Successful Firmware update (via COAP)	2	0	0	0	0	2
LightweightM2M-1.0-int-771 - Successful Firmware update (via down)	2	0	0	0	0	2
LightweightM2M-1.0-int-772 - Error Case 1: firmware installation without downloaded package	2	0	0	0	0	2
LightweightM2M-1.0-int-773 - Error Case 1: http://www.uniout.downloaded.package	2	0	0	0	0	2
LightweightM2M-1.0-int-774 - Error Case 3: out of memory	2	0	0	0	0	2
LightweightM2M-1.0-int-775 - Error Case 4: Connection lost during download (package URI)	2	0	0	0	0	2
LightweightM2M-1.0-int-776 - Error Case 5: Package Integrity check failure	2	0	0	0	0	2
LightweightM2M-1.0-int-777 - Error Case 6: unsupported package type	2	0	0	0	0	2
LightweightM2M-1.0-int-777 - Error Case 7: invalid URI (package URI)	2	0	0	0	0	2
LightweightM2M-1.0-int-779 - Error Case 8: Unsuccessful Firmware Update	2	0	0	0	0	2
	2	U	U	0	U	2
LOCATION OBJECT (ID 6)	2	0	0	0	0	2
LightweightM2M-1.0-int-801 - Querying the readable resources of object	2	0	0	0	0	2
LightweightM2M-1.0-int-810 - Basic Observation and notification on Location Object Instance	2	U	U	0	U	2
CONNECTIVITY STATISTICS (ID 7)	2		0			2
LightweightM2M-1.0-int-901 - Querying a Data Collection from Connectivity Object Instance	2	0	0	0	0	2
LightweightM2M-1.0-int-905 - Setting the writable resources  LightweightM2M-1.0-int-910 - Basic Observation and notification on Connectivity Monitoring Object	2	0	0	0	0	2
Instance	2	0	0	0	0	2
Multi-Servers Context						
LightweightM2M- 1.0 - int-950 - Multi-Servers Registration	2	0	0	0	0	2
LightweightM2M- 1.0 - int-951 - Multi-Servers & Attributes	2	0	0	0	0	2
CELLULAR NETWORK CONNECTIVITY (ID 10)						
LightweightM2M-1.0-int-1200 - Querying the readable resources of Object ID:10	0	0	0	2	0	2

	,					
LightweightM2M-1.0-int-1201 - Querying the readable resources of Object ID:10 in version 1.1	0	0	0	2	0	2
LightweightM2M-1.0-int-1202 - Setting the Power Saving Mode Resources of Object ID:10 (version 1.1 only)	0	0	0	2	0	2
LightweightM2M-1.0-int-1203 - Observation and notification on Object ID:0 related to Power Saving Mode Resources (version 1.1 only)	0	0	0	2	0	2
LightweightM2M-1.0-int-1204 - Observation and notification on Object ID: 10 related to timers	0	0	0	2	0	2
APN CONNECTION PROFILE (ID 11)						
LightweightM2M-CONMGMT - 1.0-int - 1250 - APN Configuration	0	0	0	2	0	2
BEARER SELECTION (ID 13)						
LightwightM2M-CONMGMT - 1.0-int-1350 - Bearer Selection	0	0	0	2	0	2
PORTFOLIO OBJECT (ID 16)						
LightweightM2M-1.0-int-1630 - Create Portfolio Object Instance	1	0	0	1	0	2
LightweightM2M-1.0-int-1635 - Delete Portfolio Object Instance	2	0	0	0	0	2
BinaryAppDataContainer Object (ID 19)						
LightweightM2M-1.0-int-1900 - Observation and notification on Object ID 19	1	0	0	1	0	2
LightweightM2M-1.0-int-1901 - Setting the writable Resource Data	1	0	0	1	0	2
Event Log Object (ID 20)						
LightweightM2M-1.0-int-2000 - Control the Log Function	0	0	0	2	0	2
LightweightM2M-1.0-int-2001 - Querying the readable resources	0	0	0	2	0	2
Totals	93	0	0	31	0	124